



LexmarkTM

CX331, CX431, MC3224, MC3326, MC3426, XC2326 MFPs

User's Guide

Contents

Safety information	6
Conventions	6
Product statements	6
Learn about the printer	10
Finding information about the printer	10
Finding the printer serial number	11
Printer configurations	13
Using the control panel	15
Customizing the home screen.....	15
Changing the language of the keyboard on the display	16
Colors of the indicator light.....	16
Using the automatic document feeder and scanner glass	17
Selecting paper	17
Additional printer features and support	25
Set up, install, and configure	27
Selecting a location for the printer.....	27
Printer ports.....	28
Installing optional trays.....	30
Configuring apps and solutions.....	31
Setting up the printer to fax	33
Loading paper and specialty media	42
Installing and updating software, drivers, and firmware	48
Networking	55
Printing the Menu Settings Page.....	59
Secure the printer.....	60
Erasing printer memory	60
Restoring factory default settings.....	60
Statement of Volatility.....	60
Print	61
Printing from a computer	61
Printing from a mobile device	61

Printing from a flash drive	62
Supported flash drives and file types	25
Configuring confidential jobs	65
Printing confidential and other held jobs	65
Printing from a Cloud Connector profile	66
Printing a font sample list	67
Placing separator sheets between copies.....	67
Canceling a print job	67
Adjusting toner darkness.....	67
Copy	68
Making copies	68
Copying photos	68
Copying on letterhead	68
Copying on both sides of the paper	68
Reducing or enlarging copies.....	69
Collating copies.....	69
Copying multiple pages onto a single sheet.....	69
Copying cards	70
Creating a copy shortcut	70
Email	71
Configuring the email SMTP settings.....	71
Scanning to email.....	80
Creating an email shortcut	80
Fax	82
Sending a fax	82
Scheduling a fax.....	82
Creating a fax destination shortcut.....	83
Changing the fax resolution	83
Adjusting the fax darkness	83
Printing a fax log	83
Blocking junk faxes	83
Holding faxes	83
Forwarding a fax	84
Scan	85
Scanning to a computer	85
Scanning to an FTP server using a shortcut.....	86

Scanning to a network folder using a shortcut	87
Scanning to a flash drive	87
Scanning to a Cloud Connector profile	88
Use printer menus	90
Menu map	90
Device	91
Print	105
Paper	112
Copy	115
Fax	117
E-mail	128
FTP	133
USB Drive	135
Network/Ports	140
Security	155
Cloud Connector	160
Reports	160
Troubleshooting	162
Maintain the printer	163
Checking the status of parts and supplies	163
Configuring supply notifications	163
Setting up email alerts	163
Viewing reports	164
Ordering parts and supplies	164
Replacing parts and supplies	167
Cleaning printer parts	185
Saving energy and paper	195
Moving the printer to another location	195
Shipping the printer	196
Troubleshoot a problem	197
Print quality problems	197
Printing problems	198
The printer is not responding	232
Unable to read flash drive	234
Enabling the USB port	234
Network connection problems	234

Issues with supplies	237
Clearing jams	239
Paper feed problems	255
E-mailing problems	259
Faxing problems.....	260
Scanning problems	266
Color quality problems	275
Contacting customer support	277
Recycle and dispose.....	279
Recycling Lexmark products	279
Recycling Lexmark packaging	279
Notices	280
Product information	280
Edition and legal notices	280
Specifications	283
Environmental and sustainability notices	286
Notices for fax products	290
Notices for wireless products	293
Class B device notices	296
Other regulatory notices.....	298

Safety information

Conventions

Note: A *note* identifies information that could help you.

Warning: A *warning* identifies something that could damage the product hardware or software.

CAUTION: A *caution* indicates a potentially hazardous situation that could injure you.

Different types of caution statements include:



CAUTION—POTENTIAL INJURY

Indicates a risk of injury.



CAUTION—SHOCK HAZARD

Indicates a risk of electrical shock.



CAUTION—HOT SURFACE

Indicates a risk of burn if touched.



CAUTION—TIPPING HAZARD

Indicates a crush hazard.



CAUTION—PINCH HAZARD

Indicates a risk of being caught between moving parts.

Product statements



CAUTION—POTENTIAL INJURY

To avoid the risk of fire or electrical shock, connect the power cord to an appropriately rated and properly grounded electrical outlet that is near the product and easily accessible.



CAUTION—POTENTIAL INJURY

To avoid the risk of fire or electrical shock, use only the power cord provided with this product or the manufacturer's authorized replacement.



CAUTION—POTENTIAL INJURY

Do not use this product with extension cords, multioutlet power strips, multioutlet extenders, or UPS devices. The power capacity of these types of accessories can be easily overloaded by a laser printer and may result in a risk of fire, property damage, or poor printer performance.



CAUTION—POTENTIAL INJURY

Only a Lexmark Inline Surge Protector that is properly connected between the printer and the power cord provided with the printer may be used with this product. The use of non-Lexmark surge protection devices may result in a risk of fire, property damage, or poor printer performance.



CAUTION—POTENTIAL INJURY

To reduce the risk of fire, use only a 26 AWG or larger telecommunications (RJ-11) cord when connecting this product to the public switched telephone network. For users in Australia, the cord must be approved by the Australian Communications and Media Authority.



CAUTION—SHOCK HAZARD

To avoid the risk of electrical shock, do not place or use this product near water or wet locations.



CAUTION—SHOCK HAZARD

To avoid the risk of electrical shock, do not set up this product or make any electrical or cabling connections, such as the power cord, fax feature, or telephone, during a lightning storm.



CAUTION—POTENTIAL INJURY

Do not cut, twist, bind, crush, or place heavy objects on the power cord. Do not subject the power cord to abrasion or stress. Do not pinch the power cord between objects such as furniture and walls. If any of these things happen, a risk of fire or electrical shock results. Inspect the power cord regularly for signs of such problems. Remove the power cord from the electrical outlet before inspecting it.



CAUTION—SHOCK HAZARD

To avoid the risk of electrical shock, make sure that all external connections (such as Ethernet and telephone system connections) are properly installed in their marked plug-in ports.



CAUTION—SHOCK HAZARD

To avoid the risk of electrical shock, if you are accessing the controller board or installing optional hardware or memory devices sometime after setting up the printer, then turn the printer off, and unplug the power cord from the electrical outlet before continuing. If you have any other devices attached to the printer, then turn them off as well, and unplug any cables going into the printer.



CAUTION—SHOCK HAZARD

To avoid the risk of electrical shock, do not use the fax feature during a lightning storm.



CAUTION—SHOCK HAZARD

To avoid the risk of electrical shock when cleaning the exterior of the printer, unplug the power cord from the electrical outlet and disconnect all cables from the printer before proceeding.



CAUTION—POTENTIAL INJURY

If the printer weight is greater than 20 kg (44 lb), then it may require two or more people to lift it safely.



CAUTION—POTENTIAL INJURY

When moving the printer, follow these guidelines to avoid personal injury or printer damage:

- Make sure that all doors and trays are closed.
- Turn off the printer, and then unplug the power cord from the electrical outlet.
- Disconnect all cords and cables from the printer.
- If the printer has separate floor-standing optional trays or output options attached to it, then disconnect them before moving the printer.
- If the printer has a caster base, then carefully roll it to the new location. Use caution when passing over thresholds and breaks in flooring.
- If the printer does not have a caster base but is configured with optional trays or output options, then remove the output options and lift the printer off the trays. Do not try to lift the printer and any options at the same time.

- Always use the handholds on the printer to lift it.
- Any cart used to move the printer must have a surface able to support the full footprint of the printer.
- Any cart used to move the hardware options must have a surface able to support the dimensions of the options.
- Keep the printer in an upright position.
- Avoid severe jarring movements.
- Make sure that your fingers are not under the printer when you set it down.
- Make sure that there is adequate clearance around the printer.



CAUTION—TIPPING HAZARD

Installing one or more options on your printer or MFP may require a caster base, furniture, or other feature to prevent instability causing possible injury. For more information on supported configurations, go to www.lexmark.com/multifunctionprinters.



CAUTION—TIPPING HAZARD

To reduce the risk of equipment instability, load each tray separately. Keep all other trays closed until needed.



CAUTION—HOT SURFACE

The inside of the printer might be hot. To reduce the risk of injury from a hot component, allow the surface to cool before touching it.



CAUTION—PINCH HAZARD

To avoid the risk of a pinch injury, use caution in areas marked with this label. Pinch injuries may occur around moving parts, such as gears, doors, trays, and covers.



CAUTION—POTENTIAL INJURY

This product uses a laser. Use of controls or adjustments or performance of procedures other than those specified in the *User's Guide* may result in hazardous radiation exposure.



CAUTION—POTENTIAL INJURY

Do not use aerosol cleaners. Aerosol cleaners can cause explosions or fires when used on electromechanical equipment.



CAUTION—POTENTIAL INJURY

When handling cartridges, for example toner cartridges, avoid skin and eye contact. Eye contact with toner can cause irritation and inflammation. Do not attempt to disassemble the cartridge, which can increase the risk of skin or eye contact.



CAUTION—POTENTIAL INJURY

The lithium battery in this product is not intended to be replaced. There is a danger of explosion if a lithium battery is incorrectly replaced. Do not recharge, disassemble, or incinerate a lithium battery. Discard used lithium batteries according to the manufacturer's instructions and local regulations.



WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH of CHILDREN**.
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do not dispose of batteries in household trash or incinerate. Even used batteries may cause severe injury or death. Call a local poison control center for treatment information.

Battery type: MS621

Nominal battery voltage: 3V

Do not force discharge, recharge, disassemble, heat above 60°C (140°F), or incinerate. Doing so may result in injury due to venting, leakage, or explosion resulting in chemical burns.

This product is designed, tested, and approved to meet strict global safety standards with the use of specific manufacturer's components. The safety features of some parts may not always be obvious. The manufacturer is not responsible for the use of other replacement parts.

Refer service or repairs, other than those described in the user documentation, to a service representative.

SAVE THESE INSTRUCTIONS.

Learn about the printer


Finding information about the printer

What are you looking for?	Find it here
Initial setup instructions	See the setup documentation that came with the printer.
• Printer software • Print or fax driver • Printer firmware • Utility	Go to www.lexmark.com/downloads .
• Interactive <i>User's Guide</i> • How-to videos	Go to https://support.lexmark.com .
Help information for using the printer software.	Help for Microsoft Windows or Macintosh operating systems—Open a printer software program or application, and then click Help.  Click  to view context-sensitive information. Notes • Help is automatically installed with the printer software. • Depending on the operating system, the printer software is either in the printer program folder or on the desktop.

What are you looking for?	Find it here
• Documentation • Live chat support • Email support • Voice support	Go to https://support.lexmark.com. Note: Select your country or region, and then select your product to view the appropriate support site. Support contact information for your country or region can be found on the website or on the printed warranty that came with the printer. Have the following information ready when you contact customer support: • Place and date of purchase • Machine type and serial number For more information, see Finding the printer serial number on page 11.
• Safety information • Regulatory information • Warranty information • Environmental information	Warranty information varies by country or region: • In the U.S.—See the Statement of Limited Warranty included with the printer, or go to https://support.lexmark.com. • In other countries and regions—See the printed warranty that came with the printer. <i>Product Information Guide</i>—See the documentation that came with the printer or go to https://support.lexmark.com.
Information on Lexmark digital passport	Go to https://csr.lexmark.com/digital-passport.php .

Finding the printer serial number

1. Open the front door, and then firmly push it down until it clicks into place.

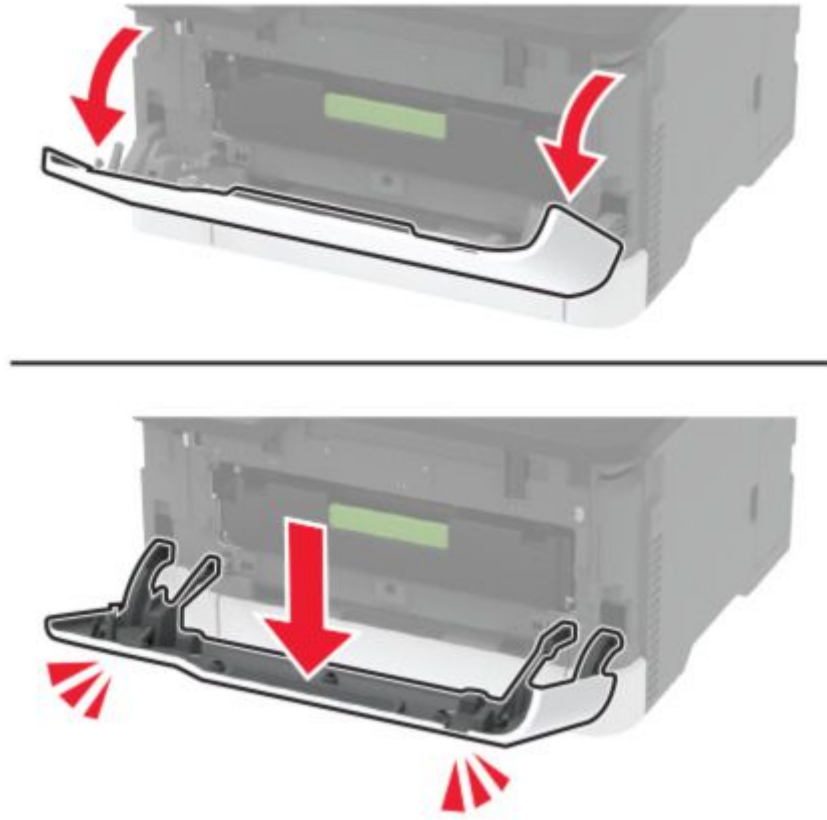

2. Locate the printer serial number behind the front door.



Note: The serial number is 9, 10, or 13 digits long. Look for **SN** or **XSN** on the label.


Printer configurations

Lexmark MC3224dwe MFP




1	Scanner
2	Standard bin
3	Manual feeder
4	250-sheet tray
5	Control panel

Lexmark CX331, Lexmark CX431, Lexmark MC3224adwe, Lexmark MC3326, Lexmark MC3426, Lexmark XC2326 MFPs

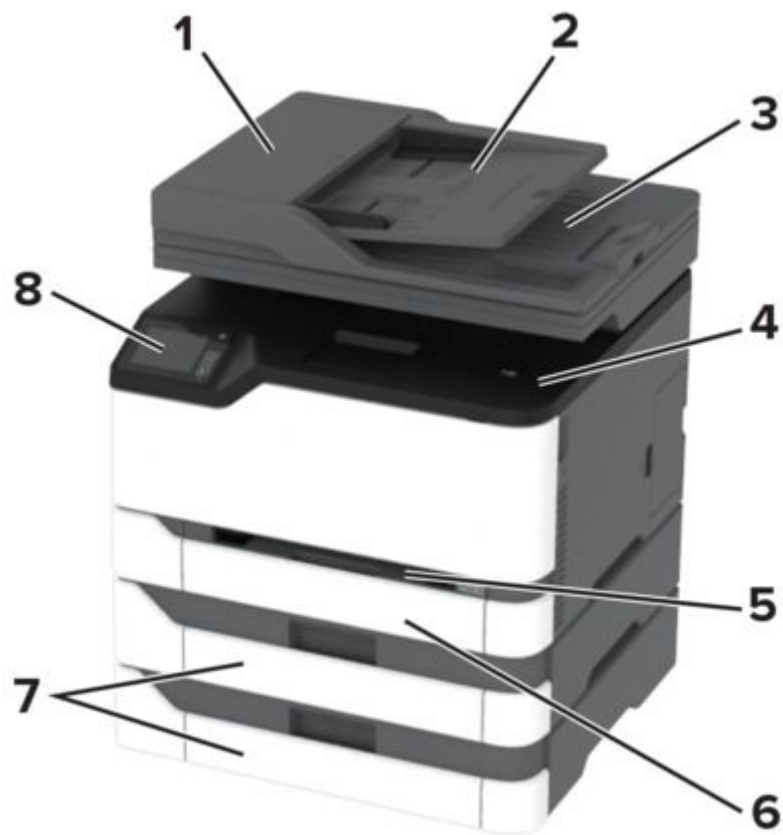

1	Automatic document feeder (ADF)
2	ADF tray
3	ADF bin
4	Standard bin
5	Manual feeder
6	Standard 250-sheet tray
7	Optional 250-sheet trays
	Note: Supported only in some printer models.
8	Control panel

Using the control panel

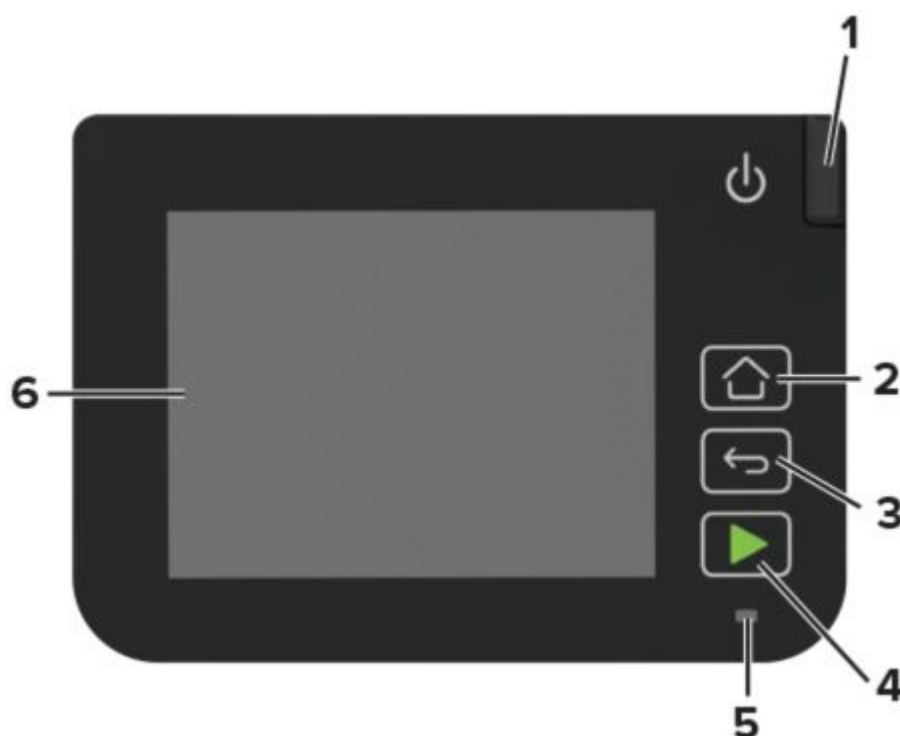

	Control panel part	Function
1	Power button	Turn on or turn off the printer. Note: To turn off the printer, press and hold the power button for five seconds.
2	Home button	Go to the home screen.
3	Back button	Return to the previous screen.
4	Start button	Start a job, depending on which mode is selected.
5	Indicator light	Check the status of the printer. For more information, see .
6	Display	• View printer messages and supply status. • Set up and operate the printer. • Wake the printer from sleep mode.

Customizing the home screen

1. From the control panel, navigate to **Settings** > **Device** > **Visible Home Screen Icons**.
2. Select the icons that you want to appear on the home screen.
3. Apply the changes.

Changing the language of the keyboard on the display

Note: You can only change the language of the keyboard in printer tasks that require alphanumeric input such as e-mail or scan.

1. Touch the input field.
2. On the keyboard, touch and hold the language key.
3. Select a language.

Colors of the indicator light

Color of the indicator light	Printer status
Off	The printer is off.
Solid blue	The printer is ready.
Blinking blue	The printer is printing or processing data.
Blinking red	The printer requires user intervention.
Solid amber	The printer is in sleep mode.
Blinking amber	The printer is in deep sleep or hibernate mode.
Alternating between blue and blinking red	The printer is not responding or showing anything on the display. For more information, see Indicator light is alternating between blue and blinking red.

Using the automatic document feeder and scanner glass

Automatic document feeder (ADF)	Scanner glass
 • Use the ADF for multiple-page or two-sided documents. • Load an original document face up. For multiple-page documents, make sure to align the leading edge before loading. • Make sure to adjust the ADF guides to match the width of the paper that you are loading.	 • Use the scanner glass for single-page documents, book pages, small items (such as postcards or photos), transparencies, photo paper, or thin media (such as magazine clippings). • Place the document face down in the corner with the arrow.

Selecting paper

Paper guidelines

Use the appropriate paper to prevent jams and help ensure trouble-free printing.

- Always use new, undamaged paper.
- Before loading paper, know the recommended printable side of the paper. This information is usually indicated on the paper package.
- Do not use paper that has been cut or trimmed by hand.
- Do not mix paper sizes, types, or weights in the same tray; mixing results in jams.
- Do not use coated papers unless they are specifically designed for electrophotographic printing.

For more information, see the *Paper and Specialty Media Guide*.

Paper characteristics

The following paper characteristics affect print quality and reliability. Consider these factors before printing on them.

Weight

Trays can feed paper of varying weights. Paper lighter than 60 gsm (16 lb-bond) may not be stiff enough to feed properly, and may cause jams. For more information, see .

Curl

Curl is the tendency for paper to curl at its edges. Excessive curl can cause paper feeding problems. Curl can occur after the paper passes through the printer, where it is exposed to high temperatures. Storing paper unwrapped in hot, humid, cold, or dry conditions can contribute to paper curling before printing and can cause feeding problems.

Smoothness

Paper smoothness directly affects print quality. If paper is too rough, toner cannot fuse to it properly. If paper is too smooth, it can cause paper feeding or print quality issues. We recommend the use of paper with 50 Sheffield points.

Moisture content

The amount of moisture in paper affects both print quality and the printer ability to feed the paper correctly. Leave the paper in its original wrapper until you use it. Exposure of paper to moisture changes can degrade its performance.

Before printing, store paper in its original wrapper for 24 to 48 hours. The environment in which the paper is stored must be the same as the printer. Extend the time several days if the storage or transportation environment is very different from the printer environment. Thick paper may also require a longer conditioning period.

Grain direction

Grain refers to the alignment of the paper fibers in a sheet of paper. Grain is either *grain long*, which runs the length of the paper or *grain short*, which runs the width of the paper. For recommended grain direction, see .

Fiber content

Most high-quality xerographic paper is made from 100 percent chemically treated pulped wood. This content provides the paper with a high degree of stability, resulting in fewer paper feeding problems and better print quality. Paper containing fibers such as cotton can negatively affect paper handling.

Unacceptable paper

The following paper types are not recommended for use with the printer:

- Chemically treated papers that are used to make copies without carbon paper. They are also known as carbonless papers, carbonless copy paper (CCP), or no carbon required (NCR) paper.
- Preprinted papers with chemicals that may contaminate the printer.
- Preprinted papers that can be affected by the temperature in the printer fuser.
- Preprinted papers that require a registration (the precise print location on the page) greater than ± 2.3 mm (± 0.09 in.). For example, optical character recognition (OCR) forms.

Sometimes, registration can be adjusted with a software app to print successfully on these forms.

- Coated papers (erasable bond), synthetic papers, or thermal papers.
- Rough-edged, rough or heavily textured surface papers, or curled papers.
- Recycled papers that fail EN12281:2002 (European).
- Paper weighing less than 60 g/m^2 (16 lb).
- Multiple-part forms or documents.

Using recycled paper and other office papers

As an environmentally conscious company, Lexmark supports the use of recycled office paper produced specifically for use in laser (electrophotographic) printers. In 1998, Lexmark presented to the US government a study demonstrating that recycled paper produced by major mills in the US fed as well as non-recycled paper. However, no blanket statement can be made that *all* recycled paper will feed well.

Lexmark consistently tests its printers with recycled paper (20–100% post-consumer waste) and a variety of test paper from around the world, using chamber tests for different temperature and humidity conditions. Lexmark has found no reason to discourage the use of today's recycled office papers, but generally the following property guidelines apply to recycled paper.

- Low moisture content (4–5%)
- Suitable smoothness (100–200 Sheffield units, or 140–350 Bendtsen units, European)

Note: Some much smoother papers (such as premium 24 lb laser papers, 50–90 Sheffield units) and much rougher papers (such as premium cotton papers, 200–300 Sheffield units) have been engineered to work very well in laser printers, despite surface texture. Before using these types of paper, consult your paper supplier.

- Suitable sheet-to-sheet coefficient of friction (0.4–0.6)
- Sufficient bending resistance in the direction of feed

Recycled paper, paper of lower weight ($<60 \text{ g/m}^2$ [16 lb bond]) and/or lower caliper (<3.8 mils [0.1 mm]), and paper that is cut grain-short for portrait (or short-edge) fed printers may have lower bending resistance than is required for reliable paper feeding. Before using these types of paper for laser (electrophotographic) printing, consult your paper supplier. Remember that these are general guidelines only and that paper meeting these guidelines may still cause paper feeding problems in any laser printer (for example, if the paper curls excessively under normal printing conditions).

Storing paper

Use these paper storage guidelines to help avoid jams and uneven print quality:

- Store paper in its original wrapper in the same environment as the printer for 24 to 48 hours before printing.
- Extend the time several days if the storage or transportation environment is very different from the printer environment. Thick paper may also require a longer conditioning period.
- For best results, store paper where the temperature is 21°C (70°F) and the relative humidity is 40 percent.
- Most label manufacturers recommend printing in a temperature range of 18 to 24°C (65 to 75°F) with relative humidity between 40 and 60 percent.
- Store paper in cartons, on a pallet or shelf, rather than on the floor.
- Store individual packages on a flat surface.
- Do not store anything on top of individual paper packages.
- Take paper out of the carton or wrapper only when you are ready to load it in the printer. The carton and wrapper help keep the paper clean, dry, and flat.

Selecting preprinted forms and letterhead

- Use grain long paper.
- Use only forms and letterhead printed using an offset lithographic or engraved printing process.
- Avoid paper with rough or heavily textured surfaces.
- Use inks that are not affected by the resin in the toner. Inks that are oxidation-set or oil-based generally meet these requirements; latex inks might not.
- Print samples on preprinted forms and letterheads considered for use before buying large quantities. This action determines whether the ink in the preprinted form or letterhead affects print quality.
- When in doubt, contact your paper supplier.
- When printing on letterhead, load the paper in the proper orientation for your printer. For more information, see the *Paper and Specialty Media Guide*.

Supported paper sizes

Paper size	Standard or optional 250-sheet tray	Manual feeder	Two-sided printing	ADF	Scanner glass
A4 210 x 297 m m (8.27 x 11.7 in)	✓	✓	✓	✓	✓

Learn about the printer

Paper size	Standard or optional 250-sheet tray	Manual feeder	Two-sided printing	ADF	Scanner glass
A5¹ 148 x 210 mm (5.83 x 8.27 in.)	✓	✓	X	✓	✓
A6 105 x 148 mm (4.13 x 5.83 in.)	✓	✓	X	✓	✓
JIS B5 182 x 257 mm (7.17 x 10.1 in.)	✓	✓	X	✓	✓
Oficio (Mexico) 215.9 x 340.4 mm (8.5 x 13.4 in.)	✓	✓	✓	✓	X
Hagaki 100 x 148 mm (3.94 x 5.83 in.)	✓	✓	X	X	✓
Statement 139.7 x 215.9 mm (5.5 x 8.5 in.)	✓	✓	X	✓	✓
Executive 184.2 x 266.7 mm (7.25 x 10.5 in.)	✓	✓	X	✓	✓
Letter 215.9 x 279.4 mm (8.5 x 11 in.)	✓	✓	✓	✓	✓

Learn about the printer

Paper size	Standard or optional 250-sheet tray	Manual feeder	Two-sided printing	ADF	Scanner glass
Legal 215.9 x 355.6 mm (8.5 x 14 in.)	✓	✓	✓	✓	X
Folio 215.9 x 330.2 mm (8.5 x 13 in.)	✓	✓	✓	✓	X
Universal ^{2, 3} 98.4 x 148 mm (3.86 x 5.83 in.) to 215.9 x 355.6 mm (8.5 x 14 in.)	✓	✓	✓	✓	✓ ⁴
Universal ^{2, 3} 25.4 x 25.4 mm (1 x 1 in.) to 215.9 x 297 mm (8.5 x 11.69 in.)	X	X	X	X	✓
Universal ^{2, 3} 105 x 148 mm (4.13 x 5.83 in.) to 215.9 x 355.6 mm (8.5 x 14 in.)	X	X	X	✓	X
7 3/4 Envelope 98.4 x 190.5 mm (3.875 x 7.5 in.)	✓ ⁵	✓	X	X	✓
9 Envelope 98.4 x 225.4 mm (3.875 x 8.9 in.)	✓ ⁵	✓	X	X	✓

Learn about the printer

Paper size	Standard or optional 250-sheet tray	Manual feeder	Two-sided printing	ADF	Scanner glass
10 Envelope 104.8 x 241.3 mm (4.12 x 9.5 in.)	√ ⁵	✓	X	X	✓
DL Envelope 110 x 220 mm (4.33 x 8.66 in.)	√ ⁵	✓	X	X	✓
C5 Envelope 162 x 229 mm (6.38 x 9.01 in.)	√ ⁵	✓	X	X	✓
B5 Envelope 176 x 250 mm (6.93 x 9.84 in.)	√ ⁵	✓	X	X	✓
Other Envelope 98.4 x 162 mm (3.87 x 6.38 in.) to 176 x 250 mm (6.93 x 9.84 in.)	√ ⁵	✓	X	X	N/A

¹ The default support is long-edge feed. When running on short-edge feed, A5 is treated as narrow paper.

² When selected, the page is formatted for 215.90 x 355.60 mm (8.5 x 14 in.) unless specified by the software application.

³ Load narrow paper with the short edge entering the printer first.

⁴ Supports paper size only up to 216 x 297 mm (8.5 x 11.7 in.).

⁵ The standard 250-sheet tray supports only up to five envelopes at a time. The optional 250-sheet tray supports up to 40 envelopes at a time.

Supported paper weights

Notes

- The ADF supports 60–90 g/m² (16–24 lb bond) paper.
- Hagaki and A6 are supported only in the manual feeder and optional tray up to a weight of 209 g/m². Heavier weight must be tested for acceptability.

Paper type and weight	Standard or optional 250-sheet tray	Manual feeder	Two-sided printing
Light paper 60–74.9 g/m ² grain long (16–19.9-lb bond)	✓	✓	✓
Plain paper 75–90.3 g/m ² grain long (20–24-lb bond)	✓	✓	✓
Heavy paper 90.3–105 g/m ² grain long (24.1–28-lb bond)	✓	✓	✓
Card stock 105.1–162 g/m ² grain long (28.1–43-lb bond)	✓	✓	X
Card stock 163–200 g/m ² grain long (43.1–53-lb bond)	X	✓	X
Paper labels 131 g/m ² (35-lb bond)	✓	✓	X
Envelopes 60–105 g/m ² (16–28-lb bond)	✓	✓	X

Supported paper types

Notes

- Labels, envelopes, and card stock always print at reduced speed.
- Labels are supported for occasional use and must be tested for acceptability.
- The ADF supports only plain paper.

Paper type	Standard or optional 250-sheet tray	Manual feeder	Two-sided printing
Plain paper	✓	✓	✓
Card stock	✓	✓	X
Labels	✓	✓	X
Envelopes	✓	✓	X

Additional printer features and support

Supported flash drives and file types

Flash drives

- Lexar JumpDrive S70 (16GB and 32GB)
- SanDisk Cruzer (16GB and 32GB)
- PNY Attaché (16GB and 32GB)

Notes

- The printer supports high-speed flash drives with full-speed standard.
- Flash drives must support the File Allocation Table (FAT) system.

File types

Documents	Images
• PDF (version 1.7 or earlier)* • Microsoft file formats (DOC, DOCX, XLS, XLSX, PPT, PPTX)*	• JPEG or JPG • TIFF or TIF* • GIF* • BMP* • PNG* • PCX* • DCX*

* Supported only in some printer models.

Available options

MarkNet™ N8372 802.11a/b/g/n/ac Wireless Print Server Interface Card

Note: Supported only in the Lexmark MC3426adwe printer model.

Set up, install, and configure

Selecting a location for the printer

- Leave enough room to open trays, covers, and doors and to install hardware options.
- Set up the printer near an electrical outlet.



CAUTION—POTENTIAL INJURY

To avoid the risk of fire or electrical shock, connect the power cord to an appropriately rated and properly grounded electrical outlet that is near the product and easily accessible.



CAUTION—SHOCK HAZARD

To avoid the risk of electrical shock, do not place or use this product near water or wet locations.

- Make sure that airflow in the room meets the latest revision of the ASHRAE 62 standard or the CEN Technical Committee 156 standard.
- Provide a flat, sturdy, and stable surface.
- Keep the printer:
 - Clean, dry, and free of dust
 - Away from stray staples and paper clips
 - Away from the direct airflow of air conditioners, heaters, or ventilators
 - Free from direct sunlight and humidity extremes
- Observe the temperature range.

Operating temperature	10 to 32.2°C (50 to 90°F)
-----------------------	---------------------------

- Allow the following recommended amount of space around the printer for proper ventilation:



1	Top	305 mm (12 in.)
2	Rear	102 mm (4 in.)
3	Right side	76 mm (3 in.)
4	Front	76 mm (3 in.)
5	Left side	76 mm (3 in.)

Printer ports



CAUTION—SHOCK HAZARD

To avoid the risk of electrical shock, do not set up this product or make any electrical or cabling connections, such as the power cord, fax feature, or telephone, during a lightning storm.



CAUTION—POTENTIAL INJURY

To avoid the risk of fire or electrical shock, connect the power cord to an appropriately rated and properly grounded electrical outlet that is near the product and easily accessible.



CAUTION—POTENTIAL INJURY

To avoid the risk of fire or electrical shock, use only the power cord provided with this product or the manufacturer's authorized replacement.




CAUTION—POTENTIAL INJURY

To reduce the risk of fire, use only a 26 AWG or larger telecommunications (RJ-11) cord when connecting this product to the public switched telephone network. For users in Australia, the cord must be approved by the Australian Communications and Media Authority.

Warning—Potential Damage

To avoid loss of data or printer malfunction, do not touch the USB cable, any wireless network adapter, or the printer in the areas shown while actively printing.

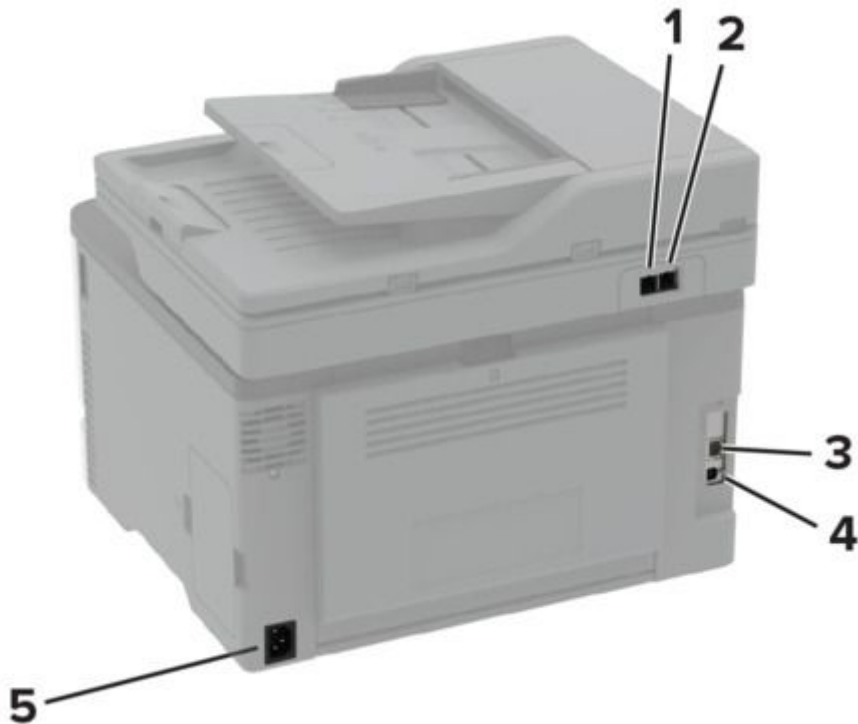

	Printer port	Function
1	LINE port Note: Available only in some printer models.	Connect the printer to an active telephone line through a standard wall jack (RJ-11), DSL filter, or VoIP adapter, or any other adapter that allows you to access the telephone line to send and receive faxes. Note: To enable manual fax in models that have only a LINE port, use a corded fax splitter.
2	EXT port Note: Available only in some printer models.	Connect more devices (telephone or answering machine) to the printer and the telephone line. Use this port if you do not have a dedicated fax line for the printer and if this connection method is supported in your country or region.

	Printer port	Function
3	Ethernet port	Connect the printer to a network.
4	USB printer port	Connect the printer to a computer.
5	Power cord socket	Connect the printer to a properly grounded electrical outlet.

Installing optional trays



CAUTION—SHOCK HAZARD

To avoid the risk of electrical shock, if you are accessing the controller board or installing optional hardware or memory devices sometime after setting up the printer, then turn the printer off, and unplug the power cord from the electrical outlet before continuing. If you have any other devices attached to the printer, then turn them off as well, and unplug any cables going into the printer.

1. Turn off the printer.
2. Unplug the power cord from the electrical outlet, and then from the printer.
3. Unpack the optional tray, and then remove all packing material.
4. Align the printer with the optional tray, and then lower the printer into place.



CAUTION—POTENTIAL INJURY

If the printer weight is greater than 20 kg (44 lb), then it may require two or more people to lift it safely.



5. Connect the power cord to the printer, and then to the electrical outlet.



CAUTION—POTENTIAL INJURY

To avoid the risk of fire or electrical shock, connect the power cord to an appropriately rated and properly grounded electrical outlet that is near the product and easily accessible.

6. Turn on the printer.

Add the tray in the print driver to make it available for print jobs. For more information, see [Adding available options in the print driver](#).

Configuring apps and solutions

Creating a Cloud Connector profile

1. From the control panel, select **Cloud Connector**.
2. Select a cloud service provider.

3. Select **Create** or  .

4. **Note:** We recommend creating a PIN to protect the profile.
5. **Note:** The authorization code is valid only for 24 hours.
6. Open a web browser, and then go to <https://lexmark.cloud-connect.co>.
7. Select **Next**, and then enter the authorization code.
8. Select **Connect**, and then accept the Terms of Use.
9. Log in to your cloud service provider account.
10. Grant permissions.

Note: To complete the authorization process, open the profile within 72 hours.

Managing bookmarks

Creating bookmarks

Use bookmarks to print frequently accessed documents that are stored in servers or on the web.

1. Open a web browser, and then type the printer IP address in the address field.

Notes

- View the printer IP address on the printer home screen. The IP address appears as four sets of numbers separated by periods, such as 123.123.123.123.
- If you are using a proxy server, then temporarily disable it to load the web page correctly.

2. Click **Bookmarks > Add Bookmark**, and then type a bookmark name.
3. Select an Address protocol type, and then do one of the following:
 - For HTTP and HTTPS, type the URL that you want to bookmark.
 - For HTTPS, make sure to use the host name instead of the IP address. For example, type myWebsite.com/sample.pdf instead of typing 123.123.123.123/sample.pdf. Make sure that the host name also matches the Common Name (CN) value in the server certificate. For more information on obtaining the CN value in the server certificate, see the help information for your web browser.
 - For FTP, type the FTP address. For example, myServer/myDirectory. Enter the FTP port. Port 21 is the default port for sending commands.
 - For SMB, type the network folder address. For example, myServer/myShare/myFile.pdf. Type the network domain name.
 - If necessary, select the Authentication type for FTP and SMB.

To limit access to the bookmark, enter a PIN.

Note: The application supports the following file types: PDF, JPEG, TIFF, and HTML-based web pages. Other file types such as DOCX and XLXS are supported in some printer models.

4. Click **Save**.

Creating folders

1. Open a web browser, and then type the printer IP address in the address field.

Notes

- View the printer IP address on the printer home screen. The IP address appears as four sets of numbers separated by periods, such as 123.123.123.123.
- If you are using a proxy server, then temporarily disable it to load the web page correctly.

2. Click **Bookmarks > Add Folder**, and then type a folder name.

Note: To limit access to the folder, enter a PIN.

3. Click **Save**.

Note: You can create folders or bookmarks inside a folder. To create a bookmark, see [Creating bookmarks on page 32](#).

Setting up the printer to fax

Supported fax

Printer model	Analog fax	etherFAX ¹	Fax server	Fax over IP (FoIP) ²
CX331adwe	✓	✓	✓	✓
CX431adw	✓	✓	✓	✓
CX431dw	X	✓	✓	✓
MC3224adwe	✓	✓	✓	✓
MC3224dwe	X	✓	✓	✓
MC3224i	X	✓	✓	✓
MC3326adwe	✓	✓	✓	✓

Printer model	Analog fax	etherFAX ¹	Fax server	Fax over IP (FoIP) ²
MC3326i	X	✓	✓	✓
MC3426adw	✓	✓	✓	✓
MC3426i	X	✓	✓	✓
XC2326	✓	✓	✓	✓

¹ Needs a subscription. For more information, go to <https://www.etherfax.net/lexmark> or contact the place where you purchased the printer.

² Needs an installed license bundle. For more information, contact the place where you purchased the printer.

Setting up the fax function using analog fax

Notes

- This feature is available only in some printer models.
- A fax card must be installed for the printer to use analog fax.
- Some connection methods are applicable only in some countries or regions.
- If the fax function is enabled and not fully set up, then the indicator light may blink red.
- If you do not have a TCP/IP environment, then use the control panel to set up fax.

Warning—Potential Damage

To avoid loss of data or printer malfunction, do not touch cables or the printer in the area shown while actively sending or receiving a fax.



Using the fax setup wizard

Notes

- The setup wizard is available only if no device-based fax, such as analog, etherFAX, or Fax over IP (FoIP), is configured.
- Before using the wizard, make sure that the printer firmware is updated. For more information, see the “Printer firmware instructions” section.

1. From the control panel, navigate to **Fax**.
2. Select **Set up now**.
3. Type the fax name, and then select **Next**.
4. Enter the fax number and then select **Done**.

Using the Settings menu

1. From the control panel, navigate to **Settings** › **Fax** › **Fax Setup** › **General Fax settings**.
2. Configure the settings.

Using the Embedded Web Server

1. Open a web browser, and then type the printer IP address in the address field.

Notes

- View the printer IP address on the printer home screen. The IP address appears as four sets of numbers separated by periods, such as 123.123.123.123.
- If you are using a proxy server, then temporarily disable it to load the web page correctly.

2. Click **Settings** › **Fax** › **Fax Setup** › **General Fax Settings**.
3. Configure the settings.
4. Apply the changes.

Setting up the fax function using etherFAX

Notes

- The printer firmware must be updated to the latest version. For more information, see the “Printer firmware instructions” section.
- Make sure that you have registered your printer to the etherFAX portal. For more information, go to <https://www.etherfax.net/lexmark>.
- The printer serial number is required on registration. To locate the serial number, see [Finding the printer serial number on page 11](#).

1. Open a web browser, and then type the printer IP address in the address field.

Notes

- View the printer IP address on the home screen. The IP address appears as four sets of numbers separated by periods, such as 123.123.123.123.
- If you are using a proxy server, then temporarily disable it to load the web page correctly.

2. Click **Settings > Fax > Fax Setup > General Fax Settings**.

Note: **Fax Setup** appears only if **Fax Mode** is set to **Fax**.

3. In the **Fax Name** field, type a unique name.
4. In the **Fax Number** field, enter the fax number that etherFAX provided.
5. From the **Fax Transport** menu, select **etherFAX**.

Notes

- This menu shows up only when more than one fax transport is available.
- If the printer only has etherFAX installed, then it is automatically configured.

6. Apply the changes.

Setting up the fax function using fax server

Notes

- This feature lets you send fax messages to a fax service provider that supports e-mail receiving.
- This feature supports outgoing fax messages only. To support fax receive, make sure that you have a device-based fax, such as analog fax, etherFAX, or Fax over IP (FoIP), configured in your printer.

1. Open a web browser, and then type the printer IP address in the address field.

Notes

- View the printer IP address on the home screen. The IP address appears as four sets of numbers separated by periods, such as 123.123.123.123.
- If you are using a proxy server, then temporarily disable it to load the web page correctly.

2. Click **Settings > Fax**.
3. From the Fax Mode menu, select **Fax Server**, and then click **Save**.
4. Click **Fax Server Setup**.
5. In the To Format field, type [#]@myfax.com, where [#] is the fax number and myfax.com is the fax provider domain.

Notes

- If necessary, configure the Reply Address, Subject, or Message fields.
- To let the printer receive fax messages, enable the device-based fax receive setting. Make sure that you have a device-based fax configured.

6. Click **Save**.
7. Click **Fax Server E-mail Settings**, and then do either of the following:
 - Enable **Use E-mail SMTP Server**.

Note: If the E-mail SMTP settings are not configured, then see [Configuring the email SMTP settings](#).

- Configure the SMTP settings. For more information, contact your e-mail service provider.
8. Apply the changes.

Setting up fax using a standard telephone line



CAUTION—SHOCK HAZARD

To avoid the risk of electrical shock, do not set up this product or make any electrical or cabling connections, such as the power cord, fax feature, or telephone, during a lightning storm.



CAUTION—SHOCK HAZARD


To avoid the risk of electrical shock, do not use the fax feature during a lightning storm.



CAUTION—POTENTIAL INJURY

To reduce the risk of fire, use only a 26 AWG or larger telecommunications (RJ-11) cord when connecting this product to the public switched telephone network. For users in Australia, the cord must be approved by the Australian Communications and Media Authority.

Setup 1: Printer is connected to a dedicated fax line

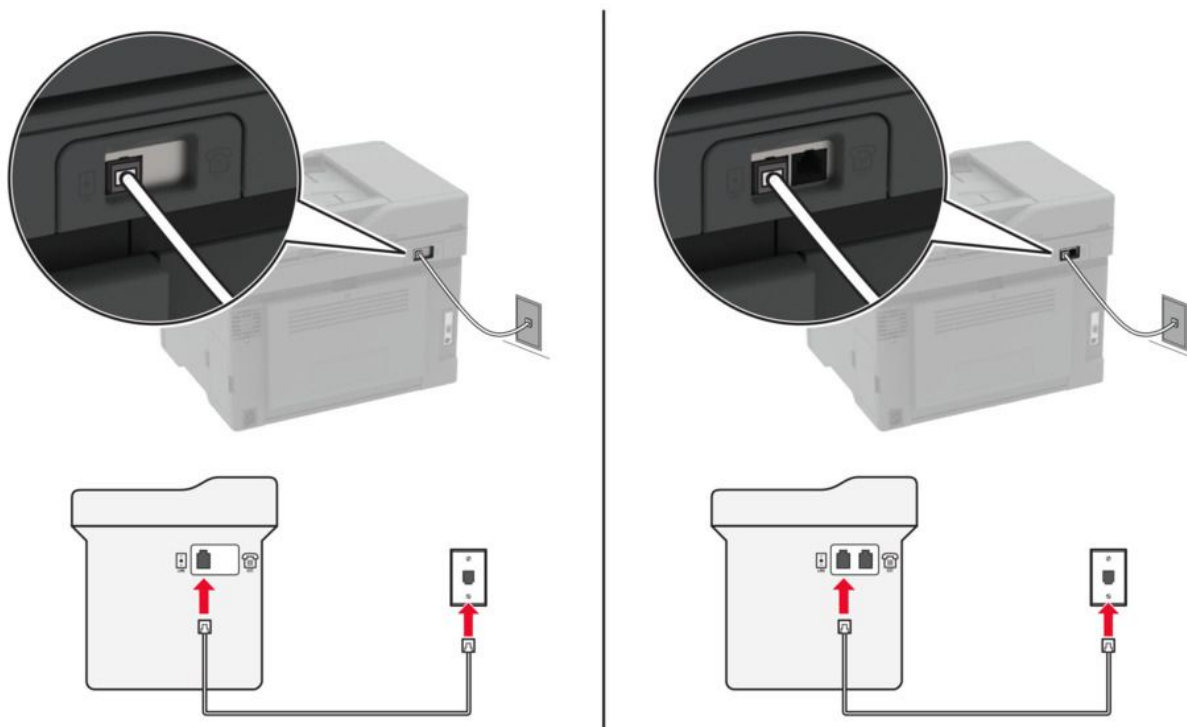

1. Connect one end of the telephone cable to the LINE port of the printer.
2. Connect the other end of the cable to an active analog telephone wall jack.



Notes

- You can set the printer to receive faxes automatically (set Auto Answer to **On**) or manually (set Auto Answer to **Off**).
- If you want to receive faxes automatically, then set the printer to pick up on a specified number of rings.

Setup 2: Printer is sharing the line with an answering machine

Note: If you subscribe to a distinctive ring service, then make sure that you set the correct ring pattern for the printer. Otherwise, the printer does not receive faxes even if you have set it to receive faxes automatically.


Connected to the same telephone wall jack

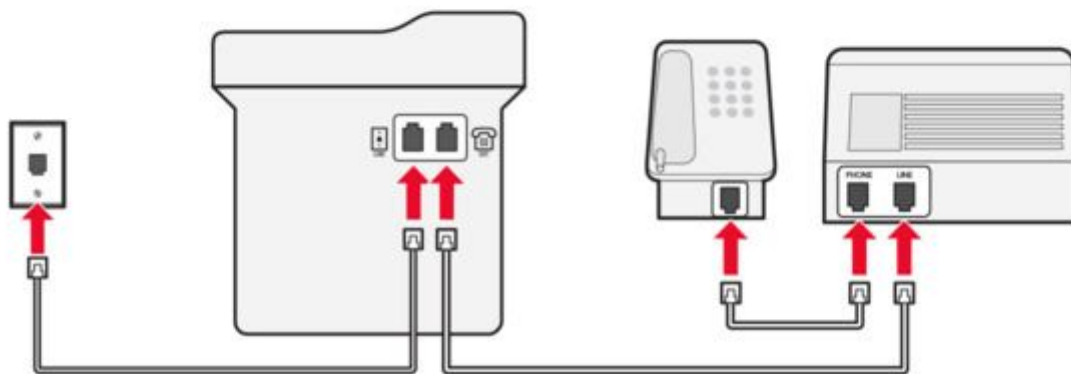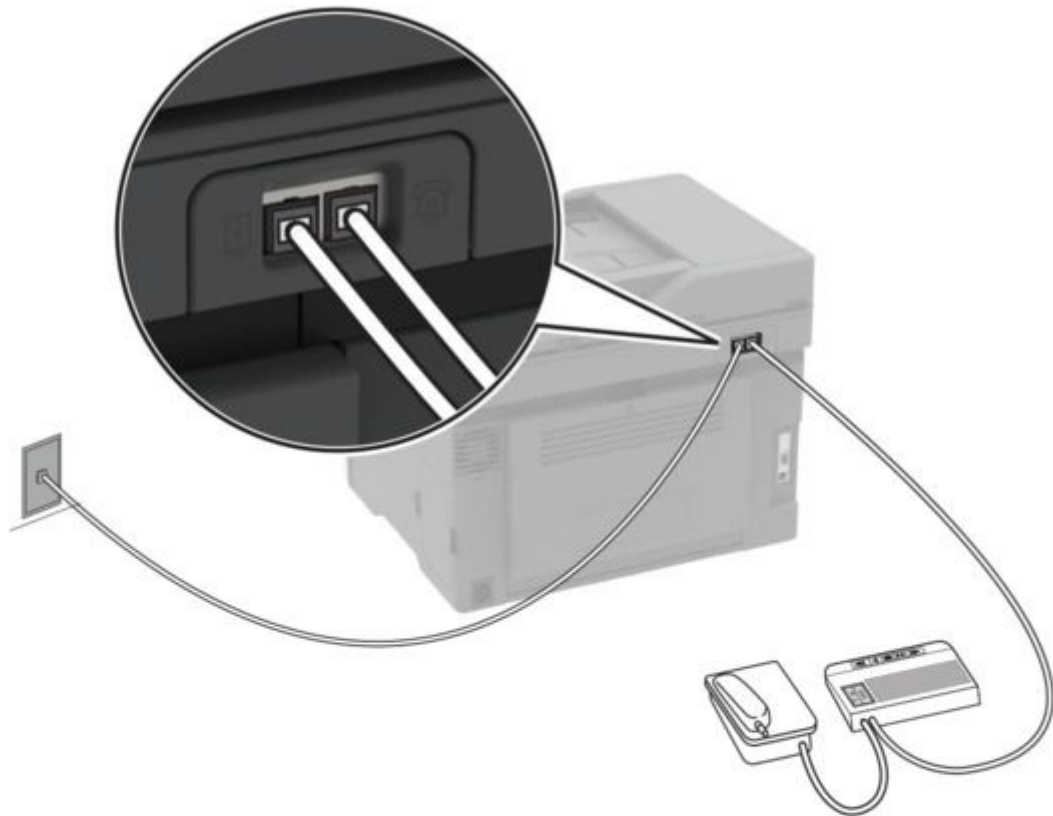

Note: These instructions apply only to printers that have EXT and LINE ports.

- Connect one end of the telephone cable to the LINE port of the printer.
- Connect the other end of the cable to an active analog wall jack.
- Connect the answering machine to the telephone port of the printer.

Connected to different wall jacks

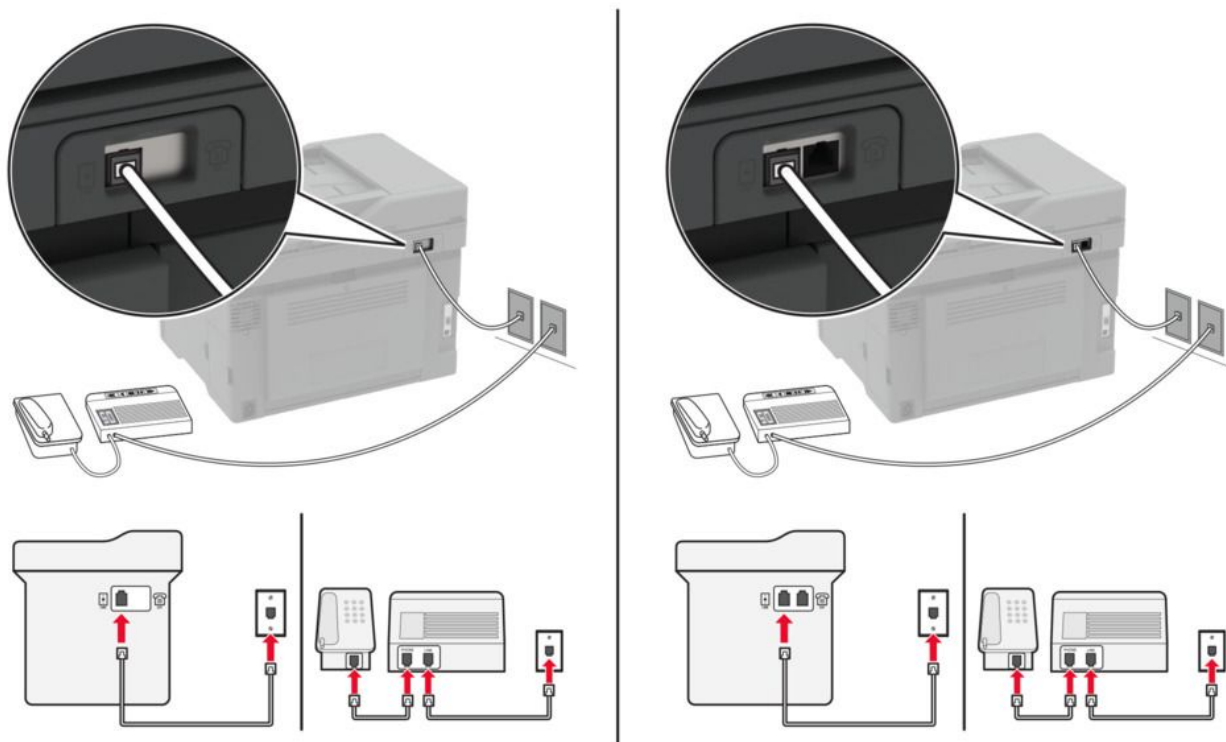

1. Connect one end of the telephone cable to the LINE port of the printer.
2. Connect the other end of the cable to an active analog wall jack.

Notes

- If you have only one telephone number on your line, then set the printer to receive faxes automatically.
- Set the printer to pick up calls two rings after the answering machine. For example, if the answering machine picks up calls after four rings, then set the printer Rings to Answer setting to **6**.

Setting up fax in countries or regions with different telephone wall jacks and plugs



CAUTION—SHOCK HAZARD

To avoid the risk of electrical shock, do not set up this product or make any electrical or cabling connections, such as the power cord, fax feature, or telephone, during a lightning storm.



CAUTION—SHOCK HAZARD

To avoid the risk of electrical shock, do not use the fax feature during a lightning storm.




CAUTION—POTENTIAL INJURY

To reduce the risk of fire, use only a 26 AWG or larger telecommunications (RJ-11) cord when connecting this product to the public switched telephone network. For users in Australia, the cord must be approved by the Australian Communications and Media Authority.

The standard wall jack adopted by most countries or regions is RJ-11. If the wall jack or equipment in your facility is not compatible with this type of connection, then use a telephone adapter. An adapter for your country or region may not come with your printer, and you may need to purchase it separately.


Set up, install, and configure

There may be an adapter plug installed in the telephone port of the printer. Do not remove the adapter plug from the telephone port of the printer if you are connecting to a serial or cascaded telephone system.

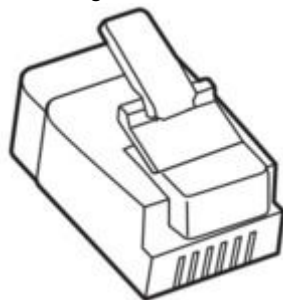

Part name	Part number
Lexmark adapter plug	40X8519

Connecting the printer to a non-RJ-11 wall jack

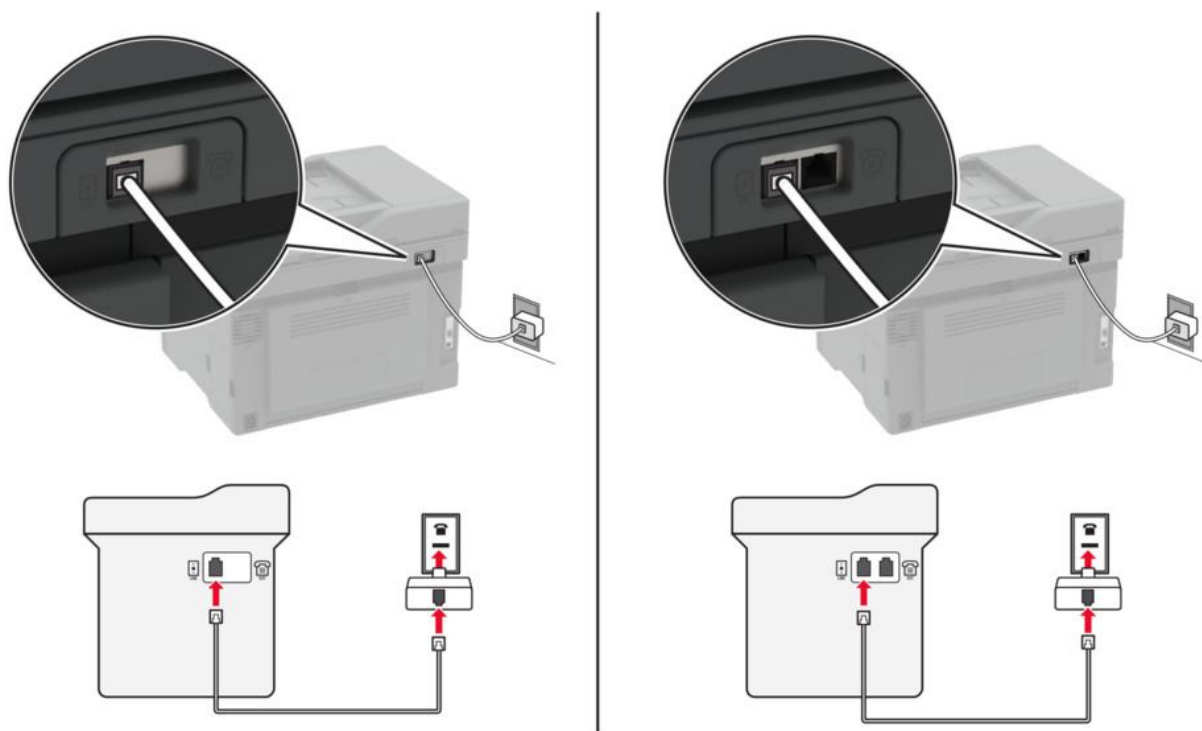

1. Connect one end of the telephone cable to the LINE port of the printer.
2. Connect the other end of the cable to the RJ-11 adapter, and then connect the adapter to the wall jack.

Note: If you want to connect another device with a non-RJ-11 connector to the same wall jack, then connect it directly to the telephone adapter.

Connecting to a distinctive ring service

A distinctive ring service lets you have multiple telephone numbers on one telephone line. Each telephone number is assigned a different ring pattern.

1. From the control panel, navigate to **Settings › Fax › Fax Setup › Fax Receive Settings › Admin Controls › Answer On**.
2. Select a ring pattern.

Setting the fax date and time

Note: Make sure that fax is configured. For more information, see the "Setting up the printer to fax" section.

1. From the control panel, navigate to **Settings › Device › Preferences › Date and Time › Configure**.
2. Configure the settings.

Configuring daylight saving time

Note: Make sure that fax is configured. For more information, see the "Setting up the printer to fax" section.

1. From the control panel, navigate to **Settings › Device › Preferences › Date and Time › Configure**.
2. In the **Time Zone** menu, select **(UTC+user) Custom**.
3. Select **UTC (GMT) Offset**, and then configure the settings.

Configuring the fax speaker settings

Note: Make sure that fax is configured. For more information, see the "Setting up the printer to fax" section.

1. From the control panel, navigate to **Settings › Fax › Fax Setup › Speaker Settings**.
2. Do the following:
 - Set **Speaker Mode** to **Always On**.
 - Set **Speaker Volume** to **High**.
 - Activate **Ringer Volume**.

Loading paper and specialty media

Setting the paper size and type

1. From the control panel, navigate to **Settings › Paper › Tray Configuration › Paper Size/Type**.
2. Select a paper source.
3. Set the paper size and type.

Configuring Universal paper settings

1. From the home screen, touch **Settings > Paper > Media Configuration > Universal Setup**.
2. Configure the settings.

Loading trays



CAUTION—TIPPING HAZARD

To reduce the risk of equipment instability, load each tray separately. Keep all other trays closed until needed.

1. Remove the tray.

Note: To avoid paper jams, do not remove trays while the printer is busy.



2. Flex, fan, and align the paper edges before loading.



3. Load the paper stack with the printable side faceup.




Notes

- Load letterhead faceup with the header toward the back of the tray for one-sided printing.
- Load letterhead facedown with the header toward the front of the tray for two-sided printing.
- Do not slide paper into the tray.
- To avoid paper jams, make sure that the stack height is below the maximum paper fill indicator.



4. Adjust the guides to match the size of the paper that you are loading.

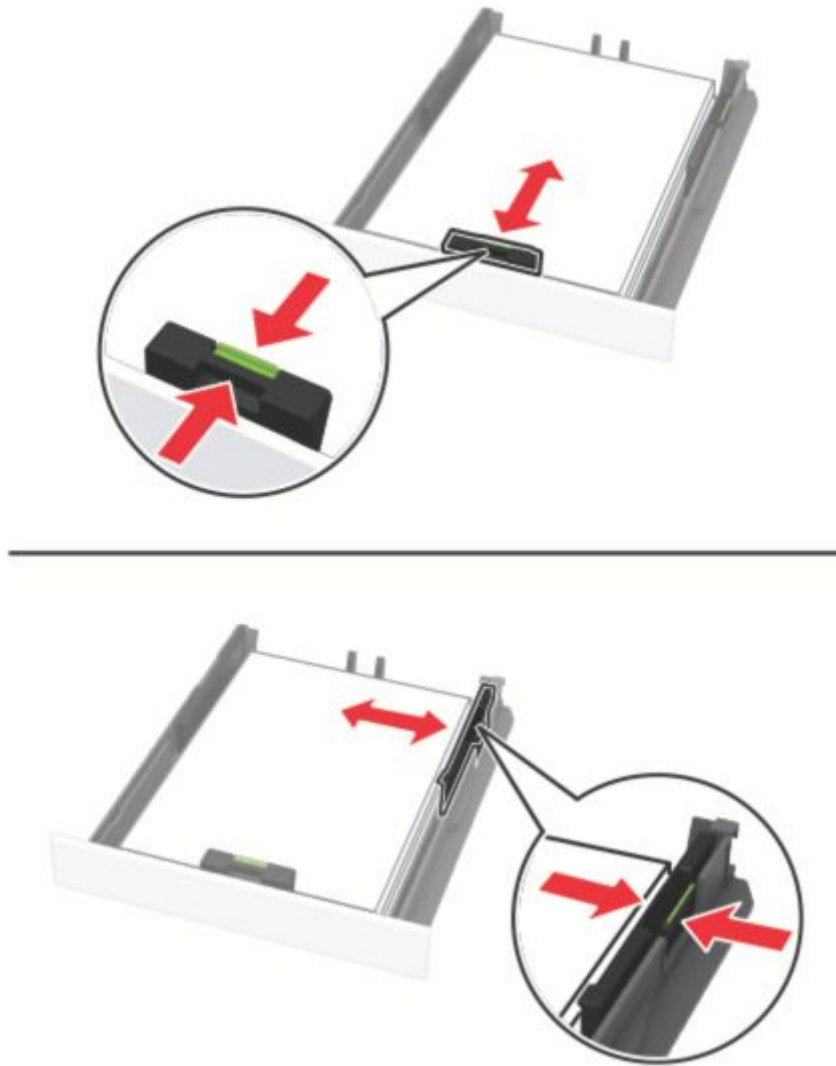

5. Insert the tray.


If necessary, set the paper size and paper type from the control panel to match the paper loaded.

Loading the manual feeder

Notes


- Do not load the manual feeder until all previous print jobs are complete and the printer has returned to Ready.
- Load only one sheet at a time into the manual feeder.
- If you load a sheet into the manual feeder, the printer will print that sheet next.

1. Adjust the guide to match the size of the paper that you are loading.

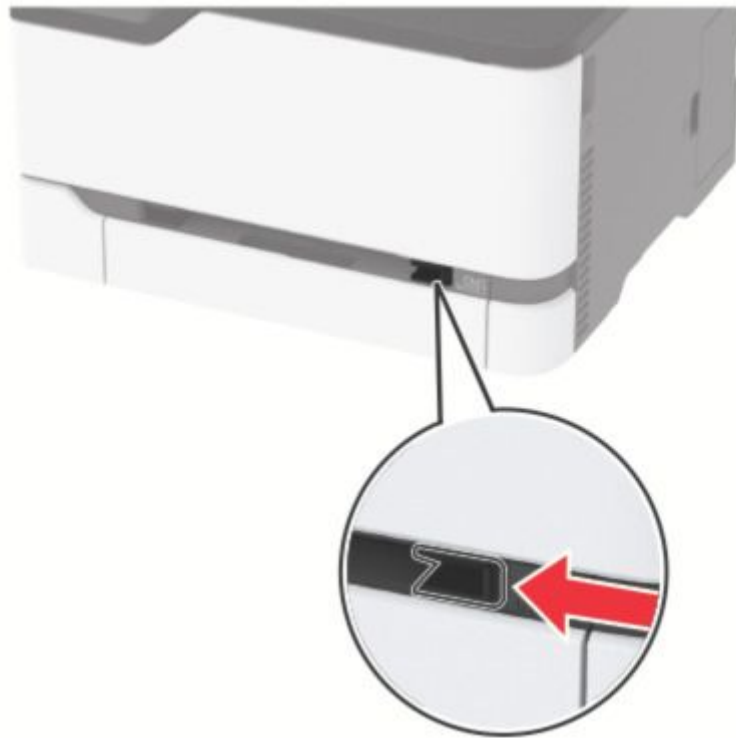


2. Load a sheet of paper with the printable side face up.


- For one-sided printing, load letterhead with the printable side face up and the top edge entering the printer first.

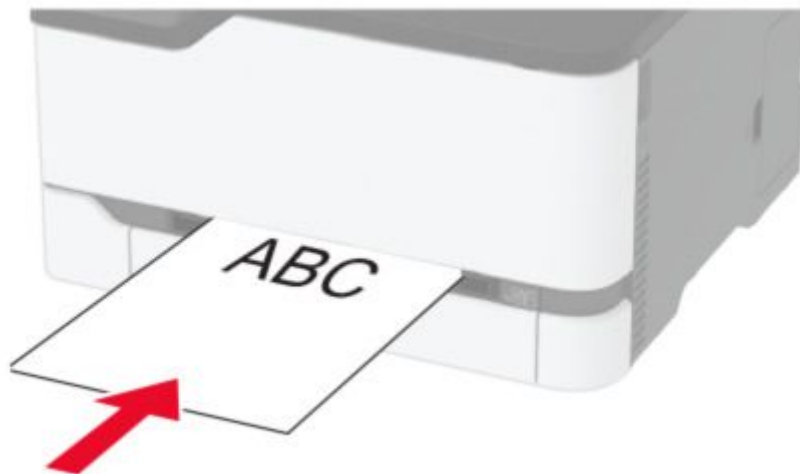

- For two-sided printing, load letterhead with the printable side face down and the top edge entering the printer last.

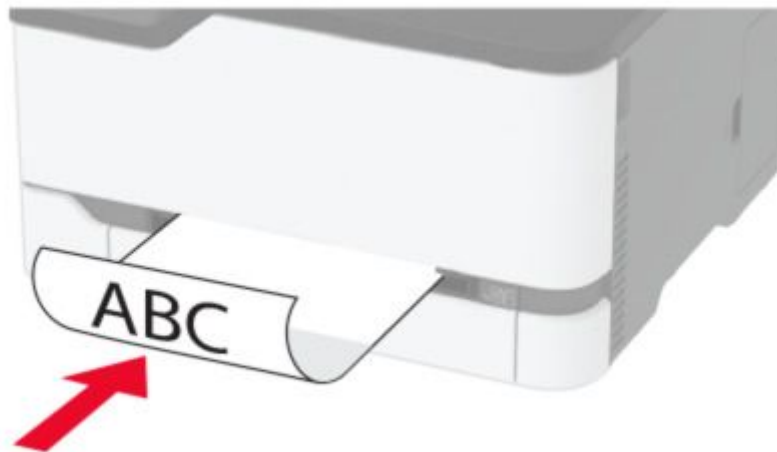

- Load envelope with the flap side down and against the right side of the paper guide.

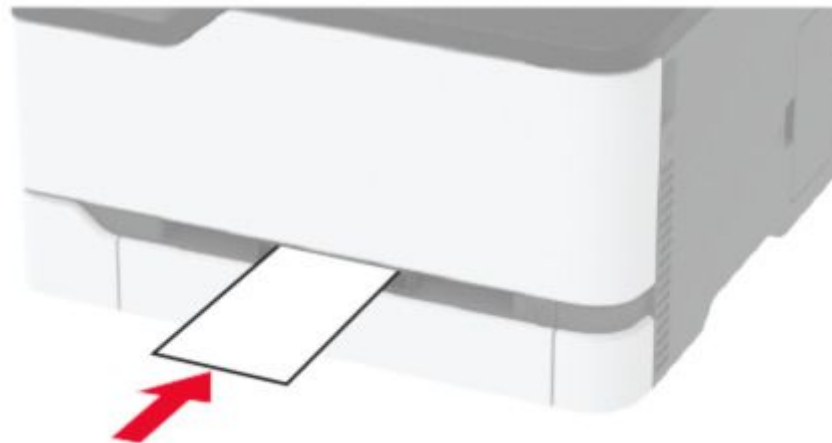

3. Feed the paper until its leading edge gets pulled in.

Notes

- To avoid paper jams, do not force paper into the manual feeder.
- Before loading another sheet, wait for a message to appear on the display.

Linking trays

1. From the control panel, navigate to **Settings › Paper › Tray Configuration › Paper Size/Type**.
2. Select the trays that you want to link, and then set the paper size and paper type.

Notes

- Make sure the trays are loaded with the same paper size and paper type.
- Make sure the paper in each tray is loaded in the same direction.

3. Return to the control panel, and then navigate to **Settings › Device › Maintenance › Configuration Menu › Tray Configuration**.

4. Set **Tray Linking** to **Automatic**.

To unlink the trays, make sure that no trays have the same paper size and paper type settings.

Warning—Potential Damage

The temperature of the fuser varies according to the specified paper type. To avoid printing issues, match the paper type setting in the printer with the paper loaded in the tray.

Installing and updating software, drivers, and firmware

Installing the printer software

Installing printer software lets your printer communicate with your computer. It enables full functionality, ensures compatibility with your operating system, and simplifies network or wireless setup. Installing the printer software also installs the print, scan, and fax drivers.

Note:

- Depending on your operating system, you may use the Microsoft IPP Class Driver or AirPrint to connect the printer to your computer. For more information, go to the Microsoft or Apple support site.
- To use the full finishing functionality, install the legacy print driver.

Before you begin, make sure that:

- For network printers, the printer and computer are connected to the same network. Write down the printer IP address that appears at the top of the printer display.
- For local printers, the printer is connected to the computer with a USB cable.

1. Go to <https://support.lexmark.com>, and then click **Drivers & downloads**.
2. In the **Search by Device Model** field, type the printer model, and then click **Find Drivers & Downloads**.
3. In the **Recommended Driver** section, click **Download Driver Package**.

Note: If your computer runs on the Linux operating system, then select a driver from the **Additional downloads compatible with [printer model]** section.

4. Click **Start Download**.
5. Run the installer, and then follow the on-screen instructions.

Installing the fax driver

1. Go to the [drivers and downloads](#) page.
2. Type the printer model, and then click **Find Drivers & Downloads**.
3. Click **Additional downloads**, and then download the appropriate fax installer package.

Note: You can save the file either to your computer or flash drive.

4. After downloading the fax installer package, locate, and then run the executable file (.exe).

Adding printers to a computer

Before you begin, do one of the following:

- Connect the printer and the computer to the same network, either Wi-Fi or Ethernet. For more information on connecting the printer to a Wi-Fi network, see [Connecting the printer to a Wi-Fi network](#).
- Enable the **Wi-Fi Direct** setting. From the control panel, navigate to **Settings > Network/Ports > Wi-Fi Direct > Enable Wi-Fi Direct**.
- Connect the printer to the computer using a USB cable. For more information on the location of the printer USB port, see [Printer ports on page 28](#).

For Windows users

1. Install the print driver on the computer. For more information, see [Installing the printer software on page 48](#).
2. Open **Printers & scanners**.
3. Click **Add device**, and then select the printer that you want to add.

If the printer that you want to add does not appear on the list, then do either of the following:

- For Wi-Fi Direct enabled printers, click **Show Wi-Fi Direct printers**, select a printer, click **Add device**, and then follow the on-screen instructions.
- For Ethernet-connected printers, click **Add a new device manually**, and then from the **Add Printer** window, do the following:
 - a. Select **Add a printer using an IP address or hostname**, and then click **Next**.
 - b. In the **Device type** field, select **TCP/IP Device**.
 - c. In the **Hostname or IP address** field, type the printer IP address, and then click **Next**.

Notes

- You can find the IP address at the top of the printer display.
- Make sure that the printer and computer are connected to the same network.

- d. Select a print driver, and then click **Next**.
- e. Select **Use the driver that is currently installed (recommended)**, and then click **Next**.
- f. Type a printer name, and then click **Next**.
- g. Click **Finish**.

For Macintosh users

1. Open **Printers & Scanners**.
2. Click **Add Printer, Scanner, or Fax**, and then select a printer.

Notes

- If you want custom printing features, then install the Lexmark print driver. For more information, see [Installing the printer software on page 48](#).
- If the Lexmark print driver is already installed, then do the following:
 - a. In the **Use** menu, choose **Select Software**, and then choose the Lexmark print driver.
 - b. Click **OK**.

3. Click **Add**.

Note: Depending on your printer model, a dialog may appear asking you to add a Fax printer.

Exporting a configuration file

Exporting a configuration file lets you save the current settings of your printer to a file, which you can use as a backup or apply to another printer.

1. Open a web browser, and then type the printer IP address in the address field.

Notes

- You can find the IP address at the top of the printer display.
- Make sure that the printer and computer are connected to the same network.

2. In the Embedded Web Server, click **Export Configuration**.
3. Select a configuration to export.

Note: Depending on the configuration that you selected, the files are exported in either ZIP or CSV format.

Importing a configuration file

Importing a configuration file lets you apply previously saved settings to your printer. This is useful when restoring a backup or setting up another printer with the same configuration.

1. Open a web browser, and then type the printer IP address in the address field.

Notes

- You can find the IP address at the top of the printer display.
- Make sure that the printer and computer are connected to the same network.

2. In the Embedded Web Server, click **Import Configuration**.
3. Browse to the location where the file is saved.

Note: Depending on the configuration that you selected, the files are saved in either ZIP or CSV format.

4. Click **Import**.

Adding available options in the print driver

For Windows users

1. Open **Printers & scanners**.
2. Select the printer that you want to update, and then do either of the following:
 - For Windows 7 or later, select **Printer properties**.
 - For earlier versions, select **Properties**.
3. Navigate to the **Configuration** tab, and then select **Update Now - Ask Printer**.
4. Click **Apply**, and then click **OK**.

For Macintosh users

1. Open **Printers & Scanners**.
2. Click **Add Printer, Scanner, or Fax**, and then select a printer.
3. Choose a print driver.
4. Apply the changes.

Printer firmware instructions

Checking the printer firmware version

Using the Embedded Web Server

1. Open a web browser, and then type the printer IP address in the address field.

Notes

- You can find the IP address at the top of the printer display.
- Make sure that the printer and computer are connected to the same network.

2. Click **Reports › Device › Device Information**.
3. Look for **Base**.

Note: The firmware version appears as sets of letters and numbers separated by periods. For example, ABCDE.123.123.

Using the control panel

1. From the control panel, navigate to **Settings > Device > About this Printer**.
2. Look for **Firmware Version**.

Note: The firmware version appears as sets of letters and numbers separated by periods. For example, ABCDE.123.123.

Downloading the printer firmware

Note: Download the firmware only if you plan to update it using the Embedded Web Server with a firmware flash file or a flash drive.

1. Go to www.lexmark.com/downloads, and then click **Drivers & downloads**.
2. In the **Search by Device Model** field, type the printer model, and then click **Find Drivers & Downloads**.
3. In the **Recommended Firmware** section, **Download Firmware Package**.
4. Accept the End-User License Agreement, and then click **Start Download**.


Updating firmware

Updating the firmware using the control panel

Keeping your printer firmware updated helps it run efficiently and securely. Firmware updates can improve performance, add new features, fix firmware or hardware issues, and enhance the security of your printer and network.

Using Notification Center

1. From the home screen, select the notification icon to go to the Notification Center screen.
2. Select **Firmware update available**.

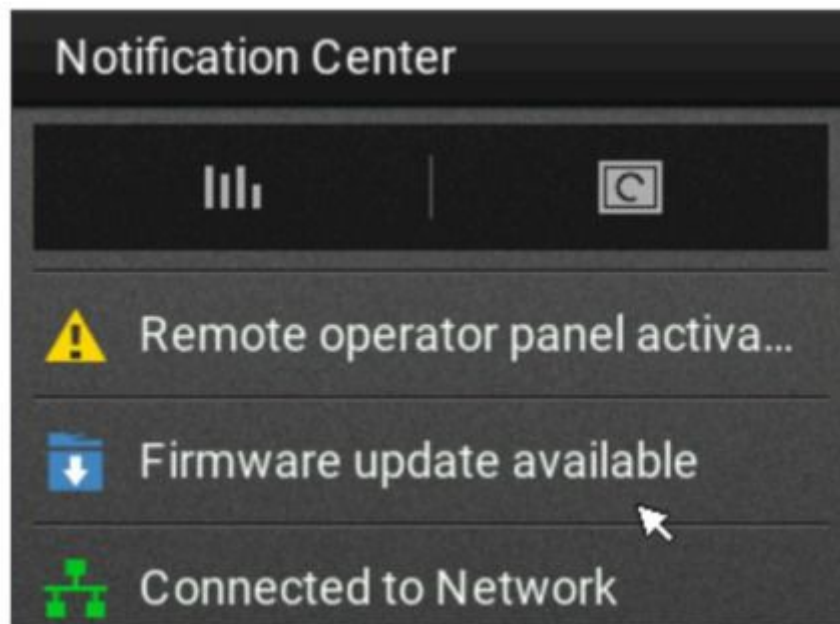

3. Select **Install now**.



The printer restarts automatically after the update.

Using the Settings menu

1. From the control panel, navigate to **Settings** > **Device**.
2. Depending on your printer model, do either of the following:
 - Select **Firmware Update** > **Check for updates**.
 - Select **Update firmware** > **Check for updates now**.
3. If an update is available, then select **Install now**.

The printer restarts automatically after the update.

Updating the firmware using the Embedded Web Server

Keeping your printer firmware up-to-date helps it run efficiently and securely. Firmware updates can improve performance, add new features, fix firmware or hardware issues, and enhance the security of your printer and network.

Using the update button

1. Open a web browser, and then type the printer IP address in the address field.

Notes

- You can find the IP address at the top of the printer display.
- Make sure that the printer and computer are connected to the same network.

2. Click **Device**.
3. Depending on your printer model, do either of the following:
 - Select **Firmware Update** › **Check for updates**.
 - Select **Update firmware** › **Check for updates now**.
4. If an update is available, then select **Install now**.

The printer restarts automatically after the update.

Using the firmware flash file (.fls)

Before you begin, make sure that:

- The printer and computer are connected to the same network.
- You have downloaded the firmware file (.fls). For more information, see [Downloading the printer firmware on page 52](#).

1. Open a web browser, and then type the printer IP address in the address field.

Notes

You can find the IP address at the top of the printer display.

2. Click **Device**.
3. Click **Firmware Update**.
4. In the **Update Firmware from File** section, click **Browse**.
5. Search, and then select the **.fls** file.
6. Click **Upload**.

The printer restarts automatically after the update.

Networking

Installing the wireless print server

1. Turn off the printer.
2. Install the adapter.



3. Attach the NFC card.



4. Turn on the printer.

Connecting the printer to a Wi-Fi network

Before you begin, make sure that:

- **Active Adapter** is set to **Auto**. From the control panel, navigate to **Settings** › **Network/Ports** › **Network Overview** › **Active Adapter**.
- The Ethernet cable is not connected to the printer.

1. From the control panel, navigate to **Settings** › **Network/Ports** › **Wireless** › **Setup On Printer Panel** › **Choose Network**.
2. Select a Wi-Fi network, and then type the network password.

Note: For printers with built-in Wi-Fi capability, a prompt for setting up the Wi-Fi network appears during initial setup.

Connecting the printer to a wireless network using Wi-Fi Protected Setup (WPS)

Before you begin, make sure that:

- The access point (wireless router) is WPS-certified or WPS-compatible. For more information, see the documentation that came with your access point.
- A wireless network adapter is installed in your printer. For more information, see the instructions that came with the adapter.
- Active Adapter is set to Auto. From the home screen, touch **Settings > Network/Ports > Network Overview > Active Adapter**.

Using the Push Button method

1. From the home screen, touch **Settings > Network/Ports > Wireless > Wi-Fi Protected Setup > Start Push Button Method**.
2. Follow the instructions on the display.

Using the personal identification number (PIN) method

1. From the home screen, touch **Settings > Network/Ports > Wireless > Wi-Fi Protected Setup > Start PIN Method**.
2. Copy the eight-digit WPS PIN.
3. Open a web browser, and then type the IP address of your access point in the address field.

Notes

- To know the IP address, see the documentation that came with your access point.
- If you are using a proxy server, then temporarily disable it to load the web page correctly.

4. Access the WPS settings. For more information, see the documentation that came with your access point.
5. Enter the eight-digit PIN, and then save the changes.

Configuring Wi-Fi Direct

Wi-Fi Direct® lets devices connect directly without using an access point (wireless router).

1. From the control panel, navigate to **Settings > Network/Ports > Wi-Fi Direct**.
2. Configure the settings.
 - **Enable Wi-Fi Direct**—Allow the printer to broadcast its Wi-Fi Direct network.
 - **Wi-Fi Direct Name**—Set a name for the network.

- **Wi-Fi Direct Password**—Set a password for a secure peer-to-peer connection.
- **Show Password on Setup Page**—Show the password on the Network Setup Page.
- **Preferred Channel Number**—Choose the preferred channel of the Wi-Fi Direct network.
- **Group Owner IP Address**—Assign the IP address of the group owner.
- **Auto-Accept Push Button Requests**—Let the printer accept connection requests automatically.

Note: Accepting push-button requests automatically is not secured.

Note: To find the Wi-Fi Direct password without showing it on the printer display, print the **Network Setup Page**. From the control panel, navigate to **Settings** › **Reports** › **Network** › **Network Setup Page**.

Connecting a mobile device to the printer using Wi-Fi Direct

Before connecting your mobile device, make sure that **Wi-Fi Direct** has been configured. For more information, see [Configuring Wi-Fi Direct](#).

Using the Wi-Fi Direct menu

Note: These instructions apply only to mobile devices running on the Android™ platform.

1. On your mobile device, open the **Wi-Fi** menu.
2. Enable **Wi-Fi**, and then tap .
3. Tap **Wi-Fi Direct**.
4. Select the printer Wi-Fi Direct name.
5. Confirm the connection on the printer control panel.

Using the Wi-Fi menu

1. On your mobile device, open the **Wi-Fi** menu.
2. Enable **Wi-Fi**, and then select the printer Wi-Fi Direct name.

Note: The string **DIRECT-xy** (where x and y are two random characters) is added before the Wi-Fi Direct name.

3. Enter the Wi-Fi Direct password.

Connecting a computer to the printer

Before connecting your computer, make sure that Wi-Fi Direct has been configured. For more information, see [Configuring Wi-Fi Direct](#).

For Windows users

1. Open **Printers & scanners**, and then click **Add device**.
2. Click **Show Wi-Fi Direct printers**, and then select the printer Wi-Fi Direct name.
3. From the printer display, take note of the eight-digit PIN of the printer.
4. Enter the PIN on the computer.

Note: If the print driver is not already installed, then Windows downloads the appropriate driver.

For Macintosh users

1. Click the wireless icon, and then select the printer Wi-Fi Direct name.

Note: The string DIRECT-xy (where x and y are two random characters) is added before the Wi-Fi Direct name.

2. Type the Wi-Fi Direct password.

Deactivating the Wi-Fi network

1. From the control panel, navigate to **Settings > Network/Ports > Network Overview > Active Adapter > Standard Network**.
2. Select **Yes** to restart the printer.

Checking the printer connectivity

1. Print the **Network Setup Page** report. From the control panel, navigate to **Settings > Reports > Network > Network Setup Page**.
2. In the **Network Overview** section, check if **Card Status** is connected.

If the status is not connected, then the wireless network or LAN is inactive or the network cable may be damaged. Contact your administrator for assistance.

Printing the Menu Settings Page

From the home screen, touch **Settings > Reports > Menu Settings Page**.

Secure the printer

Erasing printer memory

To erase volatile memory or buffered data in your printer, turn off the printer.

To erase non-volatile memory or individual settings, device and network settings, security settings, and embedded solutions, do the following:

1. From the home screen, touch **Settings > Device > Maintenance > Out of Service Erase**.
2. Select the **Sanitize all information on nonvolatile memory** check box, and then touch **OK**.
3. Select either **Start initial setup** or **Leave printer offline**, and then touch **OK**.

Restoring factory default settings

1. From the home screen, touch **Settings > Device > Restore Factory Defaults**.
2. In the Restore Settings menu, select the settings that you want to restore.
3. Touch **RESTORE**.
4. Follow the instructions on the display.

Statement of Volatility

Your printer contains various types of memory that can store device and network settings, and user data.

Type of memory	Description
Volatile memory	Your printer uses standard random access memory (RAM) to temporarily buffer user data during simple print jobs.
Non-volatile memory	Your printer may use two forms of non-volatile memory: EEPROM and NAND (flash memory). Both types are used to store operating system, device settings, and network information.

Erase the content of any installed printer memory in the following circumstances:

- The printer is being decommissioned.
- The printer is being moved to a different department or location.
- The printer is being serviced by someone from outside your organization.
- The printer is being removed from your premises for service.
- The printer is being sold to another organization.

Print

Printing from a computer

Note: For labels, card stock, and envelopes, set the paper size and type in the printer before printing the document.

1. From the document that you are trying to print, open the Print dialog.
2. If necessary, adjust the settings.
3. Print the document.

Printing from a mobile device

Printing from a mobile device using Lexmark Mobile Print

Lexmark™ Mobile Print allows you to send documents and images directly to a supported Lexmark printer.

1. Open the document, and then send or share the document to Lexmark Mobile Print.

Note: Some third-party applications may not support the send or share feature. For more information, see the documentation that came with the application.

2. Select a printer.
3. Print the document.

Printing from a mobile device using Mopria Print Service

Mopria® Print Service is a mobile printing solution for mobile devices running on Android™ version 5.0 or later. It allows you to print directly to any Mopria-certified printer.

Note: Make sure that you download the Mopria Print Service application from the Google Play™ store and enable it in the mobile device.

1. From your Android mobile device, launch a compatible application or select a document from your file manager.
2. Tap  > **Print**.
3. Select a printer, and then adjust the settings, if necessary.

4. Tap .

Printing from a mobile device using AirPrint

The AirPrint software feature is a mobile printing solution that allows you to print directly from Apple devices to an AirPrint-certified printer.

Notes

- Make sure that the Apple device and the printer are connected to the same network. If the network has multiple wireless hubs, then make sure that both devices are connected to the same subnet.
- This application is supported only in some Apple devices.

1. From your mobile device, select a document from your file manager or launch a compatible application.

2. Tap  > **Print**.

3. Select a printer, and then adjust the settings, if necessary.

4. Print the document.

Printing from a mobile device using Wi-Fi Direct®

Wi-Fi Direct® is a printing service that lets you print to any Wi-Fi Direct-ready printer.

Note: Make sure that the mobile device is connected to the printer wireless network. For more information, see [Connecting a mobile device to the printer](#).

1. From your mobile device, launch a compatible application or select a document from your file manager.
2. Depending on your mobile device, do one of the following:

- Tap  > **Print**.
- Tap  > **Print**.
- Tap  > **Print**.

3. Select a printer, and then adjust the settings, if necessary.

4. Print the document.

Printing from a flash drive

This feature is available only in some printer models.

1. Insert the flash drive.



Notes

- If you insert the flash drive when an error message appears, then the printer ignores the flash drive.
- If you insert the flash drive while the printer is processing other print jobs, then Busy appears on the display.

2. Print the document.

To print another document, select **USB Drive**.

Warning—Potential Damage

To avoid loss of data or printer malfunction, do not touch the flash drive or the printer in the area shown while actively printing, reading, or writing from the memory device.



Supported flash drives and file types

Flash drives

- Lexar JumpDrive S70 (16GB and 32GB)
- SanDisk Cruzer (16GB and 32GB)
- PNY Attaché (16GB and 32GB)

Notes

- The printer supports high-speed flash drives with full-speed standard.
- Flash drives must support the File Allocation Table (FAT) system.

File types

Documents	Images
• PDF (version 1.7 or earlier)* • Microsoft file formats (DOC, DOCX, XLS, XLSX, PPT, PPTX)*	• JPEG or JPG • TIFF or TIF* • GIF* • BMP* • PNG* • PCX* • DCX*

* Supported only in some printer models.

Configuring confidential jobs

Using the control panel

1. From the home screen, touch **Settings > Security > Confidential Print Setup**.
2. Configure the settings.

Using the Embedded Web Server

1. Open a web browser, and then type the printer IP address in the address field.

Notes

- View the printer IP address on the home screen. The IP address appears as four sets of numbers separated by periods, such as 123.123.123.123.
- If you are using a proxy server, then temporarily disable it to load the web page correctly.

2. Click **Settings > Security > Confidential Print Setup**.
3. Configure the settings.

Printing confidential and other held jobs

For Windows users

1. With a document open, click **File > Print**.
2. Select a printer, and then click **Properties, Preferences, Options, or Setup**.
3. Click **Print and Hold**.
4. Select **Use Print and Hold**, and then assign a user name.

5. Select the print job type (Confidential, Repeat, Reserve, or Verify).

If you select **Confidential**, then secure the print job with a personal identification number (PIN).

6. Click **OK** or **Print**.
7. From the printer home screen, release the print job.
 - For confidential print jobs, touch **Held jobs** > select your user name > **Confidential** > enter the PIN > select the print job > configure the settings > **Print**.
 - For other print jobs, touch **Held jobs** > select your user name > select the print job > configure the settings > **Print**.

For Macintosh users

Using Airprint

1. With a document open, choose **File > Print**.
2. Select a printer, and then from the drop-down menu following the Orientation menu, choose **PIN Printing**.
3. Enable **Print with PIN**, and then enter a four-digit PIN.
4. Click **Print**.
5. From the printer home screen, release the print job. Touch **Held jobs** > select your computer name > **Confidential** > enter the PIN > select the print job > **Print**.

Using the print driver

1. With a document open, choose **File > Print**.
2. Select a printer, and then from the drop-down menu following the Orientation menu, choose **Print and Hold**.
3. Choose **Confidential Print**, and then enter a four-digit PIN.
4. Click **Print**.
5. From the printer home screen, release the print job. Touch **Held jobs** > select your computer name > **Confidential** > select the print job > enter the PIN > **Print**.

Printing from a Cloud Connector profile

1. On the control panel, select **Cloud Connector**.
2. Select a cloud service provider, and then select a profile.

Note: For more information on creating a Cloud Connector profile, see [Creating a Cloud Connector profile on page 31](#).

3. Select **Print**, and then select a file.
4. Print the document.

Printing a font sample list

1. From the home screen, touch **Settings > Reports > Print > Print Fonts**.
2. Touch **PCL Fonts** or **PostScript Fonts**.

Placing separator sheets between copies

1. From the home screen, touch **Settings > Print > Layout > Separator Sheets > Between Copies**.
2. Print the document.

Canceling a print job

From the printer control panel

1. From the home screen, touch **Cancel Job**.
2. Select a job to cancel.

From the computer

1. Depending on the operating system, do either of the following:
 - Open the printers folder, and then select your printer.
 - From the System Preferences in the Apple menu, navigate to your printer, and then open the print queue.
2. Select a job to cancel.

Adjusting toner darkness

1. From the home screen, touch **Settings > Print > Quality > Toner Darkness**.
2. Select a setting.

Copy

Making copies

1. Load an original document into the ADF tray or on the scanner glass. For more information, see .

Note: To avoid a resized image, make sure the original document and output have the same paper size.

2. From the control panel, select **Copy**, and then specify the number of copies.

If necessary, adjust the copy settings.

3. To send the copy job, depending on your printer model, do either of the following:
 - Select **Copy**.
 - Select .

Copying photos

1. Place a photo on the scanner glass. For more information, see .
2. Copy the photo.

Copying on letterhead

1. Load an original document into the ADF tray or on the scanner glass. For more information, see .
2. From the control panel, navigate to **Copy** > **Copy From**.
3. Select the size of the original document.
4. Select **Copy To**, and then select the paper source that contains the letterhead.

If you loaded the letterhead into the manual feeder, navigate to **Copy To** > **Manual Feeder**, select a paper size, and then select **Letterhead**.

5. To send the copy job, depending on your printer model, do either of the following:
 - Select **Copy**.
 - Select .

Copying on both sides of the paper

1. Load an original document into the ADF tray or on the scanner glass. For more information, see .
2. Depending on the original document, select either **1 sided to 2 sided** or **2 sided to 2 sided**.
3. To send the copy job, depending on your printer model, do either of the following:

- Select **Copy**.
- Select .

Reducing or enlarging copies

1. Load an original document into the ADF tray or on the scanner glass. For more information, see .
2. From the control panel, depending on your printer model, do any of the following:
 - Navigate to **Copy** › **Scale**.
 - Navigate to **Copy** › **Settings** › **Scale**.
 - Navigate to **Copy** › **More Settings** › **Scale**.
3. Select - or + to decrease or increase the value by 1%.

Notes

- In certain printer models, select **Custom** to adjust the size manually.
- You can also select a size from the preset values, between 25% and 400%.
- Changing the size of the original document or output after setting **Scale** restores the scale value to **Auto**.

4. To send the copy job, depending on your printer model, do either of the following:
 - Select **Copy**.
 - Select , and then select **Finish the job**.

Collating copies

1. Load an original document into the ADF tray or on the scanner glass. For more information, see .
2. To send the copy job, depending on your printer model, do either of the following:
 - Select **Copy**.
 - Select .

Copying multiple pages onto a single sheet

1. Load an original document into the ADF tray or on the scanner glass. For more information, see .
2. To send the copy job, depending on your printer model, do either of the following:
 - Select **Copy**.
 - Select .

Copying cards

1. Load a card on the scanner glass. For more information, see .
2. To send the copy job, depending on your printer model, do either of the following:
 - Select **Copy**.
 - Select .

Creating a copy shortcut

Using the control panel

1. From the control panel, select **Copy**.
2. Configure the settings, and then select .
3. Type a shortcut name, and then click **OK**.

Using the Embedded Web Server

1. Open a web browser, and then type the printer IP address in the address field.

Notes

- You can find the IP address at the top of the printer display.
- Make sure that the printer and computer are connected to the same network.

2. Click **Shortcuts › Add Shortcut**.
3. In the **Shortcut Type** menu, select **Copy**.
4. Configure the settings.
5. Click **Save**.

Email

Configuring the email SMTP settings

Configure the Simple Mail Transfer Protocol (SMTP) settings to send a scanned document through email. The settings vary with each service provider. For more information, see [Email service providers](#).

Before you begin, make sure that the printer is connected to a network and the network is connected to the Internet.

Using the Embedded Web Server

1. Open a web browser, and then type the printer IP address in the address field.

Notes

- You can find the IP address at the top of the printer display.
- Make sure that the printer and computer are connected to the same network.

2. Click **Settings** > **Email**.
3. Configure the email settings. For more information, see [Email service providers](#).

Notes

- For email service providers that are not on the list, contact your provider and ask for the settings.
- For video instructions on configuring the SMTP settings for Gmail™ email service, go to <https://infoserve.lexmark.com/ref/common/configuring-email-video.html>.
- For Microsoft 365 or Outlook Live email service provider, you must register your printer to OAuth 2.0 Authentication. For more information, see [Setting up OAuth 2.0 Authentication for Email Server using the Embedded Web Server](#).

4. Click **Save**.

Setting up OAuth 2.0 Authentication for Email Server using the Embedded Web Server

1. Open a web browser, and then type the printer IP address in the address field.

Notes

- You can find the IP address at the top of the printer display.
- Make sure that the printer and computer are connected to the same network.

2. Click **Settings** > **Email**.
3. Click **Set Up OAuth 2 for Email Server**, and then click **Register**.

4. Go to <https://microsoft.com/devicelogin>.
5. Enter the code that was generated in the Embedded Web Server.
6. Log in to your Outlook account.
7. Follow the on-screen instructions.

Using the email setup wizard

Before using the wizard, make sure that the printer firmware is updated. For more information, see the **Updating firmware** section.

Notes

- These instructions apply only to certain printer models.
- Setting up the SMTP settings using the email setup wizard is not applicable for OAuth 2.0 Authentication.

1. From the control panel, select **Email**.
2. Select **Set up Now**, type your email address and then select **Next**.
3. Type the password, and then select **Done**.

Notes

- Depending on your email service provider, type your account password, app password, or authentication password. For more information on the password, see [Email service providers](#), and then look for Device Password.
- If your provider is not listed, then contact your provider and ask for the **Primary SMTP Gateway**, **Primary SMTP Gateway Port**, **Use SSL/TLS**, and **SMTP Server Authentication** settings. Proceed with the setup after getting the settings.

4. Select **Next**.
5. Configure the settings, and then select **Next**.
6. Select **Test Setup**.

Using the Settings menu

1. From the control panel, navigate to **Settings** > **Email** > **Email Setup**.

For non-touch-screen printer models, press ☐ to navigate through the settings.

2. Configure the email settings. For more information, see [Email service providers](#).

Note: If your service provider is not listed, then contact your provider.

Email service providers

Use the following table to determine the SMTP settings of your service provider.

Notes

- If you encounter errors using the settings provided, then contact your service provider.
- If your service provider is not listed, then contact your provider.

- [AOL Mail](#)
- [Comcast Mail](#)
- [Gmail](#)
- [iCloud Mail](#)
- [Mail.com](#)
- [NetEase Mail \(mail.126.com\)](#)
- [NetEase Mail \(mail.163.com\)](#)
- [NetEase Mail \(mail.yeah.net\)](#)
- [Outlook Live or Microsoft 365](#)
- [QQ Mail](#)
- [Sina Mail](#)
- [Sohu Mail](#)
- [Yahoo! Mail](#)
- [Zoho Mail](#)

AOL Mail

Setting	Value
Primary SMTP Gateway	smtp.aol.com
Primary SMTP Gateway Port	587
Use SSL/TLS	Required
Require Trusted Certificate	Disabled
Reply Address	Your email address
SMTP Server Authentication	Login / Plain
Device-Initiated Email	Use Device SMTP Credentials
Device UserID	Your email address
Device Password	App password
	Note: To create an app password, go to the AOL Account Security page, log in to your account, and then click Generate app password .

Comcast Mail

Setting	Value
Primary SMTP Gateway	smtp.comcast.net

Email

Setting	Value
Primary SMTP Gateway Port	587
Use SSL/TLS	Required
Require Trusted Certificate	Disabled
Reply Address	Your email address
SMTP Server Authentication	Login / Plain
Device-Initiated Email	Use Device SMTP Credentials
Device UserID	Your email address
Device Password	Account password

Gmail™

Note: Make sure that two-step verification is enabled on your Google account. To enable two-step verification, go to the [Google Account Security](#) page, log in to your account, and then from the **Security & sign-in** section, enable **2-Step Verification**.

Setting	Value
Primary SMTP Gateway	smtp.gmail.com
Primary SMTP Gateway Port	587
Use SSL/TLS	Required
Require Trusted Certificate	Disabled
Reply Address	Your email address
SMTP Server Authentication	Login / Plain
Device-Initiated Email	Use Device SMTP Credentials
Device UserID	Your email address
Device Password	App password

Notes

- To create an app password, go to <https://myaccount.google.com/apppasswords>.
- "App passwords" is available only if two-step verification is enabled.

iCloud Mail

Note: Make sure that two-step verification is enabled on your account.

Setting	Value
Primary SMTP Gateway	smtp.mail.me.com

Email

Setting	Value
Primary SMTP Gateway Port	587
Use SSL/TLS	Required
Require Trusted Certificate	Disabled
Reply Address	Your email address
SMTP Server Authentication	Login / Plain
Device-Initiated Email	Use Device SMTP Credentials
Device UserID	Your email address
Device Password	App password

Note: To create an app password, go to the [iCloud Account Management](#) page, log in to your account, and then from the **Security** section, click **Generate Password**.

Mail.com

Setting	Value
Primary SMTP Gateway	smtp.mail.com
Primary SMTP Gateway Port	587
Use SSL/TLS	Required
Require Trusted Certificate	Disabled
Reply Address	Your email address
SMTP Server Authentication	Login / Plain
Device-Initiated Email	Use Device SMTP Credentials
Device UserID	Your email address
Device Password	Account password

NetEase Mail (mail.126.com)

Note: Make sure that the SMTP service is enabled on your account. To enable the service, from the NetEase Mail home page, click **Settings** › **POP3/SMTP/IMAP**, and then enable either **IMAP/SMTP service** or **POP3/SMTP service**.

Setting	Value
Primary SMTP Gateway	smtp.126.com
Primary SMTP Gateway Port	465
Use SSL/TLS	Required
Require Trusted Certificate	Disabled

Email

Setting	Value
Reply Address	Your email address
SMTP Server Authentication	Login / Plain
Device-Initiated Email	Use Device SMTP Credentials
Device UserID	Your email address
Device Password	Authorization password
	Note: The authorization password is provided when IMAP/SMTP service or POP3/SMTP service is enabled.

NetEase Mail (mail.163.com)

Note: Make sure that the SMTP service is enabled on your account. To enable the service, from the NetEase Mail home page, click **Settings** › **POP3/SMTP/IMAP**, and then enable either **IMAP/SMTP service** or **POP3/SMTP service**.

Setting	Value
Primary SMTP Gateway	smtp.163.com
Primary SMTP Gateway Port	465
Use SSL/TLS	Required
Require Trusted Certificate	Disabled
Reply Address	Your email address
SMTP Server Authentication	Login / Plain
Device-Initiated Email	Use Device SMTP Credentials
Device UserID	Your email address
Device Password	Authorization password
	Note: The authorization password is provided when IMAP/SMTP service or POP3/SMTP service is enabled.

NetEase Mail (mail.yeah.net)

Note: Make sure that the SMTP service is enabled on your account. To enable the service, from the NetEase Mail home page, click **Settings** › **POP3/SMTP/IMAP**, and then enable either **IMAP/SMTP service** or **POP3/SMTP service**.

Setting	Value
Primary SMTP Gateway	smtp.yeah.net
Primary SMTP Gateway Port	465
Use SSL/TLS	Required

Email

Setting	Value
Require Trusted Certificate	Disabled
Reply Address	Your email address
SMTP Server Authentication	Login / Plain
Device-Initiated Email	Use Device SMTP Credentials
Device UserID	Your email address
Device Password	Authorization password
Note: The authorization password is provided when IMAP/SMTP service or POP3/SMTP service is enabled.	

Outlook Live or Microsoft 365

Setting	Value (OAuth2.0 Authentication)
Primary SMTP Gateway	smtp.office365.com
Primary SMTP Gateway Port	587
Use SSL/TLS	Required
Require Trusted Certificate	Disabled
Reply Address	The email address used to register OAuth 2.0 Authentication
SMTP Server Authentication	OAuth2.0
User-Initiated Email	Use Device SMTP Credentials
Device-Initiated Email	Use Device SMTP Credentials
Device UserID	N/A
Device Password	N/A

Note: For more setup options for business using Microsoft 365, go to the [Microsoft 365 help page](#).

QQ Mail

Note: Make sure that the SMTP service is enabled on your account. To enable the service, from the QQ Mail home page, click **Settings > Account**, and then from the POP3/IMAP/SMTP/Exchange/CardDAV/CalDAV Service section, enable either **POP3/SMTP service** or **IMAP/SMTP service**.

Setting	Value
Primary SMTP Gateway	smtp.qq.com
Primary SMTP Gateway Port	587
Use SSL/TLS	Required
Require Trusted Certificate	Disabled

Email

Setting	Value
Reply Address	Your email address
SMTP Server Authentication	Login / Plain
Device-Initiated Email	Use Device SMTP Credentials
Device UserID	Your email address
Device Password	Authorization code

Note: To generate an authorization code, from the QQ Mail home page, click **Settings > Account**. From the POP3/IMAP/SMTP/Exchange/CardDAV/CalDAV Service section, click **Generate authorization code**.

Sina Mail

Note: Make sure that the POP3/SMTP service is enabled on your account. To enable the service, from the Sina Mail home page, click **Settings > More settings > User-end POP/IMAP/SMTP**, and then enable **POP3/SMTP service**.

Setting	Value
Primary SMTP Gateway	smtp.sina.com
Primary SMTP Gateway Port	587
Use SSL/TLS	Required
Require Trusted Certificate	Disabled
Reply Address	Your email address
SMTP Server Authentication	Login / Plain
Device-Initiated Email	Use Device SMTP Credentials
Device UserID	Your email address
Device Password	Authorization code

Note: To create an authorization code, from the email home page, click **Settings > More settings > User-end POP/IMAP/SMTP**, and then enable **Authorization code status**.

Sohu Mail

Note: Make sure that the SMTP service is enabled on your account. To enable the service, from the Sohu Mail home page, click **Options > Settings > POP3/SMTP/IMAP**, and then enable either **IMAP/SMTP service** or **POP3/SMTP service**.

Setting	Value
Primary SMTP Gateway	smtp.sohu.com

Email

Setting	Value
Primary SMTP Gateway Port	465
Use SSL/TLS	Required
Require Trusted Certificate	Disabled
Reply Address	Your email address
SMTP Server Authentication	Login / Plain
Device-Initiated Email	Use Device SMTP Credentials
Device UserID	Your email address
Device Password	Independent password

Note: The independent password is provided when IMAP/SMTP service or POP3/SMTP service is enabled.

Yahoo! Mail

Setting	Value
Primary SMTP Gateway	smtp.mail.yahoo.com
Primary SMTP Gateway Port	587
Use SSL/TLS	Required
Require Trusted Certificate	Disabled
Reply Address	Your email address
SMTP Server Authentication	Login / Plain
Device-Initiated Email	Use Device SMTP Credentials
Device UserID	Your email address
Device Password	App password

Note: To create an app password, go to the [Yahoo Account Security](#) page, log in to your account, and then click **Generate app password**.

Zoho Mail

Setting	Value
Primary SMTP Gateway	smtp.zoho.com
Primary SMTP Gateway Port	587
Use SSL/TLS	Required
Require Trusted Certificate	Disabled

Setting	Value
Reply Address	Your email address
SMTP Server Authentication	Login / Plain
Device-Initiated Email	Use Device SMTP Credentials
Device UserID	Your email address
Device Password	Account password or app password

Notes

- For accounts with two-step verification disabled, use your account password.
- For accounts with two-step verification enabled, use an app password. To create an app password, go to the [Zoho Mail Account Security](#) page, log in to your account, and then from the Application-Specific Passwords section, click **Generate New Password**.

Scanning to email

Before you begin, make sure the SMTP settings are configured. For more information, see [Configuring the email SMTP settings on page 71](#).

1. Load an original document into the ADF tray or on the scanner glass. For more information, see .
2. To send the scan job, depending on your printer model, do either of the following:
 - Select **Scan**.
 - Select .

Creating an email shortcut

Using the control panel

1. Type the email address, and then select **Next**.
2. Select .
3. Create a shortcut.

Using the Embedded Web Server

1. Open a web browser, and then type the printer IP address in the address field.

Notes

- You can find the IP address at the top of the printer display.
- Make sure that the printer and computer are connected to the same network.

2. Click **Shortcuts › Add Shortcut**.
3. From the **Shortcut Type** menu, select **Email**.
4. Configure the settings.
5. Click **Save**.

Fax

Sending a fax

Note: Make sure that fax is configured. For more information, see the **Setting up the printer to fax** section.

Using the control panel

1. Load an original document into the ADF tray or on the scanner glass. For more information, see .
2. If necessary, adjust the settings.
3. To send the fax job, depending on your printer model, do either of the following:
 - Select **Send**.
 - Select .

Using the computer

For Windows users

1. With a document open, click **File** > **Print**.
2. Select a printer, and then click **Properties**, **Preferences**, **Options**, or **Setup**.
3. Click **Fax** > **Enable fax** > **Always display settings prior to faxing**, enter the recipient number, and then click **OK**.
4. Click **Print**, and then click **OK**.

For Macintosh users

1. With a document open, choose **File** > **Print**.
2. Select the printer that has **- Fax** added after its name.
3. In the **To** field, enter the recipient number.
If necessary, configure the settings.
4. Send the fax.

Scheduling a fax

1. Load an original document into the ADF tray or on the scanner glass. For more information, see .
2. Select **Send Time**, configure the date and time, and then select .
If necessary, configure other fax settings.
3. Send the fax.

Creating a fax destination shortcut

1. Select .
2. Create a shortcut.

Changing the fax resolution

1. Load an original document into the ADF tray or on the scanner glass. For more information, see .
2. Select **Resolution**, and then select a setting.
3. To send the fax job, depending on your printer model, do either of the following:
 - Select **Send**.
 - Select .

Adjusting the fax darkness

1. Load an original document into the ADF tray or on the scanner glass. For more information, see .
2. To send the fax job, depending on your printer model, do either of the following:
 - Select **Send**.
 - Select .

Printing a fax log

1. From the control panel, navigate to **Settings** › **Reports** › **Fax**.
2. Select a fax log.

Blocking junk faxes

1. From the control panel, navigate to **Settings** › **Fax** › **Fax Setup** › **Fax Receive Settings** › **Admin Controls**.
2. Enable the **Block No Name Fax** menu.

Holding faxes

- 1.
2. Select a setting.

Forwarding a fax

1. From the control panel, navigate to **Settings › Fax › Fax Setup › Fax Receive Settings › Admin Controls**.
2. Select **Fax Forwarding**, and then select **Print and Forward** or **Forward**.
3. In the **Forward to** menu, select a destination and then configure the settings.

Scan

Scanning to a computer

For Windows users

Using Lexmark Scanback Utility

1. Go to <https://support.lexmark.com>, and then click **Drivers & downloads**.
2. In the **Search by Device Model** field, type the printer model, and then click **Find Drivers & Downloads**.
3. Click **Additional downloads compatible with [printer model]**, and then download and install Lexmark Scanback Utility.
4. Load an original document into the ADF tray or on the scanner glass. For more information, see [Using the automatic document feeder and scanner glass on page 17](#).
5. From the computer, run **Lexmark Scanback Utility**, and then click **Create profile**.

Note: If you prefer to use an existing scanning profile, then click **Existing profile**.

6. Click **Setup**, and then from the menu that appears, click **Add** to add the IP address.

Notes

- You can find the IP address at the top of the printer display.
- Make sure that the printer and computer are connected to the same network.

7. From the **Select document format to be scanned** section, select the original document size.
8. From the **Select file format for scan output** section, select an output file resolution and format, and then click **Next**.
9. Type a scan profile name.
10. Click **Browse**, select the destination folder where you want to save the scanned document, and then type a file name.

Note: To reuse the scan profile, from the **Name your shortcut** field, type a shortcut name, and then click **Save Profile**.

11. Click **Finish**.
12. From the control panel, navigate to **Scan Profiles**, and then select the scan profile that you created in step 6.

Note: Make sure that the **Scan Profiles** app is enabled. From the control panel, navigate to **Settings > Device > Home Screen Customization**. From the **Page 1** column, add **Scan Profiles**, and then click **Save**.

13. From the computer, click **Scan Complete**.

Using Windows Fax and Scan

1. Load an original document into the ADF tray or on the scanner glass. For more information, see [Using the automatic document feeder and scanner glass on page 17](#).
2. From the computer, open **Windows Fax and Scan**.
3. Click **New Scan**, and then select a scanner source.

If necessary, change the scan settings.
4. Scan the document.
5. Click **Save as**, type a file name, and then click **Save**.

For Macintosh users

1. Load an original document into the ADF tray or on the scanner glass. For more information, see [Using the automatic document feeder and scanner glass on page 17](#).
2. From the computer, do either of the following:
 - Open **Image Capture**.
 - Open **Printers & Scanners**, select a printer, and then click **Scan > Open Scanner**.
3. From the Scanner dialog, do one or more of the following:
 - Select the location that you want to save the scanned document to.
 - Select the size of the original document.
 - To scan from the ADF, from the **Scan Menu**, select **Document Feeder** or enable **Use Document Feeder**.

If necessary, configure the scan settings.

4. Click **Scan**.

Scanning to an FTP server using a shortcut

1. Create an FTP shortcut.
 - a. Open a web browser, and then type the printer IP address in the address field.
- Notes**

 - You can find the IP address at the top of the printer display.
 - Make sure that the printer and computer are connected to the same network.
- b. Navigate to **Shortcuts > Add Shortcut**.
 - c. From the **Shortcut Type** menu, select **FTP**, and then configure the settings.
 - d. Apply the changes.
2. Load an original document face up, short edge first into the ADF tray or face down on the scanner glass.

Note: If you are loading a document into the ADF tray, then adjust the paper guides.

3. From the control panel, navigate to **Shortcuts > FTP**.
4. Select the shortcut.

Scanning to a network folder using a shortcut

1. Create a network folder shortcut.
 - a. Open a web browser, and then type the printer IP address in the address field.

Notes

- You can find the IP address at the top of the printer display.
- Make sure that the printer and computer are connected to the same network.

- b. Navigate to **Shortcuts** > **Add Shortcut**.
 - c. From the **Shortcut Type** menu, select **Network Folder**, and then configure the settings.
 - d. Apply the changes.
2. Load an original document face up, short edge first into the ADF tray or face down on the scanner glass.

Note: If you are loading a document into the ADF tray, then adjust the paper guides.

3. From the control panel, navigate to **Shortcuts** > **Scan to Network**.
4. Select the shortcut.

Scanning to a flash drive

This feature is available only in certain printer models.

1. Load an original document into the ADF tray or on the scanner glass. For more information, see .
2. Insert the flash drive into the front USB port.



3. Touch **Scan to USB** and adjust the settings if necessary.

Notes

- To save the scanned document to a folder, touch **Scan to**, select a folder, and then touch **Scan Here**.
- If the USB Drive screen does not appear, then touch **USB Drive** on the control panel.

4. To send the scan job, depending on your printer model, do either of the following:

- Select **Scan**.

- Select .

Warning—Potential Damage

To avoid loss of data or printer malfunction, do not touch the flash drive or the printer in the area shown while actively printing, reading, or writing from the memory device.



Scanning to a Cloud Connector profile

1. Load an original document face up, short edge first into the ADF tray or face down on the scanner glass.

Note: If you are loading a document into the ADF tray, then adjust the paper guides.

2. From the control panel, select **Cloud Connector**.
3. Select a cloud service provider, and then select a profile.

If necessary, enter your PIN.

Note: For more information on creating a Cloud Connector profile, see [Creating a Cloud Connector profile on page 31](#).

4. Select **Scan**, and then assign a filename and destination folder.
5. Select **Scan Here**.

If necessary, change the scan settings.

6. Select .

Use printer menus

Menu map

Device	• Preferences • Eco-Mode • Remote Operator Panel • Notifications • Power Management	• Anonymous Data Collection • Restore Factory Defaults • Maintenance • Visible Home Screen Icons • About this Printer
Print	• Layout • Setup • Quality	• PostScript • PCL • Image
Paper	• Tray Configuration	• Media Configuration
Copy	Copy Defaults	
Fax ¹	Fax Defaults	
E-mail	• E-mail Setup	• E-mail Defaults
FTP	FTP Defaults	
USB Drive ¹	• Flash Drive Scan	• Flash Drive Print
Network/Ports	• Network Overview • Wireless • Wi-Fi Direct • Ethernet • TCP/IP • SNMP	• IPSec • 802.1x • LPD Configuration • HTTP/FTP Settings • USB • Restrict external network access

Security	• Login methods ² • Certificate Management ² • Login Restrictions	• Confidential Print Setup • Erase Temporary Data Files • Miscellaneous
Cloud Connector	Enable/Disable Connectors	
Reports	• Menu Settings Page • Device • Print	• Shortcuts • Fax • Network
Troubleshooting	Print Quality Test Pages	Cleaning the Scanner

¹ Available only in some printer models.

² Appears only in the Embedded Web Server.

Device

Preferences

Menu item	Description
Display Language [List of languages]	Set the language of the text that appears on the display.
Country/Region [List of countries or regions]	Identify the country or region where the printer is configured to operate.
Run initial setup No* Yes	Run the setup wizard.
Keyboard Keyboard Type [List of languages]	Select a language as a keyboard type. Note: All the Keyboard Type values may not appear or may require special hardware to appear.
Displayed information Display Text 1 (IP Address*) Display Text 2 (Date/Time*) Custom Text 1 Custom Text 2	Specify the information to appear on the home screen.

Use printer menus

Menu item	Description
Date and Time Configure Current Date and Time Manually Set Date and Time Date Format (MM-DD-YYYY*) Time Format (12 hour A.M./P.M.*) Time Zone	Configure the printer date and time.
Date and Time Network Time Protocol Enable NTP (On*) NTP Server Enable Authentication	Configure the settings for Network Time Protocol (NTP). Note: When Enable Authentication is set to MD5 key, Key ID and Password appear.
Paper Sizes U.S.* Metric	Specify the unit of measurement for paper sizes. Note: The country or region selected in the initial setup wizard determines the initial paper size setting.
Screen Brightness 20–100% (100*)	Adjust the brightness of the display.
Flash Drive Access Disabled Enabled*	Enable access to the flash drive.
One Page Flatbed Scanning On Off*	Set copies from the scanner glass to only one page at a time.
Screen Timeout 5–300 (60*)	Set the idle time in seconds before the display shows the home screen, or before the printer logs out a user account automatically.

Notes

An asterisk (*) next to a value indicates the factory default setting.

Eco-Mode

Menu item	Description
Print Sides 1-Sided* 2-Sided	Specify whether to print on one side or two sides of the paper.

Menu item	Description
Print Pages per Side Off* 2 pages per side 3 pages per side 4 pages per side 6 pages per side 9 pages per side 12 pages per side 16 pages per side	Print multiple page images on one side of a sheet of paper.
Print Toner Darkness Light Normal* Dark	Determine the lightness or darkness of text or images.
Copy Sides 1 sided to 1 sided* 1 sided to 2 sided	Specify whether to print on one side or both sides of the paper.
Copy Pages per Side Off* 2 Portrait pages 4 Portrait pages 2 Landscape pages 4 Landscape pages	Specify the number of page images to print on one side of a sheet of paper.
Copy Darkness 1-9 (5*)	Adjust the darkness of the scanned image.

Note: An asterisk (*) next to a value indicates the factory default setting.

Remote Operator Panel

Menu item	Description
External VNC Connection Don't Allow* Allow	Connect an external Virtual Network Computing (VNC) client to the remote control panel.

Menu item	Description
Authentication Type None* Standard Authentication	Set the authentication type when accessing the VNC client server.
VNC Password	Specify the password to connect to the VNC client server. Note: This menu item appears only if Authentication Type is set to Standard Authentication.

Note: An asterisk (*) next to a value indicates the factory default setting.

Notifications

Menu item	Description
ADF Loaded Beep Off On*	Enable a sound when loading paper into the ADF.
Alarm Control Off Single* Continuous	Set the number of times that the alarm sounds when the printer requires user intervention.
Supplies Show Supply Estimates Show estimates* Do not show estimates	Show the estimated status of the supplies.
Supplies Cartridge Alarm Off Single* Continuous	Set the number of times that the alarm sounds when the cartridge is low.
Supplies Custom Supply Notifications	Configure notification settings when the printer requires user intervention. Note: This menu item appears only in the Embedded Web Server.
E-mail Alerts Setup E-mail Setup Primary SMTP Gateway	Type the IP address or host name of the primary SMTP server for sending e-mail.

Menu item	Description
E-mail Alerts Setup E-mail Setup Primary SMTP Gateway Port 1–65535 (25*)	Enter the port number of the primary SMTP server.
E-mail Alerts Setup E-mail Setup Secondary SMTP Gateway	Type the server IP address or host name of your secondary or backup SMTP server.
E-mail Alerts Setup E-mail Setup Secondary SMTP Gateway Port 1–65535 (25*)	Enter the server port number of your secondary or backup SMTP server.
E-mail Alerts Setup E-mail Setup SMTP Timeout 5–30 seconds (30*)	Specify how long before the printer times out if the SMTP server does not respond.
E-mail Alerts Setup E-mail Setup Reply Address	Specify a reply address in the e-mail.
E-mail Alerts Setup E-mail Setup Always use SMTP default Reply Address Off* On	Use the SMTP default reply address.
E-mail Alerts Setup E-mail Setup Use SSL/TLS Disabled* Negotiate Required	Send an e-mail using an encrypted link.
E-mail Alerts Setup E-mail Setup Require Trusted Certificate On* Off	Require a trusted certificate when accessing the SMTP server.

Menu item	Description
E-mail Alerts Setup E-mail Setup SMTP Server Authentication No authentication required* Login /Plain NTLM CRAM-MD5 Digest-MD5 Kerberos 5	Set the authentication type for the SMTP server.
E-mail Alerts Setup E-mail Setup Device-Initiated E-mail None* Use Device SMTP Credentials	Set whether credentials are required for device-initiated e-mails.
E-mail Alerts Setup E-mail Setup Device Userid	Specify the user ID to connect to the SMTP server.
E-mail Alerts Setup E-mail Setup Device Password	Specify the password to connect to the SMTP server.
E-mail Alerts Setup E-mail Setup NTLM Domain	Specify the domain name for the NTLM security protocol.
Error Prevention Jam Assist Off On*	Set the printer to check for jammed paper automatically.
Error Prevention Auto Continue Disabled Enabled* (5 seconds) Auto Continue Time	Let the printer continue processing or printing a job automatically after clearing certain attendance conditions.

Menu item	Description
Error Prevention Auto Reboot Auto Reboot Reboot when idle Reboot always* Reboot never	Set the printer to restart when an error occurs.
Error Prevention Auto Reboot Max Auto Reboots (2*)	Set the number of automatic reboots that the printer can perform.
Error Prevention Auto Reboot Auto Reboot Window (720*)	Specify the average uptime (in minutes) of the printer. Notes • If the average uptime is greater than this number, then a reboot is allowed. • If the average uptime is less than this number, then the printer stops and shows the service error screen.
Error Prevention Auto Reboot Auto Reboot Counter	Show a read-only information of the reboot counter.
Error Prevention Display Short Paper Error On Auto-clear*	Set the printer to show a message when a short paper error occurs. Note: Short paper refers to the size of the paper loaded.
Error Prevention Page Protect Off* On	Set the printer to process the entire page into the memory before printing it.
Jam Content Recovery Jam Recovery Off On Auto*	Set the printer to reprint jammed pages.

Menu item	Description
Jam Content Recovery Scanner Jam Recovery Job level Page level*	Specify how to restart a scan job after resolving a paper jam.

Note: An asterisk (*) next to a value indicates the factory default setting.

Power Management

Menu item	Description
Sleep Mode Profile Print from Sleep Mode Stay awake after printing Enter Sleep Mode after printing*	Set the printer to stay in Ready mode or return to Sleep mode after printing.
Timeouts Sleep Mode 1–120 minutes (15*)	Set the idle time before the printer begins operating in Sleep mode.
Timeouts Hibernate Timeout Disabled 1 hour 2 hours 3 hours 6 hours 1 day 2 days 3 days* 1 week 2 weeks 1 month	Set the time before the printer turns off.
Timeouts Hibernate Timeout on Connection Hibernate Do Not Hibernate*	Set Hibernate Timeout to turn off the printer while an active Ethernet connection exists.

Note: An asterisk (*) next to a value indicates the factory default setting.

Anonymous Data Collection

Menu item	Description
Anonymous Data Collection Device Usage and Performance Information None*	Send printer usage and performance information to Lexmark. Note: Anonymous Data Send Time appears only when you set Anonymous Data Collection to Device Usage and Performance.
Anonymous Data Send Time Start Time Stop Time	

Note: An asterisk (*) next to a value indicates the factory default setting.

Restore Factory Defaults

Menu item	Description
Restore Settings Restore all settings Restore printer settings Restore network settings Restore fax settings	Restore the printer factory default settings.

Maintenance

Config Menu

Menu item	Description
USB Configuration USB PnP 1* 2	Change the USB driver mode of the printer to improve its compatibility with a personal computer.
USB Configuration USB Scan to Local On* Off	Set whether the USB device driver enumerates as a USB Simple device (single interface) or as a USB Composite device (multiple interfaces).
USB Configuration USB Speed Full Auto*	Set the USB port to run at full speed and disable its high-speed capabilities.

Use printer menus

Menu item	Description
Tray Configuration Tray Linking Automatic Off*	Set the printer to link the trays that have the same paper type and paper size settings. Note: This menu item is available only in some printer models.
Tray Configuration Show Tray Insert Message Off Only for unknown sizes* Always	Display a message to select paper size and type after inserting the tray.
Tray Configuration A5 Loading Short Edge Long Edge*	Specify the page orientation when loading A5 paper size.
Tray Configuration Paper Prompts Auto* Manual Paper	Set the paper source that the user fills when a prompt to load paper appears.
Tray Configuration Envelope Prompts Auto* Manual Envelope	Set the paper source that the user fills when a prompt to load envelope appears.
Tray Configuration Action for Prompts Prompt user* Continue Use current	Set the printer to resolve paper- or envelope-related change prompts.
Reports Menu Settings Page Event Log Event Log Summary	Print reports about printer menu settings, status, and event logs.
Supply Usage And Counters Clear Supply Usage History	Reset the supply usage history, such as number of pages and days remaining, to the factory shipped level.
Supply Usage And Counters Fuser Reset ITM Reset	Reset the counter after installing a new supply.

Menu item	Description
Printer Emulations PPDS Emulation Off* On	Set the printer to recognize and use the PPDS data stream.
Printer Emulations PS Emulation On* Off	Set the printer to recognize and use the PS data stream.
Printer Emulations Emulator Security Page Timeout 0–60 (60*)	Set the page timeout during emulation.
Printer Emulations Emulator Security Reset Emulator After Job On Off*	Reset the emulator after a print job.
Printer Emulations Emulator Security Disable Printer Message Access On* Off	Disable access to the printer message during emulation.
Fax Configuration Fax Low Power Support Disable Sleep Permit Sleep Auto*	Set fax to enter Sleep mode whenever the printer determines that it should. Note: This menu item is available only in some printer models.
Print Configuration Black Only Mode Off* On	Print color content in grayscale.

Menu item	Description
Print Configuration Color Trapping Off 1 2* 3 4 5	Enhance the printed output to compensate for misregistration in the printer.
Print Configuration Font Sharpening 0–150 (24*)	Set a text point-size value below which the high-frequency screens are used when printing font data. For example, if the value is 24, then all fonts sized 24 points or less use the high-frequency screens.
Device Operations Quiet Mode On Off*	Set the printer to operate in Quiet Mode. Note: Enabling this setting slows down the printer performance.
Device Operations Panel Menus Enable* Disable	Enable access to the control panel menus.
Device Operations Safe Mode Off* On	Set the printer to operate in a special mode, in which it attempts to continue offering as much functionality as possible, despite known issues. For example, when set to On, and the duplex motor is nonfunctional, the printer performs one-sided printing of the documents even if the job is two-sided printing. Note: This menu item is available only in some printer models.
Device Operations Clear Custom Status	Erase user-defined strings for the Default or Alternate custom messages.
Device Operations Clear all remotely-installed messages	Erase messages that were remotely installed. Note: This menu item is available only in some printer models.
Device Operations Automatically Display Error Screens On* Off	Show existing error messages on the display after the printer remains inactive on the home screen for a length of time equal to the Screen Timeout setting.

Menu item	Description
Toner patch sensor setup Calibration frequency preference Disabled Fewest color adjustments Fewer color adjustments Normal* Better color accuracy Best color accuracy	Set the default calibration frequency.
Toner patch sensor setup Full calibration	Run the full color calibration.
Toner patch sensor setup Print TPS information page	Print a diagnostic page that contains toner patch sensor calibration.
Scanner Configuration Scanner Manual Registration Print Quick Test	Print a Quick Test target page. Note: Make sure that the margin spacing on the target page is uniform all the way around the target. If it is not, then the printer margins may need to be reset.
Scanner Configuration Scanner Manual Registration Front ADF Registration Rear ADF Registration Flatbed Registration	Manually register the flatbed and ADF after replacing the ADF, scanner glass, or controller board.
Scanner Configuration Edge Erase Flatbed Edge Erase 0–6 (3*) ADF Edge Erase 0–6 (3*)	Set the size, in millimeters, of the no-print area around an ADF or flatbed scan job.
Scanner Configuration Disable Scanner Enabled* Disabled ADF Disabled	Disable the scanner when it is not working properly.
Scanner Configuration Tiff Byte Order CPU Endianness* Little Endian Big Endian	Set the byte order of a TIFF-formatted scan output.

Use printer menus

Menu item	Description
Scanner Configuration Exact Tiff Rows Per Strip On* Off	Set the RowsPerStrip tag value of a TIFF-formatted scan output.

Note: An asterisk (*) next to a value indicates the factory default setting.

Out of Service Erase

Menu item	Description
Sanitize all information on nonvolatile memory Erase all printer and network settings Erase all shortcuts and shortcut settings	Clear all settings and applications that are stored in the printer.

Visible Home Screen Icons

Menu	Description
Copy E-mail Fax Status/Supplies Job Queue Change Language Held Jobs USB Drive Bookmarks Cloud Connector Scan to Computer	Specify which icons to show on the home screen. Note: Fax, USB Drive, and Bookmarks are available only in some printer models.

About this Printer

Menu item	Description
Asset Tag	Describe the printer. The maximum length is 32 characters.

Menu item	Description
Printer Location	Identify the printer location. The maximum length is 63 characters.
Contact	Personalize the printer name. The maximum length is 63 characters.
Export Configuration File to USB*	Export configuration files to a flash drive.
Export Compressed Logs to USB*	Export compressed log files to a flash drive.
Send Logs	Send diagnostic information to Lexmark.

* This menu item appears only in some printer models.

Print

Layout

Menu item	Description
Sides 1-Sided* 2-Sided	Specify whether to print on one side or two sides of the paper.
Flip Style Long Edge* Short Edge	Determine which side of the paper (long edge or short edge) is bound when performing two-sided printing. Note: Depending on the option selected, the printer automatically offsets each printed information of the page to bind the job correctly.
Blank Pages Print Do Not Print*	Print blank pages that are included in a print job.
Collate Off [1,1,1,2,2,2] On [1,2,1,2,1,2]*	Keep the pages of a print job stacked in sequence, particularly when printing multiple copies of the job.
Separator Sheets None* Between Copies Between Jobs Between Pages	Insert blank separator sheets when printing.
Separator Sheet Source Tray 1	Specify the paper source for the separator sheet.

Menu item	Description
Pages per Side Off* 2 pages per side 3 pages per side 4 pages per side 6 pages per side 9 pages per side 12 pages per side 16 pages per side	Print multiple page images on one side of a sheet of paper.
Pages per Side Ordering Horizontal* Reverse Horizontal Vertical Reverse Vertical	Specify the positioning of multiple page images when using Pages per Side. Note: The positioning depends on the number of page images and their page orientation.
Pages per Side Orientation Auto* Landscape Portrait	Specify the orientation of a multiple-page document when using Pages per Side.
Pages per Side Border None* Solid	Print a border around each page image when using Pages per Side.
Copies 1–9999 (1*)	Specify the number of copies for each print job.
Print Area Normal* Fit to page Whole Page	Set the printable area on a sheet of paper.

Notes

An asterisk (*) next to a value indicates the factory default setting.

Setup

Menu item	Description
Printer Language PCL Emulation PS Emulation*	Set the printer language. Note: Setting a printer language default does not prevent a software program from sending print jobs that use another printer language.

Menu item	Description
Printer Usage Max Speed Max Yield*	Determine how the color print cartridges operate during printing. Notes • When set to Max Yield, the color print cartridges slow down or stop while printing groups of black-only pages. • When set to Max Speed, the color print cartridges always run while printing, whether color or black pages are being printed.
Resource Save On Off*	Determine what the printer does with downloaded resources, such as fonts and macros, when it receives a job that requires more than the available memory. Notes • When set to Off, the printer retains downloaded resources only until memory is needed. Resources associated with the inactive printer language are deleted. • When set to On, the printer preserves all the permanent downloaded resources across all language switches. When necessary, the printer shows memory full messages instead of deleting permanent resources.
Print All Order Alphabetical* Newest First Oldest First	Specify the order in which held and confidential jobs are printed when Print All is selected.

Note: An asterisk (*) next to a value indicates the factory default setting.

Quality

Menu item	Description
Print Mode Black and White Color*	Set the print mode.

Use printer menus

Menu item	Description
Print Resolution 4800 CQ*	Set the resolution for the printed output. Note: 4800 CQ provides high-quality output at maximum speed.
Toner Darkness Light Normal* Dark	Determine the lightness or darkness of text images.
Halftone Normal* Detail	Enhance the printed output to have smoother lines with sharper edges.
RGB Brightness -6 to 6 (0*)	Adjust the brightness, contrast, and saturation for color output. Note: This setting does not affect files where CMYK color specifications are used.
RGB Contrast 0 to 5 (0*)	
RGB Saturation 0 to 5 (0*)	

Note: An asterisk (*) next to a value indicates the factory default setting.

Menu item	Description
Color Balance Cyan -5 to 5 (0*) Magenta -5 to 5 (0*) Yellow -5 to 5 (0*) Black -5 to 5 (0*) Reset Defaults	Adjust the amount of toner that is used for each color.

Menu item	Description
Color Correction Color Correction Auto* Off Manual Color Correction Content	Modify the color settings used to print documents. Notes • Off sets the printer to receive the color correction from the software. • Auto sets the printer to apply different color profiles to each object on the printed page. • Manual allows the customization of the RGB or CMYK color conversions applied to each object on the printed page. • Color Correction Content is available only when Color Correction is set to Manual.
Color Adjust	Calibrate the printer to adjust color variations in the printed output.

Note: An asterisk (*) next to a value indicates the factory default setting.

PostScript

Menu item	Description
Print PS Error On Off*	Print a page that describes the PostScript® error. Note: When an error occurs, processing of the job stops, the printer prints an error message, and the rest of the print job is flushed.
Minimum Line Width 1–30 (2*)	Set the minimum stroke width. Note: Jobs printed in 4800 CQ use half the value.
Lock PS Startup Mode On* Off	Disable the SysStart file. Note: The default setting varies depending on the printer model.
Image Smoothing On Off*	Enhance the contrast and sharpness of low-resolution images. Note: This setting has no effect on images with a resolution of 300 dpi or higher.
Wait Timeout Disabled Enabled*	Enable the printer to wait for more data before canceling a print job.

Menu item	Description
Wait Timeout Time 15–65535 (40*)	Set the time in seconds for the printer to wait for more data before canceling a print job. Note: This menu item appears only when Wait Timeout is enabled.

Note: An asterisk (*) next to a value indicates the factory default setting.

PCL

Menu item	Description
Font Name [List of available fonts] (Courier*)	Select a font from the specified font source.
Symbol Set [List of available symbol set] (10U PC-8*)	Specify the symbol set for each font name. Note: A symbol set is a set of alphabetic and numeric characters, punctuation, and special symbols. Symbol sets support the different languages or specific programs such as math symbols for scientific text.
Pitch 0.08–100.00 (10.00*)	Specify the pitch for fixed or monospaced fonts. Note: Pitch refers to the number of fixed-space characters in a horizontal inch of type.
Orientation Portrait* Landscape Reverse Portrait Reverse Landscape	Specify the orientation of text and graphics on the page.
Lines per Page 1–255	Specify the number of lines of text for each page printed through the PCL® data stream. Notes - This menu item activates vertical escapement that causes the selected number of requested lines to print between the default margins of the page. 60 is the U.S. factory default setting. 64 is the international factory default setting.
PCL5 Minimum Line Width 1–30 (2*)	Set the initial minimum stroke width.

Menu item	Description
PCLXL Minimum Line Width 1–30 (2*)	
A4 Width 198 mm* 203 mm	Set the width of the logical page on A4-size paper. Note: Logical page is the space on the physical page where data is printed.
Auto CR after LF On Off*	Set the printer to perform a carriage return after a line feed control command. Note: Carriage return is a mechanism that commands the printer to move the position of the cursor to the first position on the same line.
Auto LF after CR On Off*	Set the printer to perform a line feed after a carriage return control command.
Tray Renumber Assign Tray [x] Assign Manual Paper Assign Manual Envelope	Configure the printer to work with a different print driver or custom application that uses a different set of source assignments to request a given paper source.
Tray Renumber View Factory Defaults	Show the factory default value assigned for each paper source.
Tray Renumber Restore Defaults	Restore the tray renumber values to their factory defaults.
Print Timeout Disabled Enabled*	Set the printer to end a print job after it has been idle for the specified amount of time in seconds. Note: Print Timeout Time appears only when Print Timeout is enabled.
Print Timeout Time 1–255 (90*)	

An asterisk (*) next to a value indicates the factory default setting.

Image

Menu item	Description
Auto Fit On Off*	Select the best available paper size and orientation setting for an image. Note: When set to On, this menu item overrides the scaling and orientation settings for the image.
Invert Off* On	Invert bitonal monochrome images. Note: This menu item does not apply to GIF or JPEG image formats.
Scaling Anchor Top Left Best Fit* Anchor Center Fit Height/Width Fit Height Fit Width	Adjust the image to fit the printable area. Note: When Auto Fit is set to On, Scaling is automatically set to Best Fit.
Orientation Portrait* Landscape Reverse Portrait Reverse Landscape	Specify the orientation of text and graphics on the page.

Note: An asterisk (*) next to a value indicates the factory default setting.

Paper

Tray Configuration

Menu item	Description
Default Source Tray [x] (1*) Manual Paper Manual Envelope	Set the paper source for all print jobs.
Paper Size/Type Tray [x] (1*) Manual Paper Manual Envelope	Specify the paper size or paper type loaded in each paper source.

Menu item	Description
Substitute Size Off Letter/A4 All Listed*	Set the printer to substitute a specified paper size if the requested size is not loaded in any paper source. Notes • Off prompts the user to load the required paper size. • Letter/A4 prints an A4-size document on letter when loading letter, and letter-size jobs on A4 paper size when loading A4. • All Listed substitutes Letter/A4.

Note: An asterisk (*) next to a value indicates the factory default setting.

Media Configuration

Universal Setup

Menu item	Description
Units of Measure Inches Millimeters	Specify the unit of measurement for the universal paper. Note: Inches is the U.S. factory default setting. Millimeters is the international factory default setting.
Portrait Width 3.00–14.17 inches (8.50*) 76–360 mm (216*)	Set the portrait width of the universal paper.
Portrait Height 3.00–14.17 inches (14*) 76–360 mm (356*)	Set the portrait height of the universal paper.
Feed Direction Short Edge* Long Edge	Set the printer to pick paper from the short edge or long edge direction. Note: Long Edge appears only when the longest edge is shorter than the maximum width supported.

Note: An asterisk (*) next to a value indicates the factory default setting.

Custom Scan Sizes

Menu item	Description
Custom Scan Size [x] Scan Size Name Width 1–8.50 inches (8.50*) 25–216 mm (216*) Height 1–14 inches (14*) 25–356 mm (297*) Orientation Portrait* Landscape 2 scans per side Off* On	Assign a scan size name and configure the scan settings.

Note: An asterisk (*) next to a value indicates the factory default setting.

Media Types

Menu item	Description
Plain Paper Card Stock Recycled Glossy Labels Bond Envelope Letterhead Preprinted Colored Paper Light Heavy Rough/Cotton Custom Type [x]	Specify the texture, weight, and orientation of the paper loaded. Note: Custom Type is supported only in some printer models.

Copy

Copy Defaults

Menu item	Description
Content Type Text Text/Photo* Photo Graphics	Improve the output result based on the content of the original document.
Sides 1 sided to 1 sided* 1 sided to 2 sided 2 sided to 1 sided 2 sided to 2 sided	Specify the scanning behavior based on the original document. Note: 2 sided to 1 sided and 2 sided to 2 sided appears only in some printer models.
Color Off On* Auto	Specify whether to print copies in color.
Pages per Side Off* 2 Portrait pages 4 Portrait pages 2 Landscape pages 4 Landscape pages	Specify the number of page images to print on one side of a sheet of paper.
Print Page Borders On Off*	Place a border around each image when printing multiple pages on a single page.
Collate Off [1,1,1,2,2,2] On [1,2,1,2,1,2]*	Print multiple copies in sequence.
“Copy from” Size [List of paper sizes]	Set the paper size of the original document. Note: Letter is the U.S. factory default setting. A4 is the international factory default setting.
“Copy to” Source Tray [x] (1*) Manual Feeder Auto Size Match	Specify the paper source for the copy job.
Darkness 1 to 9 (5*)	Adjust the darkness of the scanned image.

Use printer menus

Menu item	Description
Number of Copies 1–9999 (1*)	Specify the number of copies.

Notes

An asterisk (*) next to a value indicates the factory default setting.

Menu item	Description
Color Balance Cyan to Red -4 to 4 (0*) Magenta to Green -4 to 4 (0*) Yellow to Blue -4 to 4 (0*)	Adjust the color intensity during scanning.
Auto Color Detect Color Sensitivity 1–9 (5*) Area Sensitivity 1–9 (5*)	Set the amount of color that the printer detects from the original document.
Contrast Best for Content* 0 1 2 3 4 5	Specify the contrast of the output.
Background Removal Level -4 to 4 (0*)	Adjust the amount of background visible on a scanned image.
Scan Edge to Edge On Off*	Allow edge-to-edge scanning of the original document.

Note: An asterisk (*) next to a value indicates the factory default setting.

Menu item	Description
Allow Color Copies On* Off	Print copies in color.

Menu item	Description
Allow Save as Shortcut On* Off	Save custom copy settings as shortcuts.

Note: An asterisk (*) next to a value indicates the factory default setting.

Fax

Fax Defaults

Fax Mode

Menu item	Description
Fax Mode Fax Fax Server Disabled	Select a fax mode. Note: Depending on your printer model, the factory default setting may vary.

Fax Setup

General Fax settings

Menu item	Description
Fax Name	Identify your fax machine.
Fax Number	Identify your fax number.
Fax ID Fax Name Fax Number*	Notify fax recipients of your fax name or fax number.
Memory Use All receive Mostly receive Equal* Mostly send All send	Set the amount of internal printer memory allocated for faxing. Note: This menu item prevents memory buffer conditions and failed faxes.
Cancel Faxes Allow* Don't Allow	Cancel outgoing faxes before they are transmitted, or cancel incoming faxes before they finish printing.

Use printer menus

Menu item	Description
Fax Number Masking Off* From Left From Right	Specify the format for masking an outgoing fax number.
Digits to Mask 0–58 (0*)	Specify the number of digits to mask in an outgoing fax number.
Enable Line Connected Detection On* Off	Determine whether a telephone line is connected to the printer. Note: Detection takes place when turning on the printer and before each call.
Optimize Fax Compatibility	Configure the printer fax functionality for optimal compatibility with other fax machines.
Fax Transport T.38 Analog G.711 etherFAX	Set the fax transport method. Note: • This menu item appears only if an etherFAX or Fax over IP (FoIP) license bundle is installed in the printer. • Depending on your printer model, the factory default settings may vary.

Note: An asterisk (*) next to a value indicates the factory default setting.

HTTPS Fax Settings

Note: This menu appears only if Fax Transport is set to etherFAX.

Menu item	Description
HTTPS service URL	Specify the etherFAX service URL.
HTTPS Proxy	Specify a proxy server URL.
HTTPS Proxy User	Specify the user name and password for the proxy server.
HTTPS Proxy Password	
Fax Send Encryption Disabled Enabled* Required	Enable encryption for outgoing fax messages.

Menu item	Description
Fax Receive Encryption Disabled Enabled* Required	Enable encryption for incoming fax messages.
HTTPS Fax Status	Show the etherFAX communication status.

Note: An asterisk (*) next to a value indicates the factory default setting.

Fax Send Settings

Menu item	Description
Resolution Standard* Fine Super Fine Ultra Fine	Set the resolution of the scanned image. Note: A higher resolution increases fax transmission time and requires more memory.
Original Size [List of paper sizes] (Mixed Sizes*)	Specify the size of the original document.
Orientation Portrait* Landscape	Specify the orientation of the original document. Note: This menu item appears only in some printer models.
Sides Off* Short Edge Long Edge	Specify the orientation of the original document when scanning on both sides of the document. Note: This menu item appears only in some printer models.
Content Type Text* Text/Photo Photo Graphics	Improve the output result based on the content of the original document.
Darkness 1–9 (5*)	Adjust the darkness of the scanned image.
Behind a PABX On Off*	Set the printer to dial a fax number without waiting to recognize the dial tone. Note: Private Automated Branch Exchange (PABX) is a telephone network that allows a single access number to offer multiple lines to outside callers.

Use printer menus

Menu item	Description
Dial Mode Tone* Pulse	Specify the dial mode for incoming or outgoing faxes.

Note: An asterisk (*) next to a value indicates the factory default setting.

Menu item	Description
Color Balance Cyan - Red -4 to 4 (0*) Magenta - Green -4 to 4 (0*) Yellow - Blue -4 to 4 (0*)	Adjust the color intensity during scanning.
Contrast Best for Content* 0 1 2 3 4 5	Set the contrast of the output.
Background Removal Level -4 to 4 (0*)	Adjust the amount of background visible on a scanned image.
Scan Edge to Edge On Off*	Allow edge-to-edge scanning of the original document.

Note: An asterisk (*) next to a value indicates the factory default setting.

Menu item	Description
Automatic Redial 0–9 (5*)	Adjust the number of redial attempts based on the activity levels of recipient fax machines.
Redial Frequency 1–200 minutes (3*)	Increase the time between redial attempts to increase the chance of sending fax successfully.

Use printer menus

Menu item	Description
Enable ECM On* Off	Activate Error Correction Mode (ECM) for fax jobs. Note: ECM detects and corrects errors in the fax transmission process caused by telephone line noise and poor signal strength.
Enable Fax Scans On* Off	Fax documents that are scanned at the printer.
Driver to Fax On* Off	Allow the print driver to send fax.
Allow Save as Shortcut On* Off	Save fax numbers as shortcuts on the printer.
Max Speed 33600* 14400 9600 4800 2400	Set the maximum speed for sending fax.
Enable Color Fax Scans Off by Default* On by Default Never Use Always Use	Enable color scans for fax.
Auto Convert Color Faxes to Mono Faxes On* Off	Convert all outgoing color faxes to black and white.
Confirm Fax Number Off* On	Ask the user to confirm the fax number.
Dial Prefix	Set a dialing prefix.

Note: An asterisk (*) next to a value indicates the factory default setting.

Fax Receive Settings

Menu item	Description
Rings to Answer 1–25 (3*)	Set the number of rings for incoming fax.
Auto Reduction On* Off	Scale incoming fax to fit on the page.
Paper Source Tray [X] Auto*	Set the paper source for printing incoming fax.
Sides On Off*	Print on both sides of the paper.
Separator Sheets None* Before Job After Job	Specify whether to insert blank separator sheets when printing.
Separator Sheet Source Tray [X] (1*)	Specify the paper source for the separator sheet.
Fax Footer On Off*	Print the transmission information at the bottom of each page from a received fax.
Fax Footer Time Stamp Receive* Print	Print the time stamp at the bottom of each page from a received fax.

Note: An asterisk (*) next to a value indicates the factory default setting.

Menu item	Description
Enable Fax Receive On* Off	Set the printer to receive fax.
Enable Color Fax Receive On* Off	Set the printer to receive fax in color.
Enable Caller ID On Off*	Show the number that is sending the incoming fax.

Use printer menus

Menu item	Description
Block No Name Fax On Off*	Block incoming faxes sent from devices with no station ID or fax ID specified.
Answer On All Rings* Single Ring Only Double Ring Only Triple Ring Only Single or Double Rings Only Single or Triple Rings Only Double or Triple Rings Only	Set a distinctive ring pattern for incoming fax.
Auto Answer On* Off	Set the printer to receive fax automatically.
Fax Forwarding Print* Print and Forward Forward	Specify whether to forward received fax.
Forward To Destination 1 Destination 2	Specify where to forward received fax. Note: This menu item appears only when Fax Forwarding is set to Print and Forward or Forward.
Max Speed 33600* 14400 9600 4800 2400	Set the maximum speed for transmitting fax.

Note: An asterisk (*) next to a value indicates the factory default setting.

Fax Log settings

Menu item	Description
Transmission Log Frequency Always* Never Only for Error	Specify how often the printer creates a transmission log.

Use printer menus

Menu item	Description
Transmission Log Action Print Off On* Email Off* On	Print or e-mail a log for successful fax transmission or transmission error.
Receive Error Log Print Never* Print on Error	Print a log for fax-receive failures.
Auto Print Logs On* Off	Print all fax activity.
Log Paper Source Tray [x] (1*)	Specify the paper source for printing logs.
Logs Display Remote Fax Name* Dialed Number	Identify the sender by remote fax name or fax number.
Enable Job Log On* Off	View a summary of all fax jobs.
Enable Call Log On* Off	View a summary of fax dialing history.

Note: An asterisk (*) next to a value indicates the factory default setting.

Speaker settings

Menu item	Description
Speaker Mode Always Off* Always On On until Connected	Set the fax speaker mode.
Speaker Volume Low* High	Adjust the fax speaker volume.

Use printer menus

Menu item	Description
Ringer Volume Off* On	Enable the ringer volume.

Note: An asterisk (*) next to a value indicates the factory default setting.

Fax Server Setup

General Fax Settings

Menu item	Description
To Format	Specify a fax recipient. Notes If you want to use the fax number, then type the number sign (#) before a number.
Reply Address	Specify a reply address for sending fax.
Subject	Specify the fax subject and message.
Message	
Enable analog receive Off* On	Set the printer to receive analog faxes.

Notes

An asterisk (*) next to a value indicates the factory default setting.

Fax Server E-mail Settings

Menu item	Description
Use E-mail SMTP Server On* Off	Use the Simple Mail Transfer Protocol (SMTP) settings for e-mail in receiving and sending faxes. Notes When set to On, all other settings of the Fax Server E-mail Settings menu are not shown.
Primary SMTP Gateway	Type the IP address or host name of the primary SMTP server.

Use printer menus

Menu item	Description
Primary SMTP Gateway Port 1–65535 (25*)	Enter the port number of the primary SMTP server.
Secondary SMTP Gateway	Type the server IP address or host name of your secondary or backup SMTP server.
Secondary SMTP Gateway Port 1–65535 (25*)	Enter the server port number of your secondary or backup SMTP server.
SMTP Timeout 5–30 (30*)	Set the time before the printer times out if the SMTP server does not respond.
Reply Address	Specify a reply address for sending fax.
Use SSL/TLS Disabled* Negotiate Required	Specify whether to send fax using an encrypted link.
Require Trusted Certificate Off On*	Specify a trusted certificate when accessing the SMTP server.
SMTP Server Authentication No authentication required* Login / Plain NTLM CRAM-MD5 Digest-MD5 Kerberos 5	Set the authentication type for the SMTP server.
Device-Initiated E-mail None* Use Device SMTP Credentials	Specify whether credentials are required for device-initiated e-mail.
User-Initiated E-mail None* Use Device SMTP Credentials Use Session User ID and Password Use Session E-mail address and Password Prompt user	Specify whether credentials are required for user-initiated e-mail.
Use Active Directory Device Credentials Off* On	Enable user credentials and group destinations to connect to the SMTP server.
Device Userid	Specify the user ID and password to connect to the SMTP server.
Device Password	
Kerberos 5 REALM	Specify the realm for the Kerberos 5 authentication protocol.

Menu item	Description
NTLM Domain	Specify the domain name for the NTLM security protocol.
Disable "SMTP server not set up" error Off* On	Hide the "SMTP server not set up" error message.

Note: An asterisk (*) next to a value indicates the factory default setting.

Fax Server Scan Settings

Menu item	Description
Image Format TIFF (.tif) PDF (.pdf)* JPEG (.jpg)	Specify the file format for the scanned image.
Content Type Text* Text/Photo Photo Graphics	Improve the output result based on the content of the original document.
Content Source Black and White Laser Color Laser* Inkjet Photo/Film Magazine Newspaper Press Other	Improve the output result based on the source of the original document.
Fax Resolution Standard* Fine Super Fine Ultra Fine	Set the fax resolution.
Sides Off* Short Edge Long Edge	Specify the orientation of the original document when scanning on both sides of the document.
Darkness 1–9 (5*)	Set the darkness of the output.

Menu item	Description
Orientation Portrait* Landscape	Specify the orientation of text and graphics on the page.
Original Size [List of paper sizes]	Set the paper size of the original document. Notes - Mixed Sizes is the U.S. factory default setting. A4 is the international factory default setting. - This setting may vary depending on your printer model.
Use Multi-Page TIFF Off On*	Choose between single- and multiple-page TIFF files.

Note: An asterisk (*) next to a value indicates the factory default setting.

E-mail

E-mail Setup

Menu item	Description
Primary SMTP Gateway	Type the IP address or host name of the primary SMTP server for sending e-mail.
Primary SMTP Gateway Port 1–65535 (25*)	Enter the port number of the primary SMTP server.
Secondary SMTP Gateway	Type the server IP address or host name of your secondary or backup SMTP server.
Secondary SMTP Gateway Port 1–65535 (25*)	Enter the server port number of your secondary or backup SMTP server.
SMTP Timeout 5–30 seconds (30*)	Set the time before the printer times out if the SMTP server does not respond.
Reply Address	Specify a reply address in the e-mail.
Always use SMTP default Reply Address On Off*	Always use the default reply address in the SMTP server.

Use printer menus

Menu item	Description
Use SSL/TLS Disabled* Negotiate Required	Specify whether to send e-mail using an encrypted link.
Require Trusted Certificate On* Off	Require a trusted certificate when accessing the SMTP server.
SMTP Server Authentication No authentication required* Login / Plain NTLM CRAM-MD5 Digest-MD5	Set the authentication type for the SMTP server.
Device-Initiated E-mail None* Use Device SMTP Credentials	Specify whether credentials are required for device-initiated e-mail.
Device Userid	Specify the user ID and password to connect to the SMTP server.
Device Password	
NTLM Domain	Specify the domain name for the NTLM security protocol.

Note: An asterisk (*) next to a value indicates the factory default setting.

E-mail Defaults

Menu item	Description
Subject	Specify the e-mail subject and message.
Message	
File Name	Specify the filename for the scanned image.
Format PDF (.pdf)* TIFF (.tif) JPEG (.jpg)	Specify the file format for the scanned image.

Menu item	Description
PDF Settings PDF Version 1.3 1.4 1.5* 1.6 1.7 Archival Version A-1a* A-1b Secure Off* On Archival (PDF/A) Off* On	Set the PDF format of the scanned image. Note: Archival Version and Archival(PDF/A) appear only if PDF Version is set to 1.4.
Content Type Text Text/Photo* Photo Graphics	Improve the output result based on the content of the original document.
Color Black and White Gray Color* Auto	Specify the color when scanning an image.
Resolution 75 dpi 150 dpi* 200 dpi 300 dpi 400 dpi 600 dpi	Set the resolution of the scanned image.
Darkness 1–9 (5*)	Adjust the darkness of the scanned image.
Orientation Portrait* Landscape	Specify the orientation of the original document. Note: This menu item appears only in some printer models.
Original Size [List of paper sizes]	Set the paper size of the original document. Note: Mixed Sizes is the factory default setting.

Use printer menus

Menu item	Description
Sides Off* Short Edge Long Edge	Specify the orientation of the original document when scanning on both sides of the document. Note: This menu item appears only in some printer models.

Note: An asterisk (*) next to a value indicates the factory default setting.

Menu item	Description
Color Balance Cyan - Red -4 to 4 (0*) Magenta - Green -4 to 4 (0*) Yellow - Blue -4 to 4 (0*)	Adjust the color intensity during scanning.
Auto Color Detect Color Sensitivity 1–9 (5*) Area Sensitivity 1–9 (5*) E-mail Bit Depth 1 bit* 8 bit Minimum Scan Resolution 75 dpi 150 dpi 200 dpi 300 dpi*	Set the amount of color that the printer detects from the original document.
Contrast Best for content* 0 1 2 3 4 5	Specify the contrast of the output.
Background Removal Level -4 to 4 (0*)	Adjust the amount of background visible on a scanned image.
Scan Edge to Edge On Off*	Allow edge-to-edge scanning of the original document.

Note: An asterisk (*) next to a value indicates the factory default setting.

Menu item	Description
Max E-mail Size 0–65535 (0*)	Set the allowable file size for each e-mail.
Size Error Message	Specify an error message that the printer sends when an e-mail exceeds its allowable file size. Note: You can type up to 1024 characters.
Send Me a Copy Never appears* On by Default Off by Default Always On	Send a copy of the e-mail to yourself.
Text Default 5–95 (75*)	Set the quality of text on a scanned image.
Text/Photo Default 5–95 (75*)	Set the quality of text or photo on a scanned image.
Photo Default 5–95 (50*)	Set the quality of a photo on a scanned image.
Transmission Log Print log* Do Not Print Log Print Only For Error	Print a log for successful e-mail transmission.
Log Paper Source Tray [x] (1*)	Specify the paper source for printing logs.
Allow Save as Shortcut On* Off	Save e-mail addresses as shortcuts. Note: When set to Off, the Save As Shortcut button does not appear on the e-mail Destination screen.
Reset E-mail Information After Sending On* Off	Restore the default e-mail information after sending an e-mail.

Note: An asterisk (*) next to a value indicates the factory default setting.

FTP

FTP Defaults

Menu item	Description
Format PDF (.pdf)* TIFF (.tif) JPEG (.jpg)	Specify the file format for the scanned image.
PDF Settings PDF Version 1.3 1.4 1.5* 1.6 1.7 Archival Version A-1a* A-1b Secure Off* On Archival (PDF/A) Off* On	Set the PDF format for the scanned image. Note: Archival Version and Archival (PDF/A) appear only if PDF Version is set to 1.4.
Content Type Text Text/Photo* Graphics Photo	Improve the output result based on the content of the original document.
Color Black and White Gray Color* Auto	Specify the color when scanning an image.
Resolution 75 dpi 150 dpi* 200 dpi 300 dpi 400 dpi 600 dpi	Set the resolution of the scanned image.
Darkness 1–9 (5*)	Adjust the darkness of the scanned image.

Use printer menus

Menu item	Description
Orientation Portrait* Landscape	Specify the orientation of the original document. Note: This menu item appears only in some printer models.
Original Size [List of paper sizes] (Mixed Sizes*)	Set the paper size of the original document.
Sides Off* Short Edge Long Edge	Specify the orientation of the original document when scanning on both sides of the document. Note: This menu item appears only in some printer models.
File Name	Specify the file name of the scanned image.

Note: An asterisk (*) next to a value indicates the factory default setting.

Menu item	Description
Color Balance Cyan - Red -4 to 4 (0*) Magenta - Green -4 to 4 (0*) Yellow - Blue -4 to 4 (0*)	Adjust the color intensity during scanning.
Auto Color Detect Color Sensitivity 1–9 (5*) Area Sensitivity 1–9 (5*) FTP Bit Depth 1 bit* 8 bit Minimum Scan Resolution 75 dpi 150 dpi 200 dpi 300 dpi*	Set the amount of color that the printer detects from the original document.
Contrast Best for content* 0 1 2 3 4 5	Specify the contrast of the output.

Menu item	Description
Background Removal Level -4 to 4 (0*)	Adjust the amount of background visible on a scanned image.
Scan Edge to Edge On Off*	Allow edge-to-edge scanning of the original document.

Note: An asterisk (*) next to a value indicates the factory default setting.

Menu item	Description
Text Default 5–95 (75*)	Set the quality of text on a scanned image.
Text/Photo Default 5–95 (75*)	Set the quality of text or photo image on a scanned image.
Photo Default 5–95(50*)	Set the quality of a photo image on a scanned image.
Transmission Log Print Log* Do Not Print Log Print Only For Error	Print a log for successful FTP scan transmission.
Log Paper Source Tray [x] (1*)	Specify the paper source for printing FTP logs.

Note: An asterisk (*) next to a value indicates the factory default setting.

USB Drive

Flash Drive Scan

Menu item	Description
Format PDF (.pdf)* TIFF (.tif) JPEG (.jpg)	Specify the file format for the scanned image.

Menu item	Description
PDF Settings PDF Version 1.3 1.4 1.5* 1.6 1.7 Archival Version A-1a* A-1b Secure Off* On Archival (PDF/A) Off* On	Set the PDF format for the scanned image. Note: Archival Version and Archival (PDF/A) appear only if PDF Version is set to 1.4.
Content Type Text Text/Photo* Graphics Photo	Improve the output result based on the content of the original document.
Color Black and White Gray Color* Auto	Specify the color when scanning an image.
Resolution 75 dpi 150 dpi* 200 dpi 300 dpi 400 dpi 600 dpi	Set the resolution of the scanned image.
Darkness 1–9 (5*)	Adjust the darkness of the scanned image.
Orientation Portrait* Landscape	Specify the orientation of the original document. Note: This menu item appears only in some printer models.
Original Size [List of paper sizes] (Mixed Sizes*)	Set the paper size of the original document.

Use printer menus

Menu item	Description
Sides Off* Short Edge Long Edge	Specify the orientation of the original document when scanning on both sides of the document. Note: This menu item appears only in some printer models.
File Name	Specify the file name of the scanned image.

Note: An asterisk (*) next to a value indicates the factory default setting.

Menu item	Description
Color Balance Cyan to Red -4 to 4 (0*) Magenta to Green -4 to 4 (0*) Yellow to Blue -4 to 4 (0*)	Adjust the color intensity during scanning.
Auto Color Detect Color Sensitivity 1–9 (5*) Area Sensitivity 1–9 (5*) Scan Bit Depth 1 bit* 8 bit Minimum Scan Resolution 75 dpi 150 dpi 200 dpi 300 dpi*	Set the amount of color that the printer detects from the original document.
Contrast Best for content* 0 1 2 3 4 5	Specify the contrast of the output.
Background Removal Level -4 to 4 (0*)	Adjust the amount of background visible on a scanned image.

Use printer menus

Menu item	Description
Scan Edge to Edge On Off*	Allow edge-to-edge scanning of the original document.

Note: An asterisk (*) next to a value indicates the factory default setting.

Menu item	Description
Text Default 5–95 (75*)	Set the quality of text on a scanned image.
Text/Photo Default 5–95 (75*)	Set the quality of text or photo on a scanned image.
Photo Default 5–95 (50*)	Set the quality of a photo on a scanned image.

Note: An asterisk (*) next to a value indicates the factory default setting.

Flash Drive Print

Note: An asterisk (*) next to a value indicates the factory default setting.

Menu item	Settings	Description
Number of Copies	1 to 9999 (1*)	Set the number of copies in a print job.
Paper Source	Tray [x] (1*) Manual Paper Manual Envelope	Set the paper source for the print job.
Color	Off On*	Print the flash drive file in color.
Collate		Keep the pages of a print job stacked in sequence, particularly when printing multiple copies of the job.
Sides	1-Sided 2-Sided *	Specify whether to print on one side or both sides of the paper.

Menu item	Settings	Description
Flip Style	Long Edge* Short Edge	Determine which side of the paper is bound when performing two-sided printing. Note: Depending on the option selected, the printer automatically offsets each printed information of the page to bind the job correctly.
Pages per Side	Off* 2 pages per side 3 pages per side 4 pages per side 6 pages per side 9 pages per side 12 pages per side 16 pages per side	Print multiple page images on one side of a sheet of paper.
Pages per Side Ordering	Horizontal* Reverse Horizontal Reverse Vertical Vertical	Specify the positioning of multiple page images when using the Pages per Side menu. Note: The positioning depends on the number of page images and their page orientation.
Pages per Side Orientation	Auto* Landscape Portrait	Specify the orientation of multiple page images when using the Pages per Side menu.
Pages per Side Border	None* Solid	Print a border around each page image when using the Pages per Side menu.
Separator Sheets	Off* Between Copies Between Jobs Between Pages	Insert blank separator sheets when printing.
Separator Sheet Source	Tray [x] (1*)	Specify the paper source for the separator sheet.
Blank Pages	Do Not Print* Print	Print blank pages in a print job.

Network/Ports

Network Overview

Menu item	Description
Active Adapter Auto* Standard Network Wireless	Specify the type of the network connection.
Network Status	Show the connectivity status of the printer network.
Display Network Status on Printer Off On*	Show the network status on the display.
Speed, Duplex	Show the speed of the currently active network card.
IPv4	Show the IPv4 address.
All IPv6 Addresses	Show all IPv6 addresses.
Reset Print Server Start	Reset all active network connections to the printer. Note: This setting removes all network configuration settings.
Network Job Timeout Disabled Enabled*	Set the time before the printer cancels a network print job.
Network Job Timeout Time	Specify the timeout value (in seconds) when the Network Job Timeout setting is enabled. Note: This feature is available only in some printer models.
Banner Page Off* On	Print a banner page.
Scan to PC Port Range	Specify a valid port range for printers that are behind a port blocking firewall.
Enable Network Connections Enable* Disable	Enable or disable all network connections.

Menu item	Description
Enable LLDP Off* On	Enable Link Layer Discovery Protocol (LLDP) in the printer.

Note: An asterisk (*) next to a value indicates the factory default setting.

Wireless

Menu item	Description
Setup Using Mobile App	Configure the wireless connection using the Lexmark Mobile Assistant app.
Setup On Printer Panel Choose Network Add Wi-Fi Network Network Name Network Mode Infrastructure Wireless Security Mode Disabled* WEP WPA2/WPA - Personal WPA2 - Personal	Determine the wireless network that the printer connects to. Note: This menu item appears as <i>Wireless Connection Setup</i> in the Embedded Web Server.
Wi-Fi Protected Setup Start Push Button Method Start PIN Method	Establish a wireless network and enable network security. Notes - Start Push Button Method connects the printer to a wireless network when buttons on both the printer and the access point (wireless router) are pressed within a given time. - Start PIN Method connects the printer to a wireless network when a PIN on the printer is entered into the wireless settings of the access point.
Compatibility 802.11b/g/n (2.4GHz) 802.11a/b/g/n/ac (2.4GHz/5GHz)* 802.11a/n/ac (5GHz)	Specify the wireless standard for the wireless network. Note: 802.11a/b/g/n/ac (2.4GHz/5GHz) and 802.11a/n/ac (5GHz) are available only in some printer models.

Menu item	Description
Wireless Security Mode Disabled* WEP WPA2/WPA-Personal WPA2-Personal 802.1x - RADIUS	Set the type of security for connecting the printer to wireless devices.
WEP Authentication Mode Auto* Open Shared	Set the type of Wireless Encryption Protocol (WEP) used by the printer. Note: This menu item appears only if Wireless Security Mode is set to WEP.
Set WEP Key	Specify a WEP password for secure wireless connection. Note: This menu item appears only if Wireless Security Mode is set to WEP.
WPA2-Personal AES*	Enable wireless security through WPA2. Note: This menu item appears only if Wireless Security Mode is set to WPA2-Personal.
Set PSK	Set the password for secure wireless connection. Note: This menu item appears only if Wireless Security Mode is set to either WPA2/WPA-Personal or WPA2-Personal.
WPA2/WPA-Personal AES*	Enable wireless security through WPA2/WPA. Note: This menu item appears only if Wireless Security Mode is set to WPA2/WPA-Personal.
802.1x Encryption Mode WPA+ WPA2*	Enable wireless security through 802.1x standard. Note: This menu item appears only if Wireless Security Mode is set to 802.1x - Radius.
IPv4 Enable DHCP On* Off	Enable Dynamic Host Configuration Protocol (DHCP). Note: DHCP is a standard protocol that allows a server to distribute IP addressing and configuration information dynamically to clients.
IPv4 Set Static IP Address IP Address Netmask Gateway	Set the static IP address of your printer.

Menu item	Description
IPv6 Enable IPv6 On* Off	Enable IPv6 in the printer.
IPv6 Enable DHCPv6 On Off*	Enable DHCPv6 in the printer.
IPv6 Stateless Address Autoconfiguration Off On*	Set the network adapter to accept the automatic IPv6 address configuration entries provided by a router.
IPv6 DNS Address	Specify the DNS server address.
IPv6 Manually Assigned IPV6 Address	Assign the IPv6 address. Note: This menu item appears only in some printer models.
IPv6 Manually Assigned IPV6 Router	Assign the IPv6 router address. Note: This menu item appears only in some printer models.
IPv6 Address Prefix 0–128 (64*)	Specify the address prefix.
IPv6 All IPv6 Addresses	Show all IPv6 addresses.
IPv6 All IPv6 Router Addresses	Show all IPv6 router addresses.
Network Address UAA LAA	View the network addresses.

Menu item	Description
PCL SmartSwitch On* Off	Set the printer to switch automatically to PCL emulation when a print job requires it, regardless of the default printer language. Note: If PCL SmartSwitch is off, then the printer does not examine incoming data and uses the default printer language specified in the Setup menu.
PS SmartSwitch On* Off*	Set the printer to switch automatically to PS emulation when a print job requires it, regardless of the default printer language. Note: If PS SmartSwitch is off, then the printer does not examine incoming data and uses the default printer language specified in the Setup menu.
Mac Binary PS Auto* On Off	Set the printer to process Macintosh binary PostScript print jobs. Notes - On processes raw binary PostScript print jobs. - Off filters print jobs using the standard protocol.

Wi-Fi Direct

Menu item	Description
Enable Wi-Fi Direct On Off*	Set the printer to connect directly to Wi-Fi devices.
Wi-Fi Direct Name	Specify the name of the Wi-Fi Direct network.
Wi-Fi Direct Password	Set the password to authenticate and validate users on a Wi-Fi connection.
Show Password on Setup Page Off On*	Show the Wi-Fi Direct Password on the Network Setup Page.
Preferred Channel Number 1–11 Auto*	Set the preferred channel of the Wi-Fi network.
Group Owner IP Address	Specify the IP address of the group owner.

Menu item	Description
Auto-Accept Push Button Requests Off* On	Accept requests to connect to the network automatically. Note: Accepting clients automatically is not secured.

Note: An asterisk (*) next to a value indicates the factory default setting.

Ethernet

Menu item	Description
Network Speed	Show the speed of an active network adapter.
IPv4 Enable DHCP On* Off	Enable Dynamic Host Configuration Protocol (DHCP). Note: DHCP is a standard protocol that allows a server to distribute IP addressing and configuration information to clients in a dynamic manner.
IPv4 Set Static IP Address IP Address Netmask Gateway	Set the static IP address of your printer.
IPv6 Enable IPv6 Off On*	Enable IPv6 in the printer.
IPv6 Enable DHCPv6 Off* On	Enable DHCPv6 in the printer.
IPv6 Stateless Address Autoconfiguration Off On*	Set the network adapter to accept the automatic IPv6 address configuration entries provided by a router.
IPv6 DNS Address	Specify the DNS server address.

Menu item	Description
IPv6 Manually Assigned IPV6 Address	Assign the IPv6 address. Note: This menu item appears only in some printer models.
IPv6 Manually Assigned IPV6 Router	Assign the IPv6 router address. Note: This menu item appears only in some printer models.
IPv6 Address Prefix 0–128 (64*)	Specify the address prefix.
IPv6 All IPv6 Addresses	Show all IPv6 addresses.
IPv6 All IPv6 Router Addresses	Show all IPv6 router addresses.
Network Address UAA LAA	Show the printer Media Access Control (MAC) addresses: Locally Administered Address (LAA) and Universally Administered Address (UAA). Note: You can change the printer LAA manually.
PCL SmartSwitch Off On*	Set the printer to switch automatically to PCL emulation when a print job requires it, regardless of the default printer language. Note: If PCL SmartSwitch is off, then the printer does not examine incoming data and uses the default printer language specified in the Setup menu.
PS SmartSwitch On* Off*	Set the printer to switch automatically to PS emulation when a print job requires it, regardless of the default printer language. If PS SmartSwitch is off, then the printer does not examine incoming data and uses the default printer language specified in the Setup menu.

Menu item	Description
Mac Binary PS Auto* On Off	Set the printer to process Macintosh binary PostScript print jobs. Notes • On processes raw binary PostScript print jobs. • Off filters print jobs using the standard protocol.
Energy Efficient Ethernet Off On Auto*	Reduce power consumption when the printer does not receive data from the Ethernet network.

Note: An asterisk (*) next to a value indicates the factory default setting.

TCP/IP

Note: This menu appears only in network printers or printers attached to print servers.

Menu item	Description
Set Hostname	Set the current TCP/IP host name.
Domain Name	Set the domain name.
Allow DHCP/BOOTP to update NTP server On* Off	Allow the DHCP and BOOTP clients to update the NTP settings of the printer.
Zero Configuration Name	Specify a service name for the zero configuration network.
Enable Auto IP On* Off	Assign an IP address automatically.
DNS Address	Specify the current Domain Name System (DNS) server address.
Backup DNS	Specify the backup DNS server addresses.
Backup DNS 2	
Backup DNS 3	
Domain Search Order	Specify a list of domain names to locate the printer and its resources that reside in different domains on the network.

Menu item	Description
Enable DDNS Off* On	Update the Dynamic DNS settings.
DDNS TTL	Specify the current DDNS settings.
Default TTL	
DDNS Refresh Time	
Enable mDNS On* Off	Update multicast DNS settings.
WINS Address	Specify a server address for Windows Internet Name Service (WINS).
Enable BOOTP Off* On	Allow the BOOTP to assign a printer IP address.
Restricted Server List	Specify an IP address for the TCP connections. Notes • This menu item appears only in the Embedded Web Server. • Use a comma to separate each IP address. • You can add up to 50 IP addresses.
Restricted Server List Options Block All Ports* Block Printing Only Block Printing and HTTP Only	Specify how the IP addresses in the list can access the printer functionality. Note: This menu item appears only in the Embedded Web Server.
MTU	Specify a maximum transmission unit (MTU) parameter for the TCP connections.
Raw Print Port 1–65535 (9100*)	Specify a raw port number for printers connected on a network.
Outbound Traffic Maximum Speed Disabled* Enabled	Enable the printer maximum transfer rate.
Enable TLSv1.0 On* Off	Enable the TLSv1.0 protocol.

Use printer menus

Menu item	Description
Enable TLSv1.1 On* Off	Enable the TLSv1.1 protocol.
SSL Cipher List	Specify the cipher algorithms to use for the SSL or the TLS connections.

Note: An asterisk (*) next to a value indicates the factory default setting.

SNMP

Note: This menu appears only in network printers or printers that are attached to print servers.

Menu item	Description
SNMP Versions 1 and 2c Enabled Off On* Allow SNMP Set Off On* Enable PPM MIB Off On* SNMP Community	Configure Simple Network Management Protocol (SNMP) versions 1 and 2c to install print drivers and applications.

Menu item	Description
SNMP Version 3 Enabled Off On* Context Name Set Read/Write Credentials User Name Authentication Password Privacy Password Set Read-only Credentials User Name Authentication Password Privacy Password Authentication Hash MD5 SHA1* SHA2 Minimum Authentication Level No Authentication, No Privacy Authentication, No Privacy Authentication, Privacy* Privacy Algorithm DES AES-128* AES-192 AES-256	Configure SNMP version 3 to install and update the printer security.

Note: An asterisk (*) next to a value indicates the factory default setting.

IPSec

Note: This menu appears only in network printers or printers that are attached to print servers.

Menu item	Description
Enable IPSec Off* On	Enable Internet Protocol Security (IPSec).
Base Configuration Default* Compatibility Secure	Set the IPSec base configuration. Note: This menu item appears only when Enable IPSec is set to On.

Menu item	Description
DH (Diffie-Hellman) Group Proposal modp2048 (14)* modp3072 (15) modp4069 (16) modp6144 (17)	Set the IPsec encryption. Notes - DH (Diffie-Hellman) Group Proposal appears only when Base Configuration is set to Compatibility. - IKE SA Lifetime (Hours) and IPsec SA Lifetime (Hours) appear only when Base Configuration is set to Secure.
IKE SA Lifetime (Hours) 1 2 4 8 24*	
IPsec SA Lifetime (Hours) 1 2 4 8* 24	
Proposed Encryption Method 3DES AES*	Specify the encryption and authentication methods to connect to a network securely. Note: These menu items appear only when Base Configuration is set to Compatibility.
Proposed Authentication Method SHA1 SHA256* SHA512	
IPsec Device Certificate	Specify an IPsec certificate. Note: This menu item appears only when Enable IPsec is set to On.
Pre-Shared Key Authenticated Connections Host [x] Address Key	Configure the authenticated connections of the printer. Note: These menu items appear only when Enable IPsec is set to On.
Certificate Authenticated Connections Host [x] Address[/subnet] Address[/subnet]	

Note: An asterisk (*) next to a value indicates the factory default setting.

802.1x

Note: This menu appears only in network printers or printers that are attached to print servers.

Menu item	Description
Active Off* On	Let the printer join networks that require authentication before allowing access.

Note: An asterisk (*) next to a value indicates the factory default setting.

LPD Configuration

Note: This menu appears only in network printers or printers that are attached to print servers.

Menu item	Description
LPD Timeout 0–65535 seconds (90*)	Set the time-out value to stop the Line Printer Daemon (LPD) server from waiting indefinitely for hung or invalid print jobs.
LPD Banner Page Off* On	Print a banner page for all LPD print jobs. Note: A banner page is the first page of a print job used as a separator of print jobs and to identify the originator of the print job request.
LPD Trailer Page Off* On	Print a trailer page for all LPD print jobs. Note: A trailer page is the last page of a print job.
LPD Carriage Return Conversion Off* On	Enable carriage return conversion. Note: Carriage return is a mechanism that commands the printer to move the position of the cursor to the first position on the same line.

Note: An asterisk (*) next to a value indicates the factory default setting.

HTTP/FTP Settings

Menu item	Description
Enable HTTP Server Off On*	Access the Embedded Web Server to monitor and manage the printer.
Enable HTTPS Off On*	Configure the Hypertext Transfer Protocol Secure (HTTPS) settings.

Menu item	Description
Force HTTPS Connections On Off*	Force the printer to use the HTTPS connections.
Enable FTP/TFTP Off On*	Send files using FTP.
Local Domains	Specify domain names for HTTP and FTP servers. Note: This menu item appears only in the Embedded Web Server.
HTTP Proxy IP Address	Configure the HTTP and FTP server settings.
FTP Proxy IP Address	
HTTP Default IP Port 1–65535 (80*)	
HTTPS Device Certificate	
FTP Default IP Port 1–65535 (21*)	
Timeout for HTTP/FTP Requests 1–299 (30*)	Specify the amount of time before the server connection stops.
Retries for HTTP/FTP Requests 1–299 (3*)	Set the number of retries to connect to the HTTP/FTP server.

Note: An asterisk (*) next to a value indicates the factory default setting.

USB

Menu item	Description
PCL SmartSwitch Off On*	Set the printer to switch to PCL emulation when a print job received through a USB port requires it, regardless of the default printer language. Note: If PCL SmartSwitch is off, then the printer does not examine incoming data and uses the default printer language specified in the Setup menu.

Menu item	Description
PS SmartSwitch Off On*	Set the printer to switch to PS emulation when a print job received through a USB port requires it, regardless of the default printer language. Note: If PS SmartSwitch is off, then the printer does not examine incoming data and uses the default printer language specified in the Setup menu.
Mac Binary PS On Auto* Off	Set the printer to process Macintosh binary PostScript print jobs. Notes • When set to On, the printer processes raw binary PostScript print jobs from computers using the Macintosh operating system. • When set to Auto, the printer processes print jobs from computers using either Windows or Macintosh operating systems • When set to Off, the printer filters PostScript print jobs using the standard protocol.
Enable USB Port Disable Enable*	Enable the standard USB port.

Note: An asterisk (*) next to a value indicates the factory default setting.

Restrict external network access

Menu item	Description
Restrict external network access Off* On	Restrict access to network sites.
External network address	Specify the network addresses with restricted access.
Email address for notification	Specify an email address to send a notification of logged events.
Ping frequency 1–300 (10*)	Specify the network query interval in seconds.

Menu item	Description
Subject	Specify the subject and message of the notification email.
Message	

Note: An asterisk (*) next to a value indicates the factory default setting.

Security

Login Methods

Public

Menu item	Description
Manage Permissions Function Access Manage Shortcuts Create Profiles Manage Bookmarks Flash Drive Print Flash Drive Color Printing Flash Drive Scan Copy Function Copy Color Printing E-mail Function Fax Function FTP Function Release Held Faxes Held Jobs Access User Profiles Cancel Jobs at the Device Change Language Internet Printing Protocol (IPP) Initiate Scans Remotely B/W Print Color Print Network Folder - Scan	Control access to the printer functions.
Manage Permissions Administrative Menus Security Menu Network/Ports Menu Paper Menu Reports Menu Function Configuration Menus Supplies Menu SE Menu Device Menu	Control access to the printer menus.

Menu item	Description
Manage Permissions Device Management Remote Management Firmware Updates Embedded Web Server Access Import / Export All Settings Out of Service Erase	Control access to the printer management options.

Local Accounts

Menu item	Description
Add User User Name/Password User Name Password PIN	Create local accounts to manage access to the printer functions.
Manage Groups/Permissions Add Group Import Access Controls Function Access Administrative Menus Device Management All Users Import Access Controls Function Access Administrative Menus Device Management Admin Function Access Administrative Menus Device Management	Control group or user access to the printer functions, applications, and security settings.

Certificate Management

Menu item	Menu item
Configure Certificate Defaults Common Name Organization Name Unit Name Country/Region Province Name City Name Subject Alternate Name	Set the default values for generated certificates.
Device Certificates	Generate, delete, or view device certificates.
Manage CA Certificates	Load, delete, or view Certificate Authority (CA) certificates.

Schedule USB Devices

Menu item	Description
Schedules Add New Schedule	Schedule access to the front USB port.

Login Restrictions

Menu item	Description
Login failures 1–10 (3*)	Specify the number of failed login attempts before the user gets locked out.
Failure time frame 1–60 minutes (5*)	Specify the time frame between failed login attempts before the user gets locked out.
Lockout time 1–60 minutes (5*)	Specify the lockout duration.
Web Login Timeout 1–120 minutes (10*)	Specify the delay for a remote login before the user is logged off automatically.

Note: An asterisk (*) next to a value indicates the factory default setting.

Confidential Print Setup

Menu item	Description
Max Invalid PIN 2–10 (0*)	Set the number of times an invalid PIN can be entered. Notes • A value of zero turns off this setting. • When the limit is reached, the print jobs for that user name and PIN are deleted.
Confidential Job Expiration Off* 1 Hour 4 Hours 24 Hours 1 Week	Set the expiration time for confidential print jobs. Notes • If this menu item is changed while confidential print jobs reside in the printer memory, then the expiration time for those print jobs does not change to the new default value. • If the printer is turned off, then all confidential jobs held in the printer memory are deleted.
Repeat Job Expiration Off* 1 Hour 4 Hours 24 Hours 1 Week	Set the expiration time for a print job that you want to repeat.
Verify Job Expiration Off* 1 Hour 4 Hours 24 Hours 1 Week	Set the expiration time that the printer prints a copy for the user to examine its quality, before printing the remaining copies.
Reserve Job Expiration Off* 1 Hour 4 Hours 24 Hours 1 Week	Set the expiration time that the printer stores print jobs for printing later.
Require All Jobs to be Held Off* On	Set the printer to hold all print jobs.

Menu item	Description
Keep duplicate documents Off* On	Allow the storage of documents with the same file name.

Note: An asterisk (*) next to a value indicates the factory default setting.

Erase Temporary Data Files

Menu item	Description
Stored in onboard memory Off* On	Delete all files stored on the printer memory.

Note: An asterisk (*) next to a value indicates the factory default setting.

Miscellaneous

Menu item	Description
Print Permission Off* On	Allow the user to print.
Default Print Permission Login	Shows the default permission used for the user to print. Note: This setting shows only when one or more Login Methods are created.
Security Reset Jumper Enable "Guest" access* No Effect	Specify user access to the printer. Notes • The jumper is located beside a lock icon on the controller board. • Enable "Guest" access gives anyone access to all aspects of the printer. • No Effect may make access to the printer impossible when the required security information is unavailable.
Minimum Password Length 0–32	Specify the password length.

Menu item	Description
Enable Password/PIN Reveal	Show the password or personal identification number.

Note: An asterisk (*) next to a value indicates the factory default setting.

Cloud Connector

Menu item	Description
Enable/Disable Connectors	Enable a cloud storage provider.

Reports

Menu Settings Page

Menu item	Description
Menu Settings Page	Print a report that contains the printer menus.

Device

Menu item	Description
Device Information	Print a report that contains information about the printer.
Device Statistics	Print a report about supply status, paper count, job information, and more.
Profile List	Print a list of profiles that are stored in the printer.
Asset Report	Print a diagnostic tool for print problems. Note: To avoid clipping the content, print the report on Letter- or A4-size paper.

Print

Menu item	Description
Print Fonts PCL Fonts PostScript Fonts	Print samples and information about the fonts that are available in each printer language.

Menu item	Description
Print Demo Demo Page	Print a demo page that is used as a diagnostic tool for print problems.

Shortcuts

Menu item	Description
All Shortcuts	Print a report that lists the shortcuts that are stored in the printer. Note: Fax Shortcuts appears only in some printer models.
Fax Shortcuts	
Copy Shortcuts	
E-mail Shortcuts	
FTP Shortcuts	
Network Folder Shortcuts	

Fax

Note: This menu appears only if Fax is configured, and Enable Job Log is set to On.

Menu item	Description
Fax Job Log	Print a report about the last 200 completed fax jobs.
Fax Call Log	Print a report about the last 100 attempted, received, and blocked calls.

Network

Menu item	Description
Network Setup Page	Print a page that shows the configured network and wireless settings on the printer. Note: This menu item appears only in network printers or printers connected to print servers.

Menu item	Description
Wi-Fi Direct Connected Clients	Print a page that shows the list of devices that are connected to the printer using Wi-Fi Direct. Note: This menu item appears only when Enable Wi-Fi Direct is set to On.

Troubleshooting

Menu item	Description
Print Quality Test Pages	Print sample pages to identify and correct print quality defects.
Cleaning the Scanner	Print instructions on how to clean the scanner.

Maintain the printer

Checking the status of parts and supplies

1. From the home screen, touch **Status/Supplies**.
2. Select the parts or supplies that you want to check.

Note: You can also access this setting by touching the top section of the home screen.

Configuring supply notifications

1. Open a web browser, and then type the printer IP address in the address field.

Notes

- You can find the IP address at the top of the printer display.
- Make sure that the printer and computer are connected to the same network.

2. Click **Settings** > **Device** > **Notifications**.
3. From the Supplies menu, click **Custom Supply Notifications**.
4. Select a notification for each supply item.
5. Apply the changes.

Setting up email alerts

Email alerts let you set up a mail server so the printer can automatically send messages to a group of email addresses when certain events happen. For more information on SMTP settings, see [Configuring the email SMTP settings on page 71](#).

1. Open a web browser, and then type the printer IP address in the address field.

Notes

- You can find the IP address at the top of the printer display.
- Make sure that the printer and computer are connected to the same network.

2. Click **Settings** > **Device** > **Notifications**.
3. Click **Email Alerts Setup**.
4. Click **Setup Email Lists and Alerts**, and then do the following:
 - Specify the email addresses that you want to send the alerts to.
 - Specify the subject of the email alert.
 - Specify the printer events that you want to send.

5. Click **Save**.

Viewing reports

1. From the home screen, touch **Settings > Reports**.
2. Select the report that you want to view.

Ordering parts and supplies

Contact information and precaution

To order supplies in the U.S., contact Lexmark at 1-800-539-6275 for information about Lexmark authorized supplies dealers in your area. In other countries or regions, go to www.lexmark.com or contact the place where you purchased the printer.

Note: All life estimates for printer supplies assume printing on letter- or A4-size plain paper.

Warning—Potential Damage

Failure to maintain optimum printer performance or to replace supplies can cause damage to your printer.

Using genuine Lexmark parts and supplies

Your Lexmark printer is designed to function best with genuine Lexmark parts and supplies. Use of third-party supplies or parts may affect the performance, reliability, or life of the printer and its imaging components. It can also affect warranty coverage. Damage caused by the use of third-party parts and supplies is not covered by the warranty. All life indicators are designed to function with Lexmark parts and supplies, and may deliver unpredictable results if third-party parts and supplies are used. Imaging component usage beyond the intended life may damage your Lexmark printer or its associated components.

Warning—Potential Damage

Supplies and parts without Return Program agreement terms may be reset and remanufactured. However, the manufacturer's warranty does not cover any damage caused by non-genuine supplies or parts. Resetting counters on the supply or part without proper remanufacturing can cause damage to your printer. After resetting the supply or part counter, your printer may display an error indicating the presence of the reset item.

Ordering print cartridges

Notes

- The estimated cartridge yield is based on the ISO/IEC 19798 standard.
- Extremely low print coverage for extended periods of time may negatively affect actual yield.

Maintain the printer

Item	United States and Canada	European Economic Area	Asia Pacific	Latin America	Rest of Europe, Middle East, and Africa
Return Program print cartridges					
Cyan	20N10C0	20N20C0	20N30C0	20N40C0	20N50C0
Magenta	20N10M0	20N20M0	20N30M0	20N40M0	20N50M0
Yellow	20N10Y0	20N20Y0	20N30Y0	20N40Y0	20N50Y0
Black	20N10K0	20N20K0	20N30K0	20N40K0	20N50K0
High yield Return Program print cartridges ¹					
Cyan	20N1HC0	20N2HC0	20N3HC0	20N4HC0	20N5HC0
Magenta	20N1HM0	20N2HM0	20N3HM0	20N4HM0	20N5HM0
Yellow	20N1HY0	20N2HY0	20N3HY0	20N4HY0	20N5HY0
Black	20N1HK0	20N2HK0	20N3HK0	20N4HK0	20N5HK0
Extra high yield Return Program print cartridges ²					
Cyan	20N1XC0	20N2XC0	20N3XC0	20N4XC0	20N5XC0
Magenta	20N1XM0	20N2XM0	20N3XM0	20N4XM0	20N5XM0
Yellow	20N1XY0	20N2XY0	20N3XY0	20N4XY0	20N5XY0
Black	20N1XK0	20N2XK0	20N3XK0	20N4XK0	20N5XK0

¹ Supported only in the Lexmark CX331 printer model.

² Supported only in the Lexmark CX431 printer model.

For more information on countries located in each region, go to www.lexmark.com/regions.

Item	Part number
Cyan	20N0H20
Magenta	20N0H30
Yellow	20N0H40
Black	20N0H10

Maintain the printer

Item	Part number
Cyan	20N0X20
Magenta	20N0X30
Yellow	20N0X40
Black	20N0X10

Item	United States and Canada	European Economic Area	Asia Pacific	Latin America Distribution	Rest of Europe, Middle East, and Africa
Return Program print cartridges					
Cyan	C3210C0	C3220C0	C3230C0	C3240C0	C3250C0
Magenta	C3210M0	C3220M0	C3230M0	C3240M0	C3250M0
Yellow	C3210Y0	C3220Y0	C3230Y0	C3240Y0	C3250Y0
Black	C3210K0	C3220K0	C3230K0	C3240K0	C3250K0
High yield Return Program print cartridges ¹					
Cyan	C331HC0	C332HC0	C333HC0	C334HC0	C335HC0
Magenta	C331HM0	C332HM0	C333HM0	C334HM0	C335HM0
Yellow	C331HY0	C332HY0	C333HY0	C334HY0	C335HY0
Black	C331HK0	C332HK0	C333HK0	C334HK0	C335HK0
Extra high yield Return Program print cartridges ²					
Cyan	C341XC0	C342XC0	C343XC0	C344XC0	C345XC0
Magenta	C341XM0	C342XM0	C343XM0	C344XM0	C345XM0
Yellow	C341XY0	C342XY0	C343XY0	C344XY0	C345XY0
Black	C341XK0	C342XK0	C343XK0	C344XK0	C345XK0

¹ Supported only in the Lexmark MC3326 printer model.

² Supported only in the Lexmark MC3426 printer model.

Item	Part number
Cyan	C320020
Magenta	C320030
Yellow	C320040
Black	C320010

Item	Part number
Cyan	C330H20
Magenta	C330H30
Yellow	C330H40
Black	C330H10

Item	Part number
Cyan	C340X20
Magenta	C340X30
Yellow	C340X40
Black	C340X10

Item	United States and Canada	Europe, Middle East, Africa, and Mexico
Cyan	24B7495	24B7499
Magenta	24B7496	24B7500
Yellow	24B7497	24B7501
Black	24B7498	24B7502

Ordering a waste toner bottle


Item	Part number
Waste toner bottle	20N0W00

Replacing parts and supplies



Replacing a print cartridge

Note: If the tray is extended, then remove it before replacing a cartridge.

1. Open the front door, and then firmly push it down.
2. Pull out the print cartridge tray.

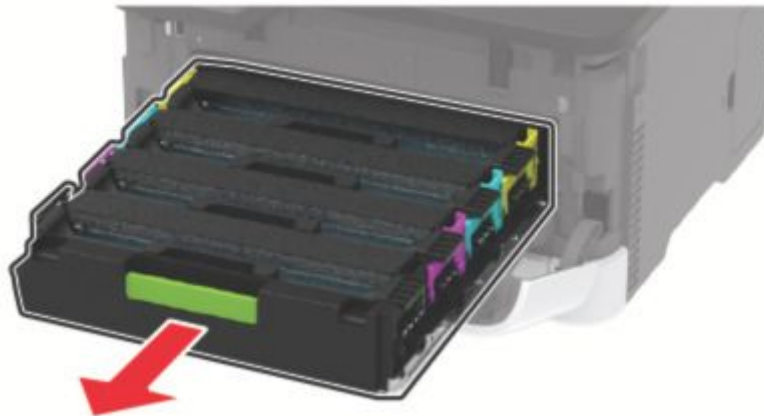

3. Remove the used print cartridge.

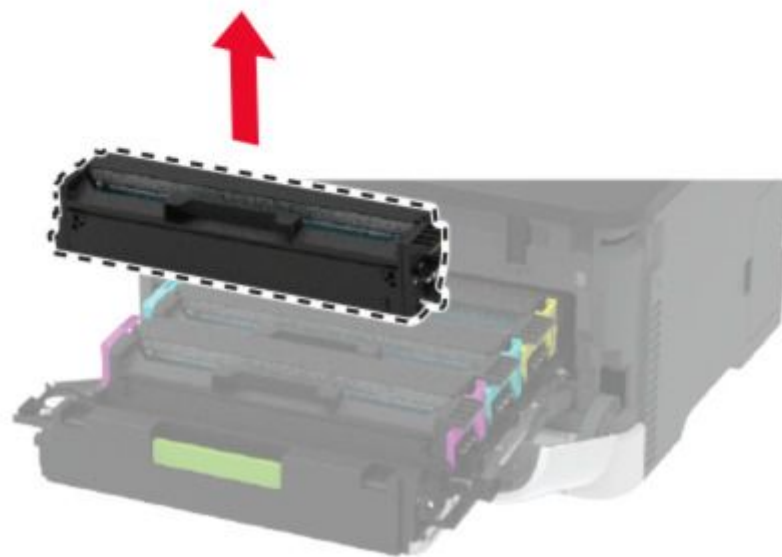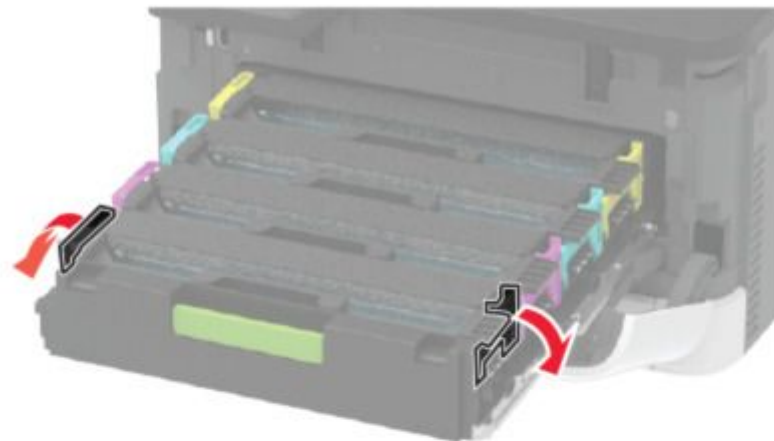

4. Unpack the new print cartridge.

Warning—Potential Damage


Do not expose the underside of the print cartridge to direct light. Extended exposure to light may cause print quality problems.

Warning—Potential Damage

Do not touch the underside of the print cartridge. Doing so may affect the quality of future print jobs.



5. Insert the new print cartridge.

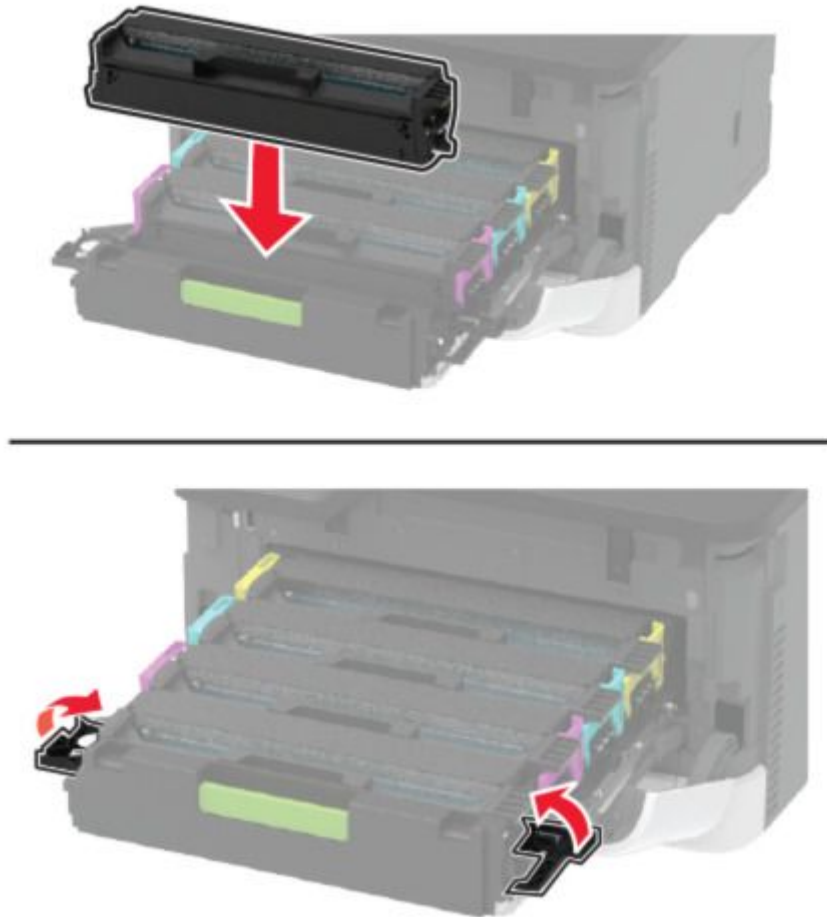

6. Insert the print cartridge tray, and then close the door.

Replacing the waste toner bottle

1. Remove the used waste toner bottle.



Note: To avoid spilling the toner, place the bottle in an upright position.

2. Unpack the new waste toner bottle.
3. Insert the new waste toner bottle.



Replacing the tray

1. Remove the used tray.



2. Unpack the new tray.
3. Insert the new tray.



Replacing the manual feeder

1. Remove the tray.



2. Remove the used manual feeder.




3. Unpack the new manual feeder.
4. Insert the new manual feeder.






5. Insert the tray.

Replacing the ADF tray


1. Open the ADF cover.

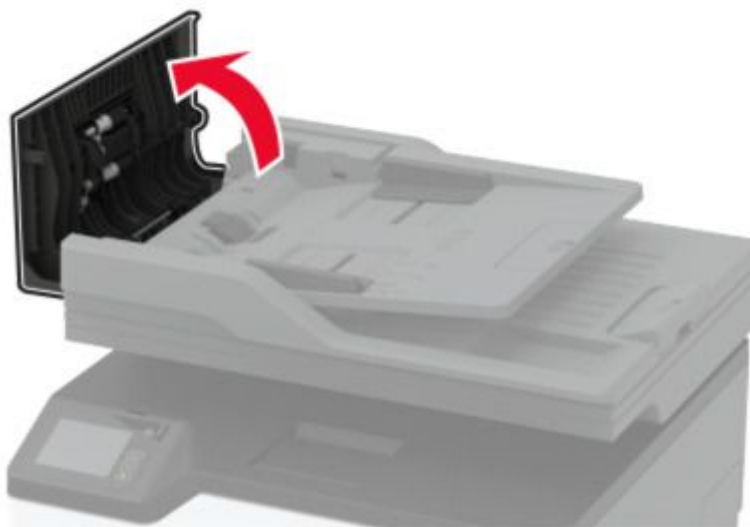

2. Remove the used ADF tray.

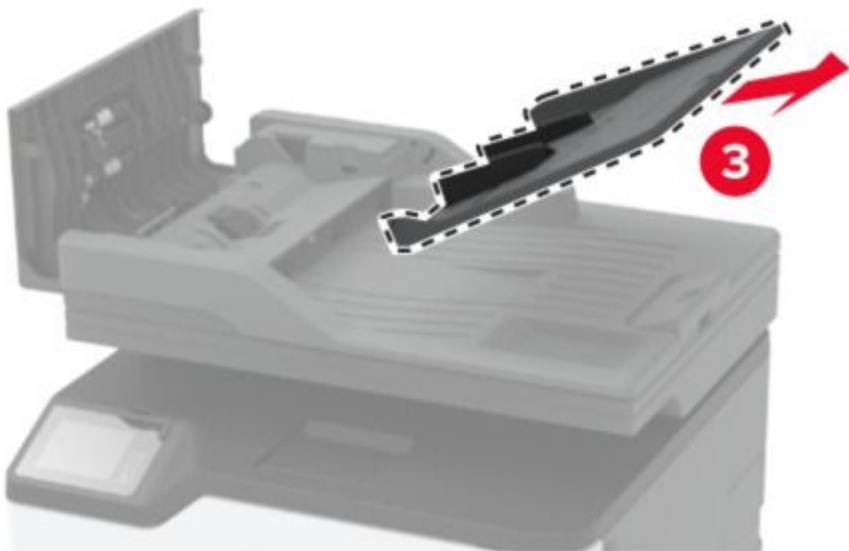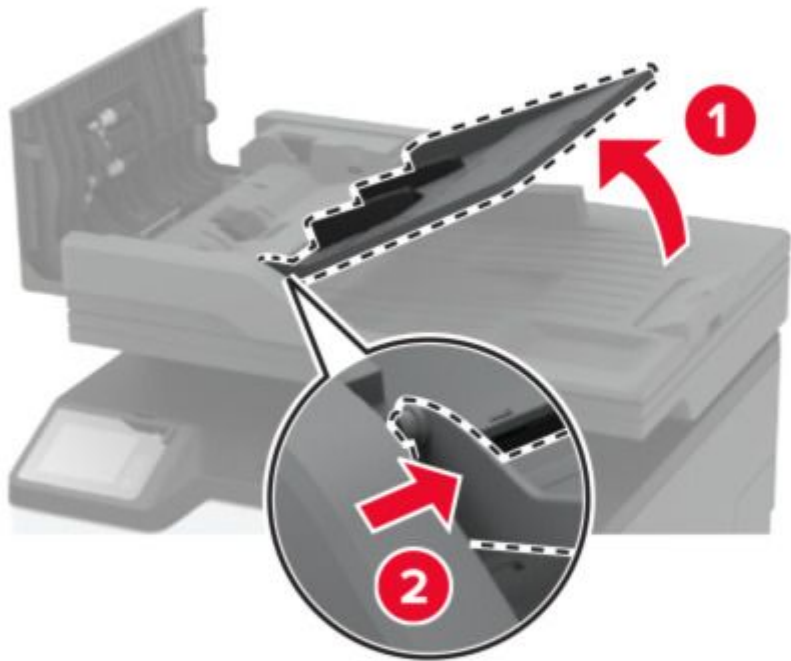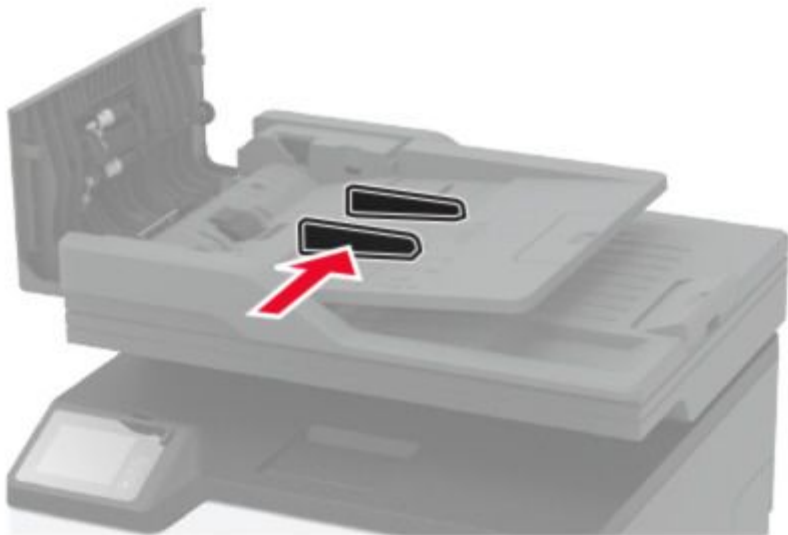

3. Unpack the new ADF tray.
4. Insert the new ADF tray until it clicks into place.

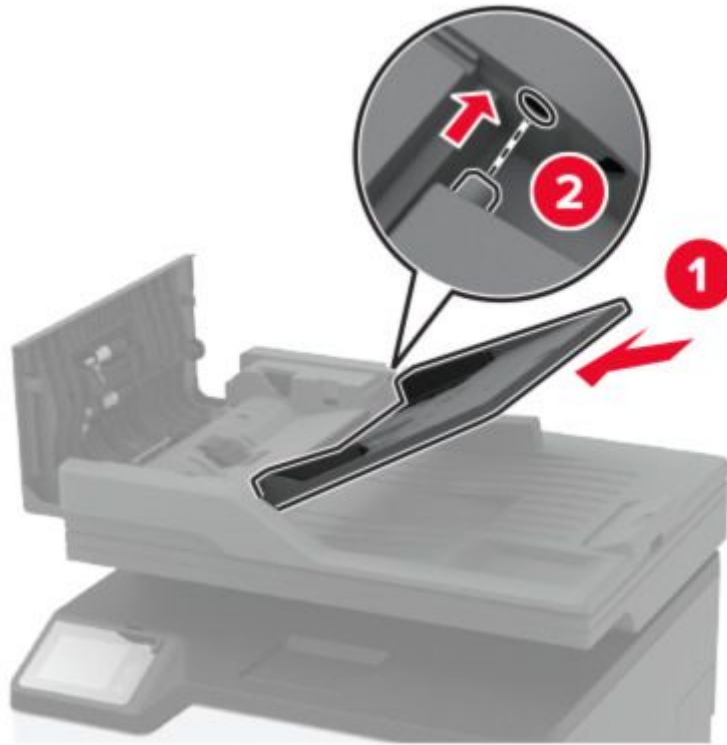


5. Close the ADF cover.

Replacing the pick tires

1. Turn off the printer.


2. Unplug the power cord from the electrical outlet, and then from the printer.
3. Open the front door, and then firmly push it down.

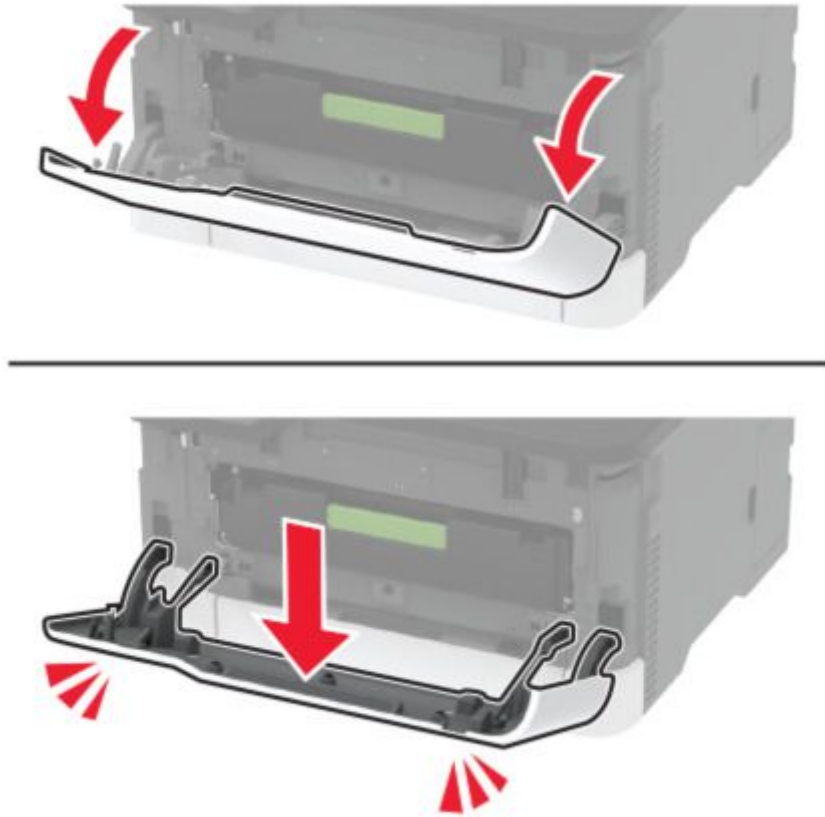

4. Pull out the print cartridge tray.



5. To avoid stray toner contamination, place a sheet of paper on the top of the print cartridge tray, and then insert the print cartridge tray.

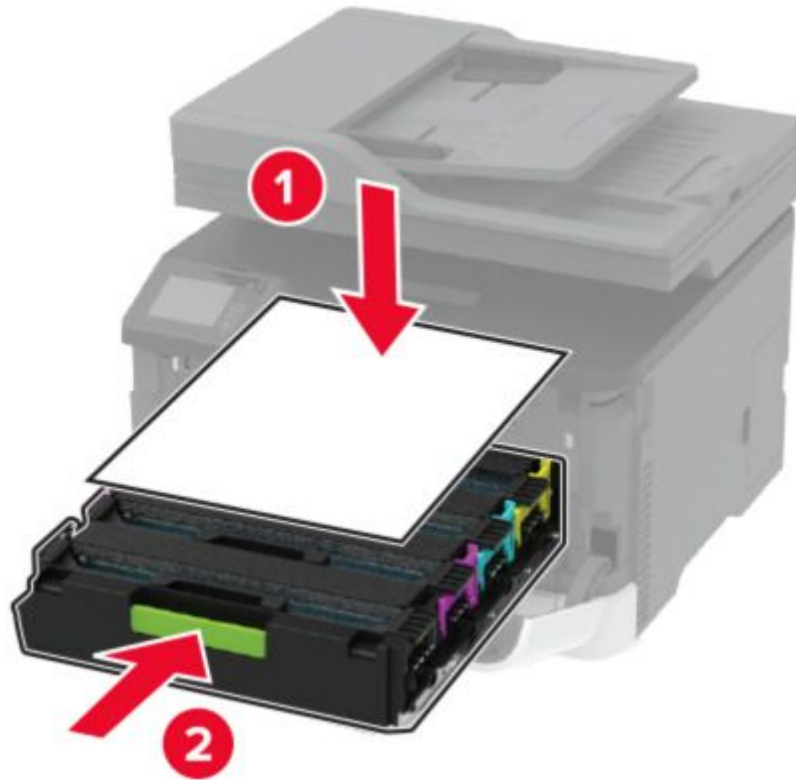

6. Close the front door.

7. Remove the tray.



8. Remove the waste toner bottle.




Note: To avoid spilling the toner, place the bottle in an upright position.

9. Position the printer on its side.




10. Remove the used pick tires.

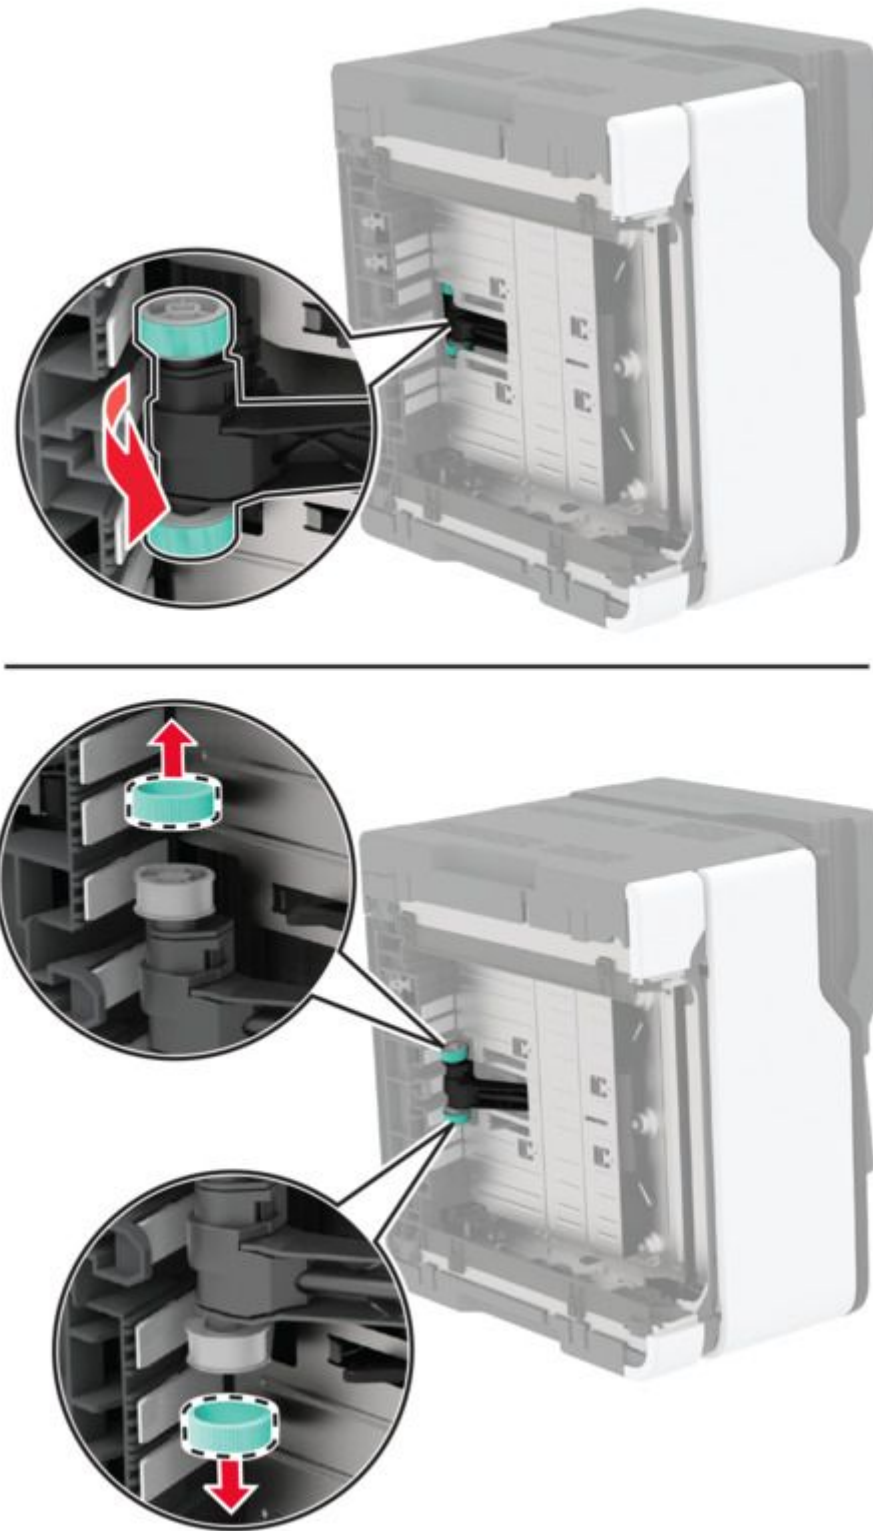

11. Unpack the new pick tires.

Note: To avoid contamination, make sure that your hands are clean.

12. Insert the new pick tires.

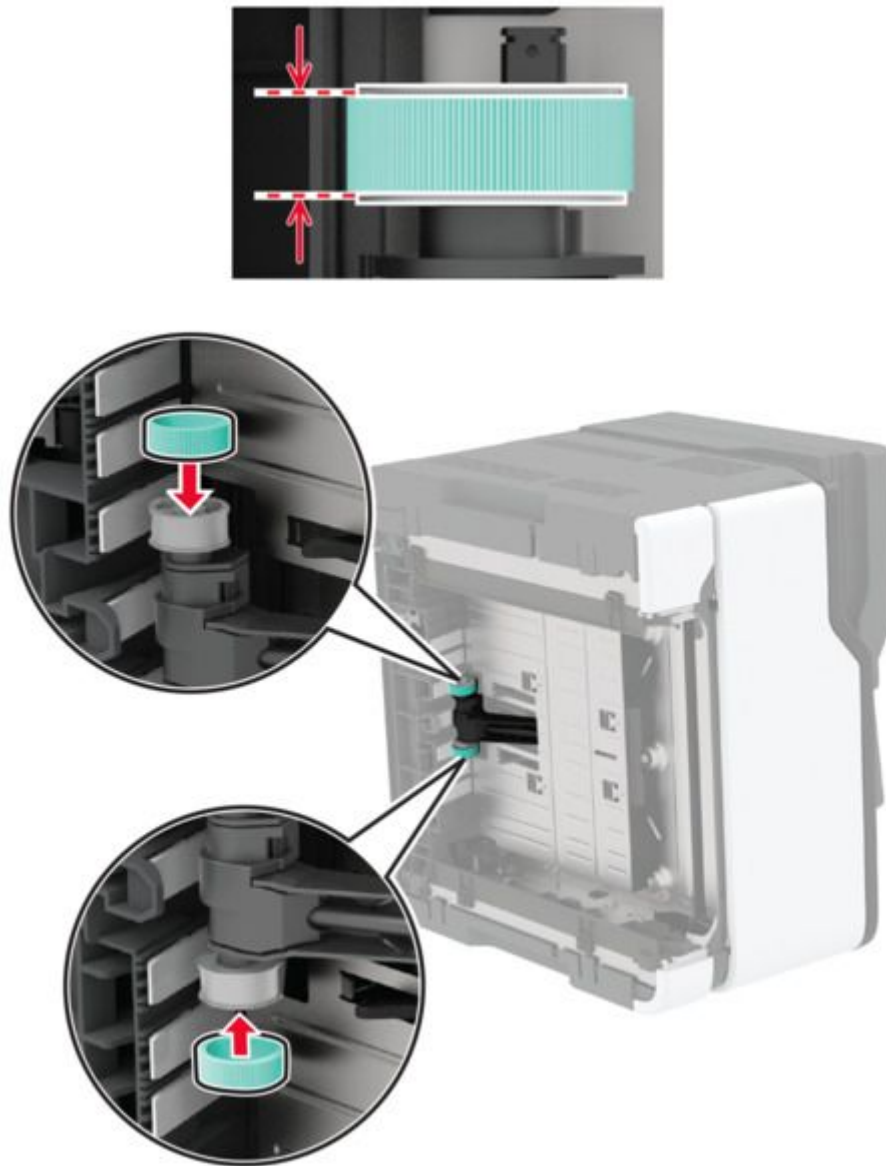

13. Return the printer to its original position, and then insert the waste toner bottle.
14. Insert the tray.
15. Open the front door, and then firmly push it down.
16. Pull out the print cartridge tray.
17. Remove the paper, and then insert the print cartridge tray.
18. Close the front door.
19. Connect the power cord to the printer, and then to the electrical outlet.




CAUTION—POTENTIAL INJURY

To avoid the risk of fire or electrical shock, connect the power cord to an appropriately rated and properly grounded electrical outlet that is near the product and easily accessible.



20. Turn on the printer.

Replacing the ADF separator pad



1. Open the ADF cover.

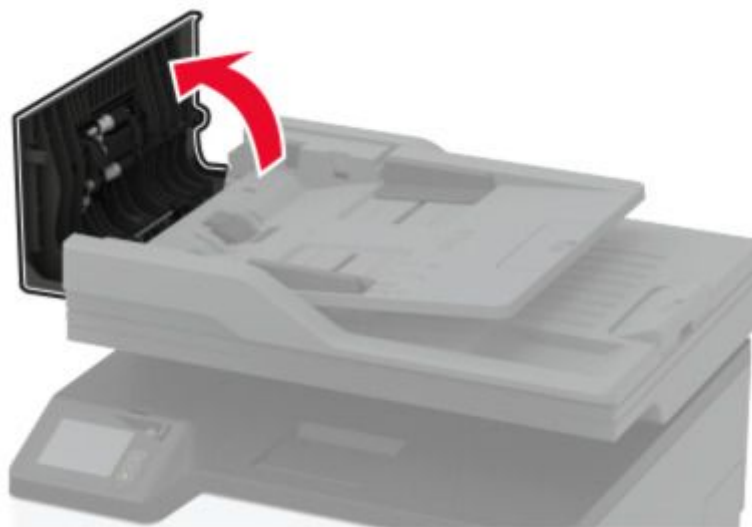

2. Remove the used ADF separator pad.

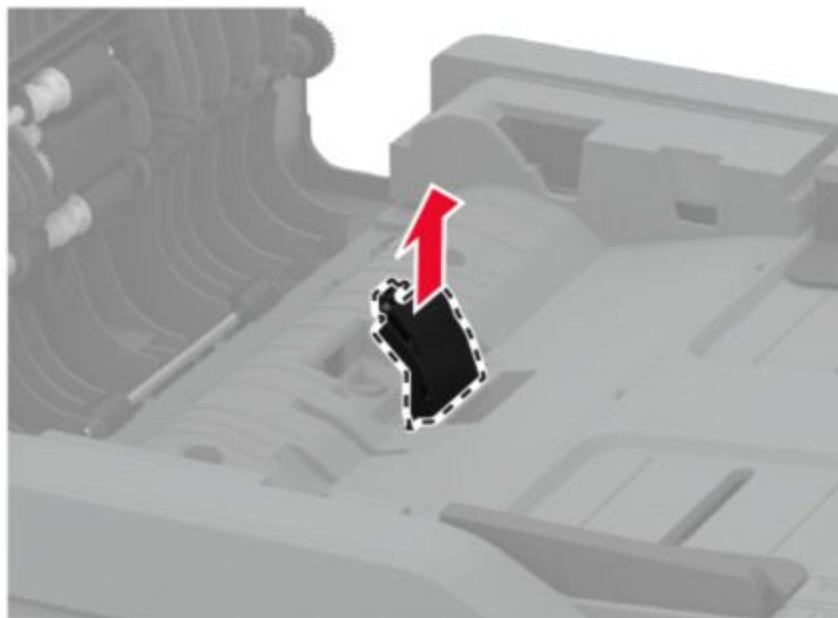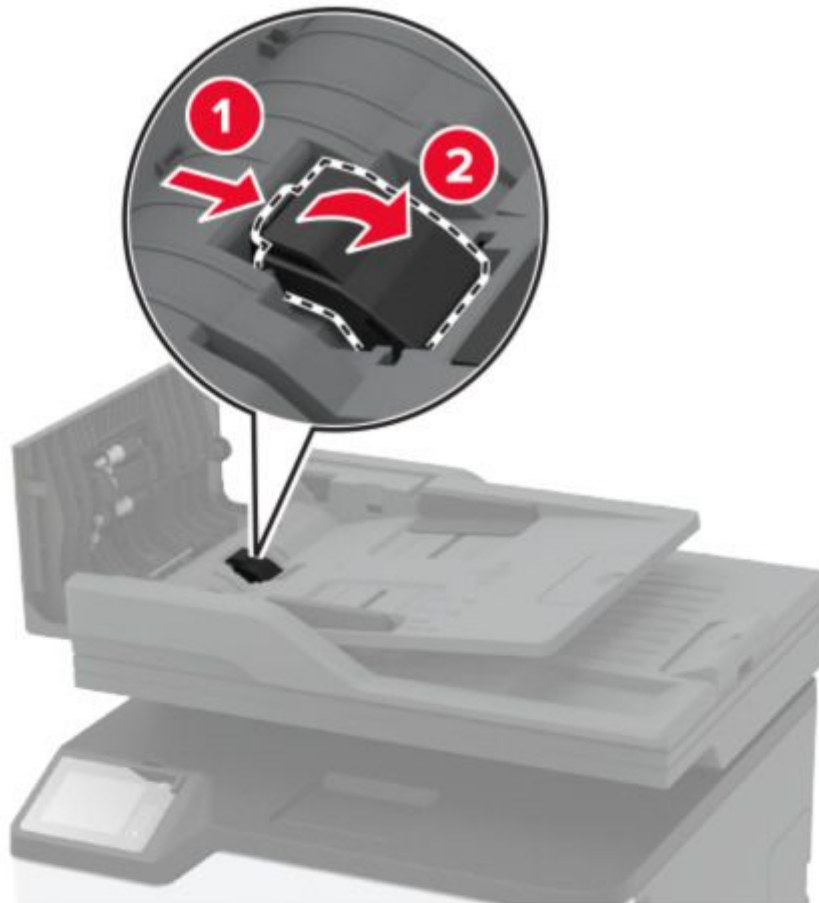

3. Unpack the new ADF separator pad.
4. Insert the new separator pad until it clicks into place.

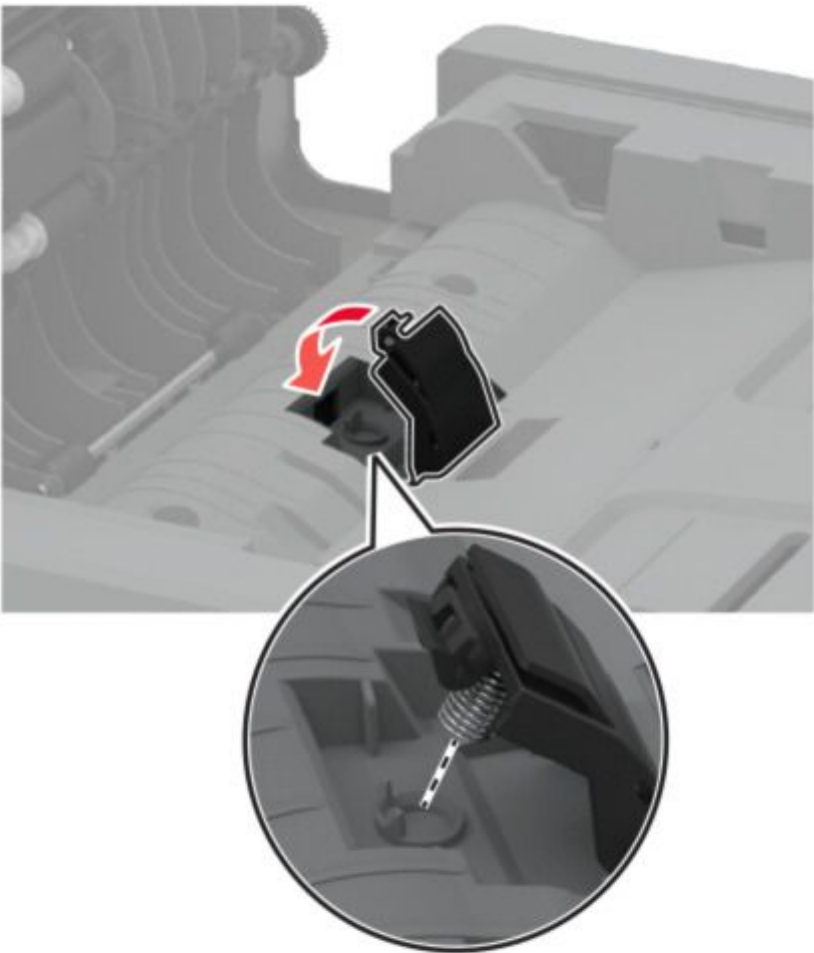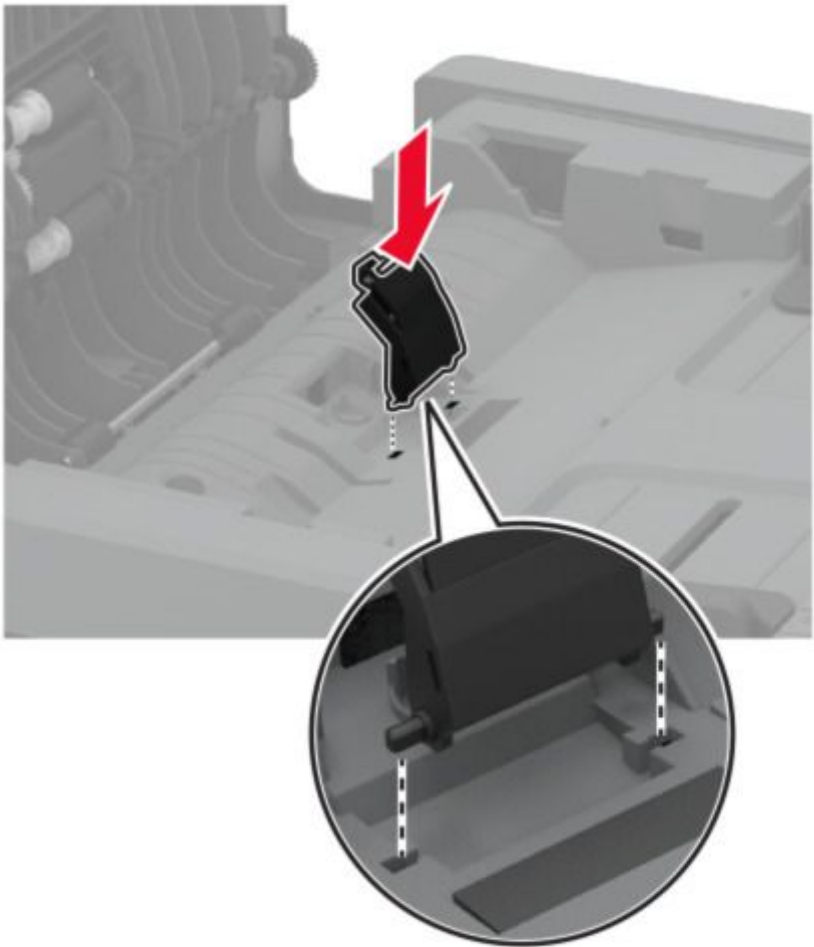

5. Close the ADF cover.

Resetting the supply usage counters

1. From the control panel, navigate to **Settings** › **Device** › **Maintenance** › **Config Menu** › **Supply Usage And Counters**.
2. Select the counter that you want to reset.

Warning—Potential Damage

Supplies and parts without Return Program agreement terms may be reset and remanufactured. However, the manufacturer's warranty does not cover any damage caused by non-genuine supplies or parts. Resetting counters on the supply or part without proper remanufacturing can cause damage to your printer. After resetting the supply or part counter, your printer may display an error indicating the presence of the reset item.

Cleaning printer parts

Cleaning the exterior of the printer

Regular maintenance of your printer is essential to ensure its longevity and optimal performance. When cleaning the printer, take the necessary precautions to avoid damage. Damage to the printer caused by improper handling is not covered by the printer warranty.

1. Turn off the printer, and then unplug the power cord from the electrical outlet.



CAUTION—SHOCK HAZARD

To avoid the risk of electrical shock when cleaning the exterior of the printer, unplug the power cord from the electrical outlet and disconnect all cables from the printer before proceeding.

2. Remove paper from the standard bin, the trays, and the multipurpose feeder or manual feeder.
3. Using a soft brush, remove any dust, lint, and pieces of paper around the printer.
4. Using a damp, soft, lint-free cloth, wipe the following areas:
 - Control panel
 - Standard bin
 - Trays
 - Multipurpose feeder or manual feeder
 - Front, sides, and rear of the printer

Warning—Potential Damage

- To avoid damaging the finish of the printer, do not use household cleaners or detergents.
- Do not use aerosol cleaners, as they may cause explosions or fires when used on electromechanical equipment.

5. Make sure that all areas of the printer are dry after cleaning.

6. Connect the power cord to the electrical outlet, and then turn on the printer.

**CAUTION—POTENTIAL INJURY**

To avoid the risk of fire or electrical shock, connect the power cord to an appropriately rated and properly grounded electrical outlet that is near the product and easily accessible.

Cleaning the touch screen

**CAUTION—SHOCK HAZARD**

To avoid the risk of electric shock when cleaning the exterior of the printer, unplug the power cord from the electrical outlet and disconnect all cables from the printer before proceeding.

1. Turn off the printer, and then unplug the power cord from the electrical outlet.
2. Using a damp, soft, lint-free cloth, wipe the touch screen.

Notes

- Do not use household cleaners or detergents, as they may damage the touch screen.
- Make sure that the touch screen is dry after cleaning.

3. Connect the power cord to the electrical outlet, and then turn on the printer.

**CAUTION—POTENTIAL INJURY**

To avoid the risk of fire or electrical shock, connect the power cord to an appropriately rated and properly grounded electrical outlet that is near the product and easily accessible.

Cleaning the scanner

1. Open the scanner cover.



2. Using a damp, soft, lint-free cloth, wipe the following areas:

- Automatic document feeder (ADF) glass pad

Note: In some printer models, this location has an ADF glass instead of a pad.



- Scanner glass pad



- ADF glass




- Scanner glass



3. Close the scanner cover.

Cleaning the pick tires


1. Turn off the printer.
2. Unplug the power cord from the electrical outlet, and then from the printer.
3. Open the front door, and then firmly push it down.

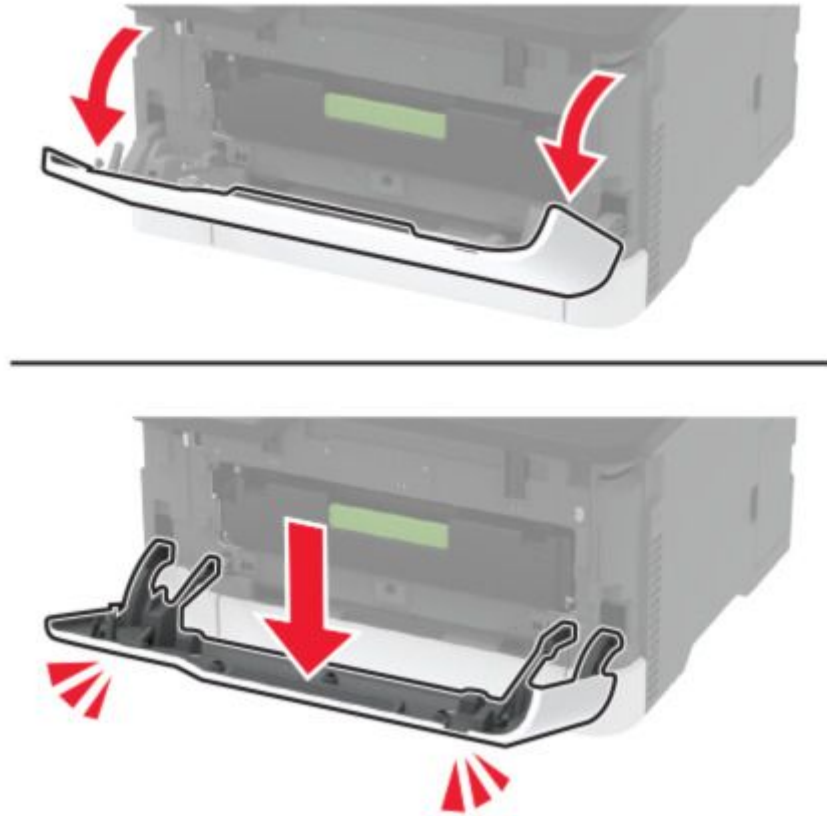

4. Pull out the print cartridge tray.



5. To avoid stray toner contamination, place a sheet of paper on top of the print cartridge tray, and then insert the print cartridge tray.

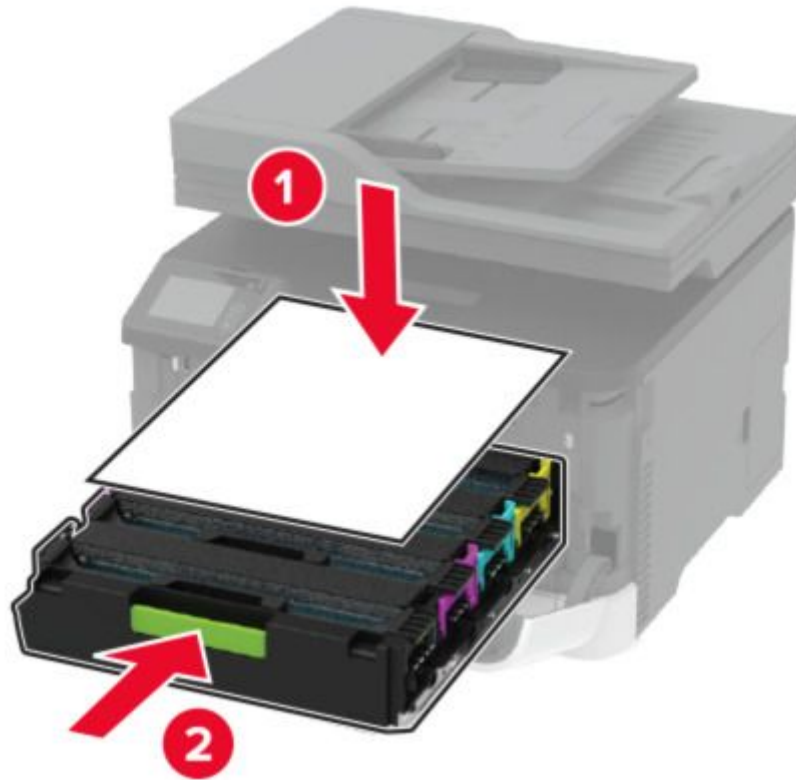

6. Close the front door.

7. Remove the tray.



8. Remove the waste toner bottle.




Note: To avoid spilling the toner, place the bottle in an upright position.


9. Position the printer on its side.



10. Remove the pick tires.

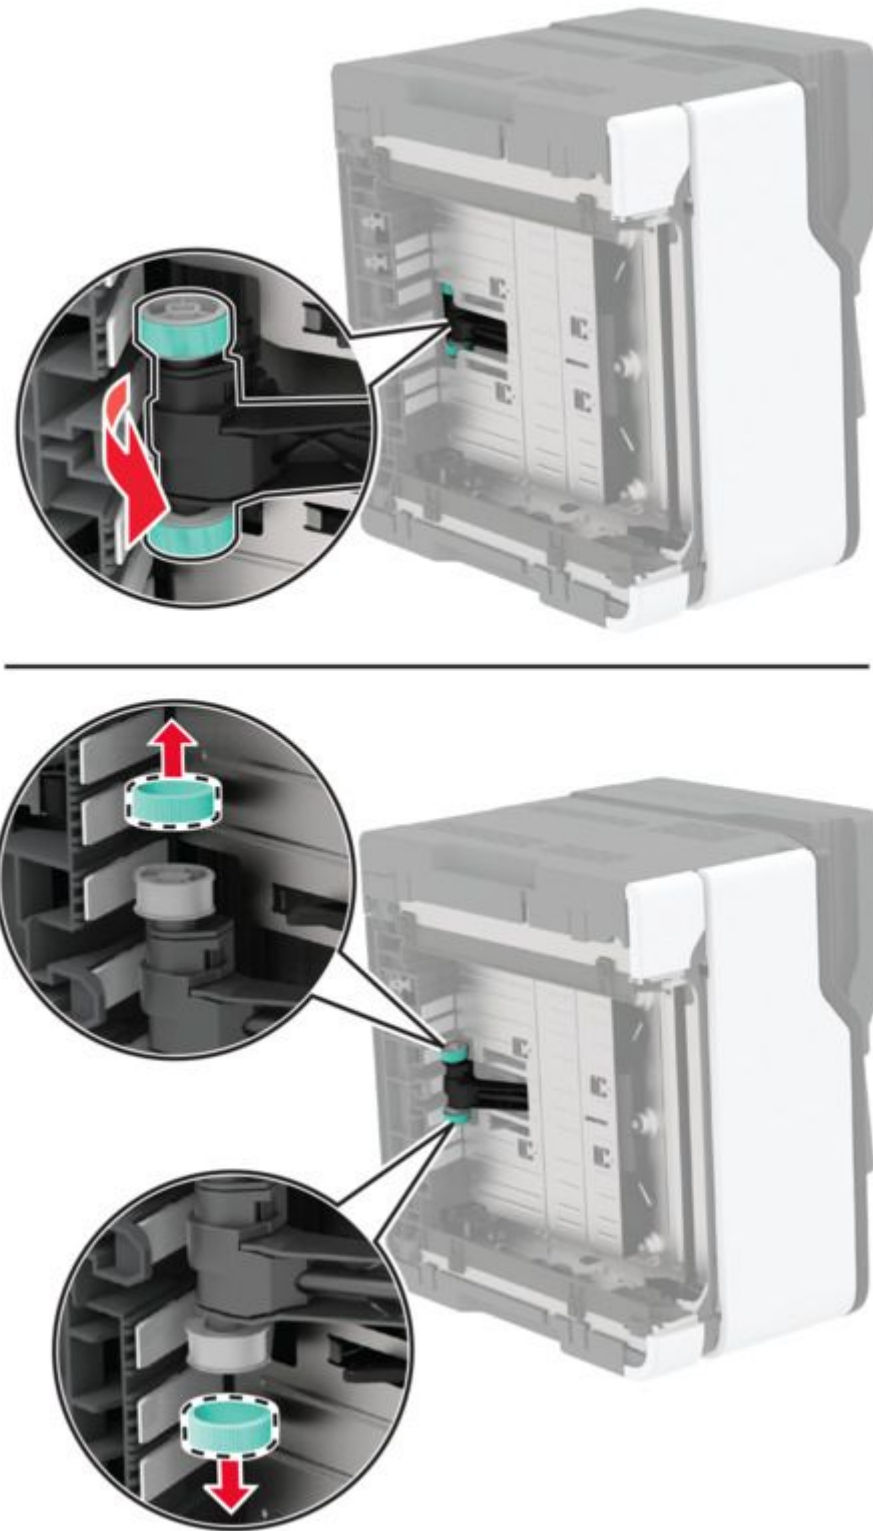

11. Apply isopropyl alcohol to a soft, lint-free cloth, and then wipe the pick tires.
12. Insert the pick tires.

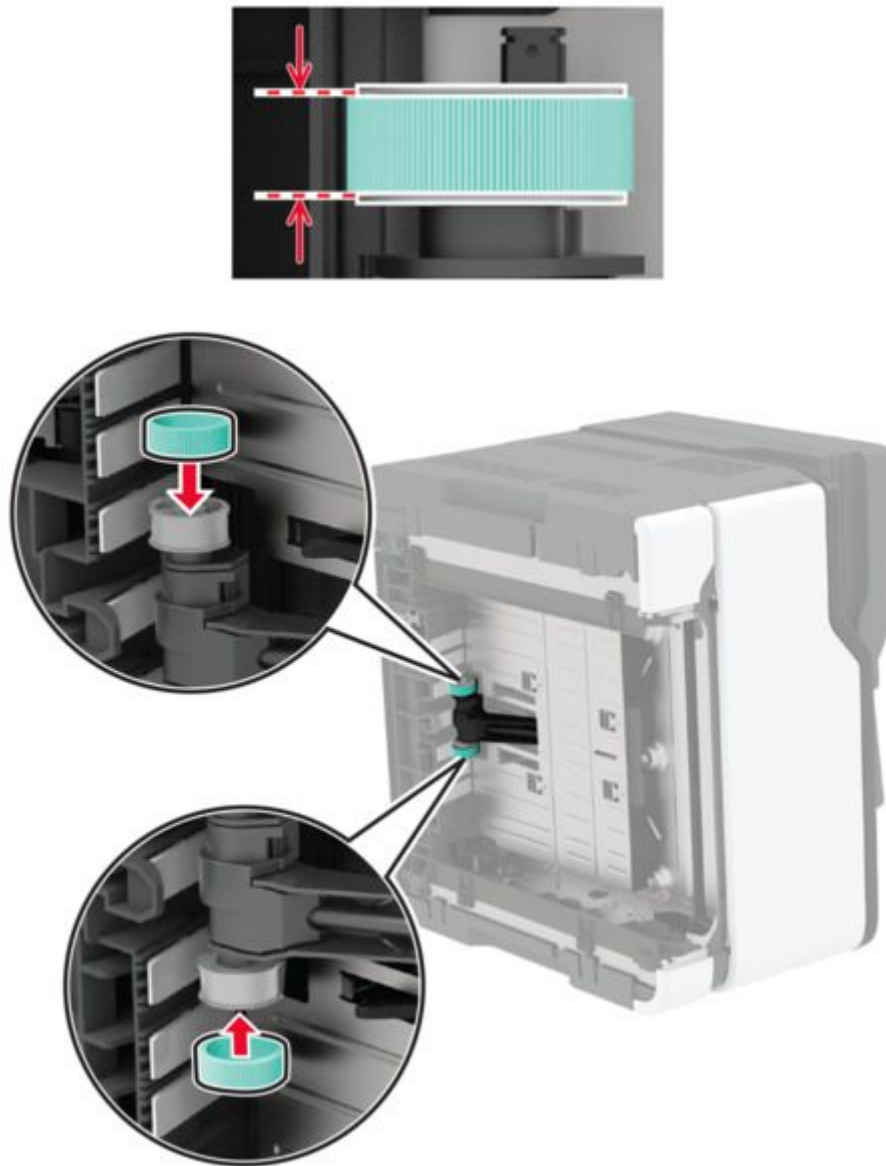

13. Return the printer to its original position, and then insert the waste toner bottle.
14. Insert the tray.
15. Open the front door, and then firmly push it down.
16. Pull out the print cartridge tray.
17. Remove the paper, and then insert the print cartridge tray.
18. Close the front door.
19. Connect the power cord to the printer, and then to the electrical outlet.



CAUTION—POTENTIAL INJURY

To avoid the risk of fire or electrical shock, connect the power cord to an appropriately rated and properly grounded electrical outlet that is near the product and easily accessible.

20. Turn on the printer.

Saving energy and paper

Configuring the power save mode settings

Sleep mode

1. From the home screen, touch **Settings > Device > Power Management > Timeouts > Sleep Mode**.
2. Specify the amount of time that the printer stays idle before it enters Sleep Mode.

Hibernate mode

1. From the home screen, touch **Settings > Device > Power Management > Timeouts > Hibernate Timeout**.
2. Select the amount of time that the printer stays idle before it enters Hibernate mode.

Notes

- For Hibernate Timeout to work, set Hibernate Timeout on Connection to Hibernate.
- The Embedded Web Server is disabled when the printer is in Hibernate mode.

Adjusting the brightness of the printer display

1. From the home screen, touch **Settings > Device > Preferences > Screen Brightness**.
2. Adjust the setting.

Conserving supplies

- Print on both sides of the paper.

Note: Two-sided printing is the default setting in the print driver.

- Print multiple pages on a single sheet of paper.
- Use the preview feature to see how the document looks like before printing it.
- Print one copy of the document to check its content and format for accuracy.

Moving the printer to another location



CAUTION—POTENTIAL INJURY

If the printer weight is greater than 20 kg (44 lb), then it may require two or more people to lift it safely.



CAUTION—POTENTIAL INJURY

To avoid the risk of fire or electrical shock, use only the power cord provided with this product or the manufacturer's authorized replacement.



CAUTION—POTENTIAL INJURY

When moving the printer, follow these guidelines to avoid personal injury or printer damage:

- Make sure that all doors and trays are closed.
- Turn off the printer, and then unplug the power cord from the electrical outlet.
- Disconnect all cords and cables from the printer.
- If the printer has separate floor-standing optional trays or output options attached to it, then disconnect them before moving the printer.
- If the printer has a caster base, then carefully roll it to the new location. Use caution when passing over thresholds and breaks in flooring.
- If the printer does not have a caster base but is configured with optional trays or output options, then remove the output options and lift the printer off the trays. Do not try to lift the printer and any options at the same time.
- Always use the handholds on the printer to lift it.
- Any cart used to move the printer must have a surface able to support the full footprint of the printer.
- Any cart used to move the hardware options must have a surface able to support the dimensions of the options.
- Keep the printer in an upright position.
- Avoid severe jarring movements.
- Make sure that your fingers are not under the printer when you set it down.
- Make sure that there is adequate clearance around the printer.

Note: Damage to the printer caused by improper moving is not covered by the printer warranty.


Shipping the printer

For shipping instructions, go to <https://support.lexmark.com> or contact customer support.

Troubleshoot a problem

Print quality problems

Find the image that resembles the print quality problem you are having, and then click the link below it to read problem-solving steps.

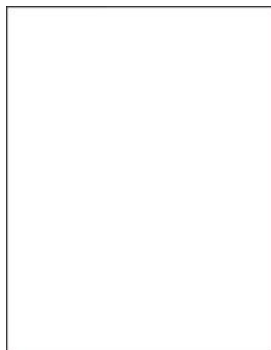

[Blank or white pages on page 198](#)



[Dark print on page 199](#)



[Ghost images on page 201](#)



[Gray or colored background on page 203](#)



[Incorrect margins on page 204](#)



[Light print on page 206](#)



[Missing colors on page 209](#)




[Mottled print and dots on page 209](#)



[Paper curl on page 211](#)




[Print crooked or skewed on page 213](#)

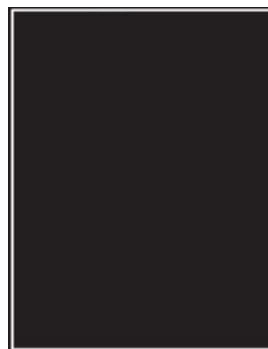

[Solid color or black images on page 214](#)




[Text or images cut off on page 215](#)

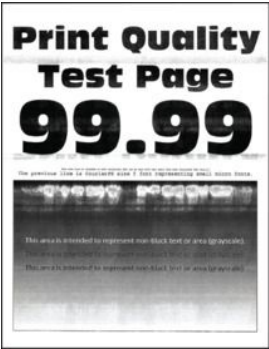 Toner easily rubs off on page 216	 Uneven print density on page 218	 Horizontal dark lines on page 219	 Vertical dark lines on page 221
 Horizontal white lines on page 222	 Vertical white lines on page 224	 Repeating defects on page 225	

Printing problems

Print quality is poor


Blank or white pages

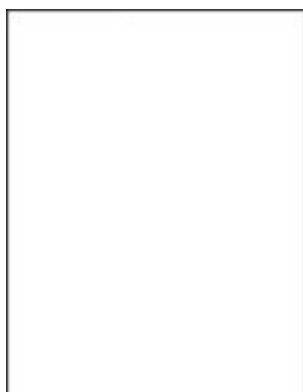

Note: Before solving the problem, print the Print Quality Test Pages. From the control panel, navigate to **Settings > Troubleshooting > Print Quality Test Pages**.

1. Perform the following tests:
 - a. Open the front door, and then firmly push it down.

- b. Pull out the print cartridge tray.
- c. Remove, and then insert the print cartridges.

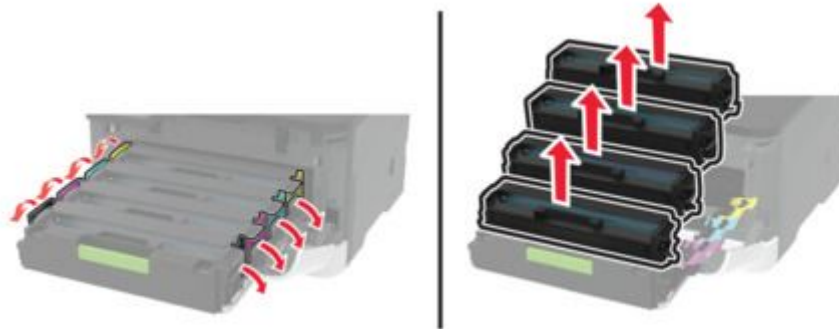

- d. Insert the print cartridge tray, and then close the door.
- e. Print the document.

Is the printer printing blank or white pages?

- **Yes:**
Contact [customer support](#).
- **No:**
The problem is solved.

Dark print



Note: Before solving the problem, print the Print Quality Test Pages. From the control panel, navigate to **Settings > Troubleshooting > Print Quality Test Pages**.

1. Perform the following tests:
 - a. Perform Color Adjust.
From the control panel, navigate to **Settings > Print > Quality > Advanced Imaging > Color Adjust**.
 - b. Print the document.

Is the print too dark?

- **Yes:**
Go to the next step.
- **No:**
The problem is solved.

2. Perform the following tests:

- a. Depending on your operating system, reduce toner darkness from the Printing Preferences or Print dialog.

Note: You can also change the setting on the printer control panel. Navigate to **Settings > Print > Quality > Toner Darkness**.

- b. Print the document.

Is the print too dark?

- **Yes:**
Go to the next step.
- **No:**
The problem is solved.

3. Perform the following tests:

- a. Depending on your operating system, specify the paper type from the Printing Preferences or Print dialog.

Notes

- Make sure that the setting matches the paper loaded.
- You can also change the setting on the printer control panel. Navigate to **Settings > Paper > Tray Configuration > Paper Size/Type**.

- b. Print the document.

Is the print too dark?

- **Yes:**
Go to the next step.
- **No:**
The problem is solved.

4. Check if the paper has texture or rough finishes.

Are you printing on textured or rough paper?

- **Yes:**
Go to the next step.
- **No:**
Go to step 6.

5. Perform the following tests:

Troubleshoot a problem

- a. Replace textured or rough paper with plain paper.
- b. Print the document.

Is the print too dark?

- **Yes:**
Go to the next step.
- **No:**
The problem is solved.

6. Perform the following tests:
 - a. Load paper from a fresh package.

Note: Paper absorbs moisture due to high humidity. Store paper in its original wrapper until you are ready to use it.

- b. Print the document.

Is the print too dark?

- **Yes:**
Contact [customer support](#).
- **No:**
The problem is solved.

Ghost images



Note: Before solving the problem, print the Print Quality Test Pages. From the control panel, navigate to **Settings > Troubleshooting > Print Quality Test Pages**.

1. Perform the following tests:
 - a. Load the tray with the correct paper type.
 - b. Print the document.

Do ghost images appear on prints?

- **Yes:**

Go to the next step.

- **No:**
The problem is solved.

2. Perform the following tests:

- a. Depending on your operating system, specify the paper type from the Printing Preferences or Print dialog.

Notes

- Make sure that the setting matches the paper loaded.
- You can also change the setting on the printer control panel. Navigate to **Settings > Paper > Tray Configuration > Paper Size/Type**.

- b. Print the document.

Do ghost images appear on prints?

- **Yes:**
Go to the next step.
- **No:**
The problem is solved.

3. Perform the following tests:

- a. Perform Color Adjust.

From the control panel, navigate to:

Settings > Print > Quality > Advanced Imaging > Color Adjust.


- b. Print the document.

Do ghost images appear on prints?

- **Yes:**
Go to the next step.
- **No:**
The problem is solved.

4. Perform the following tests:

- a. Open the front door, and then firmly push it down.
- b. Pull out the print cartridge tray.
- c. Remove, and then insert the print cartridges.

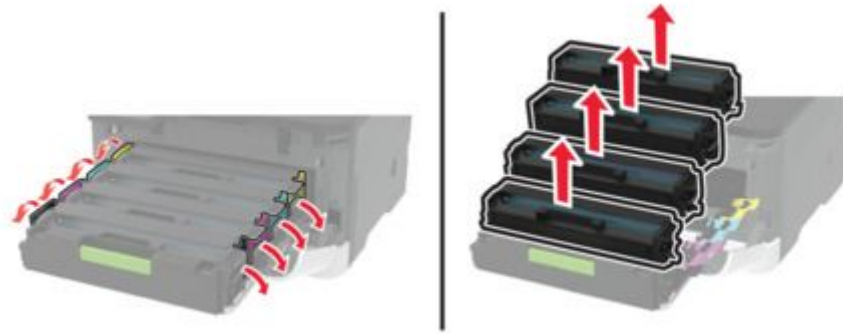

- d. Insert the print cartridge tray, and then close the door.
- e. Print the document.

Do ghost images appear on prints?

- **Yes:**
Contact [customer support](#).
- **No:**
The problem is solved.

Gray or colored background



Note: Before solving the problem, print the Print Quality Test Pages. From the control panel, navigate to **Settings > Troubleshooting > Print Quality Test Pages**.

1. Perform the following tests:
 - a. Perform Color Adjust.
From the control panel, navigate to:


Settings > Print > Quality > Advanced Imaging > Color Adjust.

- b. Print the document.

Does gray or colored background appear on prints?

- **Yes:**
Go to the next step.
- **No:**
The problem is solved.

2. Perform the following tests:
 - a. Open the front door, and then firmly push it down.
 - b. Pull out the print cartridge tray.
 - c. Remove, and then insert the print cartridges.

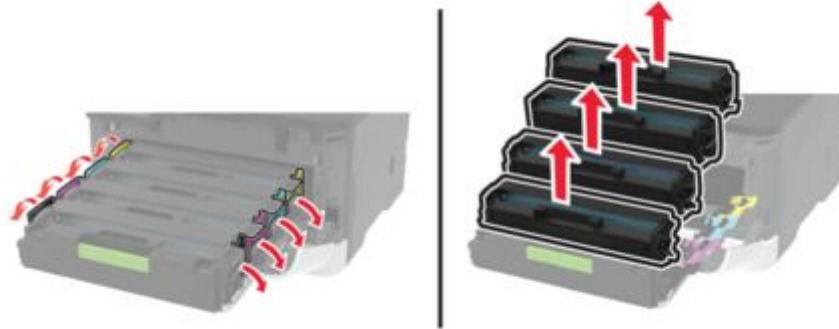

- d. Insert the print cartridge tray, and then close the door.
- e. Print the document.

Does gray or colored background appear on prints?

- **Yes:**
Contact [customer support](#).
- **No:**
The problem is solved.

Incorrect margins



1. Perform the following tests:
 - a. Adjust the paper guides to the correct position for the paper loaded.
 - b. Print the document.

Are the margins correct?

- **Yes:**
The problem is solved.
- **No:**
Go to the next step.

2. Perform the following tests:

a. Set the paper size.

From the control panel, navigate to:

Settings > Paper > Tray Configuration > Paper Size/Type

b. Print the document.

Are the margins correct?

- **Yes:**
The problem is solved.
- **No:**
Go to the next step.

3. Perform the following tests:

a. Depending on your operating system, specify the paper size from the Printing Preferences or Print dialog.

Note: Make sure that the setting matches the paper loaded.

b. Print the document.

Are the margins correct?

- **Yes:**
The problem is solved.
- **No:**
Contact [customer support](#).

Light print



Note: Before solving the problem, print the Print Quality Test Pages. From the control panel, navigate to **Settings > Troubleshooting > Print Quality Test Pages**.

1. Perform the following tests:

a. Perform Color Adjust.

From the control panel, navigate to:

Settings > Print > Quality > Advanced Imaging > Color Adjust.

b. Print the document.

Is the print light?

- **Yes:**
Go to the next step.
- **No:**
The problem is solved.

2. Perform the following tests:

a. Depending on your operating system, increase toner darkness from the Printing Preferences or Print dialog.

Note: You can also change the setting on the printer control panel. Navigate to **Settings > Print > Quality > Toner Darkness**.

b. Print the document.

Is the print light?

- **Yes:**
Go to the next step.
- **No:**
The problem is solved.

3. Perform the following tests:

a. Turn off Color Saver.

From the control panel, navigate to:

Settings > Print > Quality > Color Saver.

- b. Print the document.

Is the print light?

- **Yes:**
Go to the next step.
- **No:**
The problem is solved.

- 4. Perform the following tests:

- a. Depending on your operating system, specify the paper type from the Printing Preferences or Print dialog.

Notes

- Make sure that the setting matches the paper loaded.
- You can also change the setting on the printer control panel. Navigate to **Settings > Paper > Tray Configuration > Paper Size/Type.**

- b. Print the document.

Is the print light?

- **Yes:**
Go to the next step.
- **No:**
The problem is solved.

- 5. Check if paper has texture or rough finishes.

Are you printing on textured or rough paper?

- **Yes:**
Go to the next step.
- **No:**
Go to step 7.

- 6. Perform the following tests:

- a. Replace textured or rough paper with plain paper.
- b. Print the document.

Is the print light?

- **Yes:**
Go to step 7.
- **No:**
The problem is solved.

7. Perform the following tests:
 - a. Load paper from a fresh package.


Note: Paper absorbs moisture due to high humidity. Store paper in its original wrapper until you are ready to use it.

- b. Print the document.

Is the print light?

- **Yes:**
Go to the next step.
- **No:**
The problem is solved.

8. Perform the following tests:
 - a. Open the front door, and then firmly push it down.
 - b. Pull out the print cartridge tray.
 - c. Remove, and then insert the print cartridges.

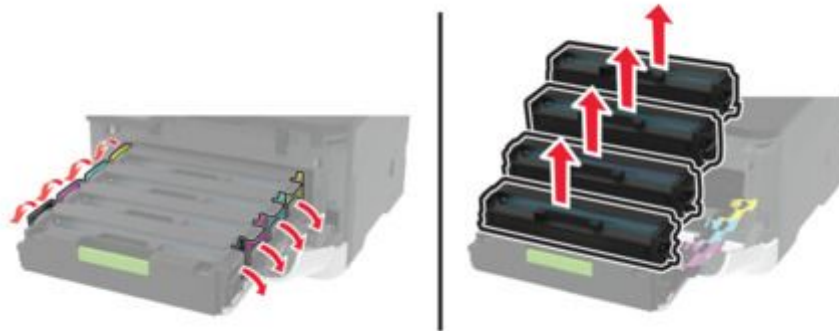

- d. Insert the print cartridge tray, and then close the door.
 - e. Print the document.

Is the print light?

- **Yes:**
Contact [customer support](#).
- **No:**
The problem is solved.

Missing colors



Note: Before solving the problem, print the Print Quality Test Pages. From the control panel, navigate to **Settings > Troubleshooting > Print Quality Test Pages**.

1. Perform the following tests:
 - a. Open the front door, and then firmly push it down.
 - b. Pull out the print cartridge tray.
 - c. Remove, and then insert the print cartridge of the missing color.
 - d. Insert the print cartridge tray, and then close the door.
 - e. Print the document.

Are some colors missing on prints?

- **Yes:**
Contact [customer support](#).
- **No:**
The problem is solved.

Mottled print and dots



Note: Before solving the problem, print the Print Quality Test Pages. From the control panel, navigate to **Settings > Troubleshooting > Print Quality Test Pages**.

1. Check the printer for leaked toner contamination.

Is the printer free of leaked toner?

- **Yes:**
Go to the next step.
- **No:**
Contact [customer support](#).

2. Perform the following tests:

a. From the control panel, navigate to:

Settings > Paper > Tray Configuration > Paper Size/Type

b. Check if the paper size and paper type settings match the paper loaded.

Note: Make sure that paper does not have texture or rough finishes.

Do the settings match?

- **Yes:**
Go to step 4.
- **No:**
Go to the next step.

3. Perform the following tests:

a. Depending on your operating system, specify the paper size and paper type from the Printing Preferences or Print dialog.

Note: Make sure that the settings match the paper loaded.

b. Print the document.

Is the print mottled?

- **Yes:**
Go to the next step.
- **No:**
The problem is solved.

4. Perform the following tests:

a. Load paper from a fresh package.

Note: Paper absorbs moisture due to high humidity. Store paper in its original wrapper until you are ready to use it.


b. Print the document.

Is the print mottled?

- **Yes:**
Go to the next step.

- **No:**
The problem is solved.

5. Perform the following tests:
 - a. Open the front door, and then firmly push it down.
 - b. Pull out the print cartridge tray.
 - c. Remove, and then insert the print cartridges.

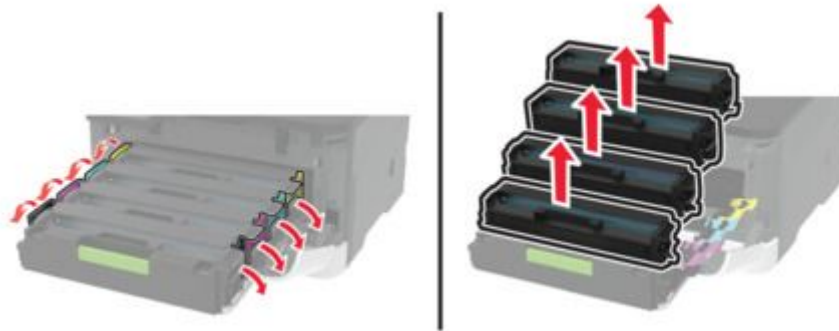

- d. Insert the print cartridge tray, and then close the door.
- e. Print the document.

Is the print mottled?

- **Yes:**
Contact [customer support](#).
- **No:**
The problem is solved.

Paper curl



1. Perform the following tests:
 - a. Adjust the guides in the tray to the correct position for the paper loaded.
 - b. Print the document.

Is the paper curled?

- **Yes:**
Go to the next step.
- **No:**
The problem is solved.

2. Perform the following tests:

- a. Depending on your operating system, specify the paper type from the Printing Preferences or Print dialog.

Notes

- Make sure that the setting matches the paper loaded.
- You can also change the setting on the printer control panel. Navigate to **Settings > Paper > Tray Configuration > Paper Size/Type**.

- b. Print the document.

Is the paper curled?

- **Yes:**
Go to the next step.
- **No:**
The problem is solved.

3. Perform the following tests:

- a. Remove paper, flip it over, and then reload paper.
- b. Print the document.

Is the paper curled?

- **Yes:**
Go to the next step.
- **No:**
The problem is solved.

4. Perform the following tests:

- a. Load paper from a fresh package.

Note: Paper absorbs moisture due to high humidity. Store paper in its original wrapper until you are ready to use it.

- b. Print the document.

Is the paper curled?

- **Yes:**
Contact [customer support](#).
- **No:**
The problem is solved.

Print crooked or skewed



Note: Before solving the problem, print the Print Quality Test Pages. From the control panel, navigate to **Settings > Troubleshooting > Print Quality Test Pages**.

1. Perform the following tests:
 - a. Adjust the paper guides in the tray to the correct position for the paper loaded.
 - b. Print the document.

Is the print crooked or skewed?

- **Yes:**
Go to the next step.
- **No:**
The problem is solved.

2. Perform the following tests:
 - a. Load paper from a fresh package.

Note: Paper absorbs moisture due to high humidity. Store paper in its original wrapper until you are ready to use it.

- b. Print the document.

Is the print crooked or skewed?

- **Yes:**
Go to the next step.
- **No:**
The problem is solved.

3. Perform the following tests:
 - a. Check if the paper loaded is supported.

Note: If paper is not supported, then load a supported paper.

- b. Print the document.

Is the print crooked or skewed?


- **Yes:**
Contact [customer support](#).
- **No:**
The problem is solved.

Solid color or black images



Note: Before solving the problem, print the Print Quality Test Pages. From the control panel, navigate to **Settings > Troubleshooting > Print Quality Test Pages**.

1. Perform the following tests:
 - a. Open the front door, and then firmly push it down.
 - b. Pull out the print cartridge tray.
 - c. Remove, and then insert the print cartridges.

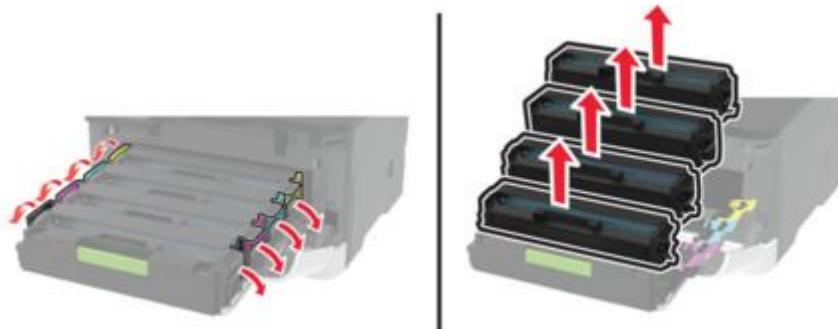

- d. Insert the print cartridge tray, and then close the door.
 - e. Print the document.

Is the printer printing solid color or black images?

- **Yes:**
Contact [customer support](#).
- **No:**

The problem is solved.

Text or images cut off



Note: Before solving the problem, print the Print Quality Test Pages. From the control panel, navigate to **Settings > Troubleshooting > Print Quality Test Pages**.

1. Perform the following tests:
 - a. Adjust the paper guides in the tray to the correct position for the paper loaded.
 - b. Print the document.

Are text or images cut off?

- **Yes:**
Go to the next step.
- **No:**
The problem is solved.

2. Perform the following tests:
 - a. Depending on your operating system, specify the paper size from the Printing Preferences or Print dialog.

Notes

- Make sure that the setting matches the paper loaded.
- You can also change the setting on the printer control panel. Navigate to **Settings > Paper > Tray Configuration > Paper Size/Type**.


- b. Print the document.

Are text or images cut off?

- **Yes:**
Go to the next step.
- **No:**
The problem is solved.

3. Perform the following tests:

- a. Open the front door, and then firmly push it down.
- b. Pull out the print cartridge tray.
- c. Remove, and then insert the print cartridges.

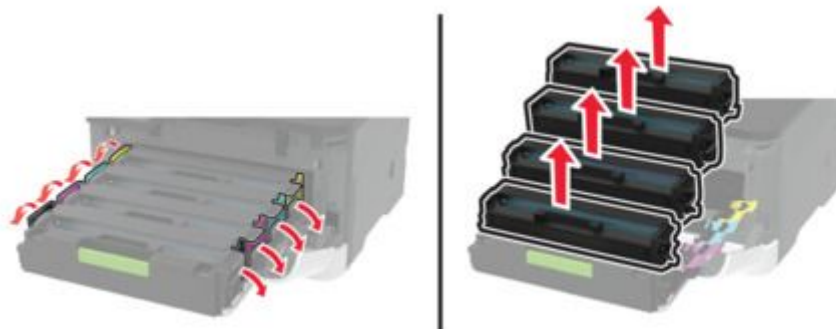

- d. Insert the print cartridge tray, and then close the door.
- e. Print the document.

Are text or images cut off?

- **Yes:**
Contact [customer support](#).
- **No:**
The problem is solved.

Toner easily rubs off



Note: Before solving the problem, print the Print Quality Test Pages. From the control panel, navigate to **Settings > Troubleshooting > Print Quality Test Pages**.

1. Perform the following tests:
 - a. Depending on your operating system, specify the paper type from the Printing Preferences or Print dialog.

Notes

- Make sure that the setting matches the paper loaded.
- You can also change the setting on the printer control panel. Navigate to **Settings > Paper > Tray Configuration > Paper Size/Type**.

- b. Print the document.

Does toner easily rub off?

- **Yes:**
Go to the next step.
- **No:**
The problem is solved.

2. Perform the following tests:
 - a. Check if the paper weight is supported.

Note: If paper weight is not supported, then load a supported one.

- b. Print the document.

Does toner easily rub off?

- **Yes:**
Go to the next step.
- **No:**
The problem is solved.

3. Perform the following tests:
 - a. Load paper from a fresh package.

Note: Paper absorbs moisture due to high humidity. Store paper in its original wrapper until you are ready to use it.

- b. Print the document.

Does toner easily rub off?


- **Yes:**
Contact [customer support](#).
- **No:**
The problem is solved.

Uneven print density



Note: Before solving the problem, print the Print Quality Test Pages. From the control panel, navigate to **Settings > Troubleshooting > Print Quality Test Pages**.

1. Perform the following tests:
 - a. Open the front door, and then firmly push it down.
 - b. Pull out the print cartridge tray.
 - c. Remove, and then insert the print cartridges.

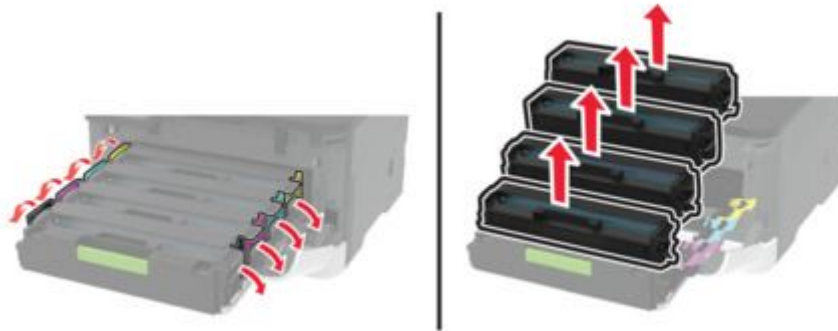

- d. Insert the print cartridge tray, and then close the door.
- e. Print the document.

Is the print density uneven?

- **Yes:**
Contact [customer support](#).
- **No:**
The problem is solved.

Horizontal dark lines



Notes

- Before solving the problem, print the Print Quality Test Pages. From the control panel, navigate to **Settings > Troubleshooting > Print Quality Test Pages**.
- If horizontal dark lines keep appearing on the prints, then see the “Repeating defects” topic.

1. Perform the following tests:

- a. Depending on your operating system, specify the paper type from the Printing Preferences or Print dialog.

Notes

- Make sure that the setting matches the paper loaded.
- You can also change the setting on the printer control panel. Navigate to **Settings > Paper > Tray Configuration > Paper Size/Type**.

- b. Print the document.

Do dark lines appear on prints?

- **Yes:**
Go to the next step.
- **No:**
The problem is solved.

2. Perform the following tests:

- a. Load paper from a fresh package.


Note: Paper absorbs moisture due to high humidity. Store paper in its original wrapper until you use it.

- b. Print the document.

Do dark lines appear on prints?

- **Yes:**
Go to the next step.
- **No:**
The problem is solved.

3. Perform the following tests:
 - a. Open the front door, and then firmly push it down.
 - b. Pull out the print cartridge tray.
 - c. Remove, and then insert the print cartridges.

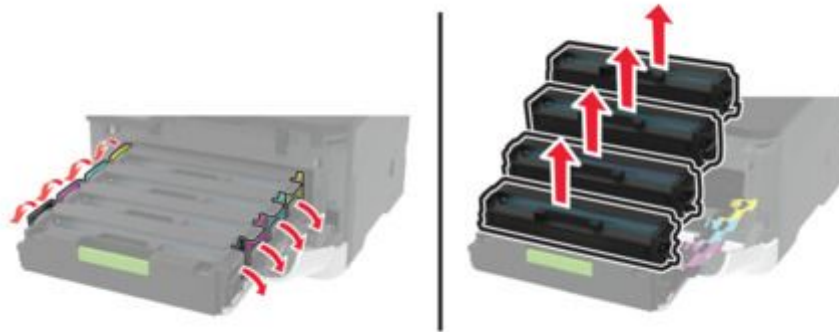

- d. Insert the print cartridge tray, and then close the door.
 - e. Print the document.

Do dark lines appear on prints?

- **Yes:**
Go to the next step.
- **No:**
The problem is solved.

4. Perform the following tests:
 - a. Perform Color Adjust.
From the control panel, navigate to:

Settings > Print > Quality > Advanced Imaging > Color Adjust

- b. Print the document.

Do dark lines appear on prints?

- **Yes:**
Contact [customer support](#).
- **No:**
The problem is solved.

Vertical dark lines



Note: Before solving the problem, print the Print Quality Test Pages. From the control panel, navigate to **Settings > Troubleshooting > Print Quality Test Pages**.

1. Perform the following tests:
 - a. Depending on your operating system, specify the paper type from the Printing Preferences or Print dialog.

Notes

- Make sure that the setting matches the paper loaded.
- You can also change the setting on the printer control panel. Navigate to **Settings > Paper > Tray Configuration > Paper Size/Type**.

- b. Print the document.

Do vertical dark lines appear on prints?

- **Yes:**
Go to the next step.
- **No:**
The problem is solved.

2. Perform the following tests:
 - a. Load paper from a fresh package.


Note: Paper absorbs moisture due to high humidity. Store paper in its original wrapper until you use it.

- b. Print the document.

Do vertical dark lines appear on prints?

- **Yes:**
Go to the next step.
- **No:**
The problem is solved.

3. Perform the following tests:
 - a. Open the front door, and then firmly push it down.
 - b. Pull out the print cartridge tray.
 - c. Remove, and then insert the print cartridges.

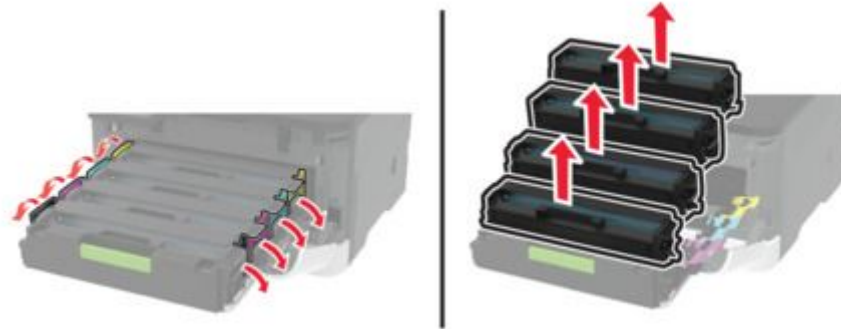

- d. Insert the print cartridge tray, and then close the door.
- e. Print the document.

Do vertical dark lines appear on prints?

- **Yes:**
Contact [customer support](#).
- **No:**
The problem is solved.

Horizontal white lines



Notes

- Before solving the problem, print the Print Quality Test Pages. From the control panel, navigate to **Settings > Troubleshooting > Print Quality Test Pages**.
- If horizontal white lines keep appearing on your prints, then see the “Repeating defects” topic.

1. Perform the following tests:

- a. Depending on your operating system, specify the paper type from the Printing Preferences or Print dialog.

Notes


- Make sure that the setting matches the paper loaded.
- You can also change the setting on the printer control panel. Navigate to **Settings > Paper > Tray Configuration > Paper Size/Type**.

- b. Print the document.

Do horizontal white lines appear on prints?

- **Yes:**
Go to the next step.
- **No:**
The problem is solved.

2. Perform the following tests:
 - a. Open the front door, and then firmly push it down.
 - b. Pull out the print cartridge tray.
 - c. Remove, and then insert the print cartridges.

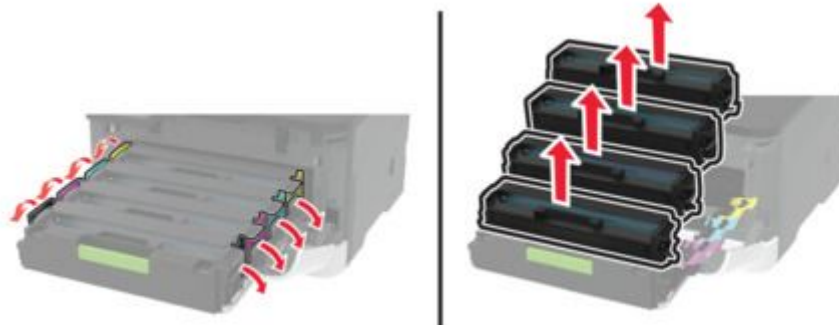

- d. Insert the print cartridge tray, and then close the door.
- e. Print the document.

Do horizontal white lines appear on prints?

- **Yes:**
Go to the next step.
- **No:**
The problem is solved.

3. Perform the following tests:
 - a. Perform Color Adjust.
From the control panel, navigate to:

Settings > Print > Quality > Advanced Imaging > Color Adjust

- b. Print the document.

Do horizontal white lines appear on prints?

- **Yes:**
Contact [customer support](#).
- **No:**
The problem is solved.

Vertical white lines



Note: Before solving the problem, print the Print Quality Test Pages. From the control panel, navigate to **Settings > Troubleshooting > Print Quality Test Pages**.

1. Perform the following tests:
 - a. Depending on your operating system, specify the paper type from the Printing Preferences or Print dialog.

Notes

- Make sure that the setting matches the paper loaded.
- You can also change the setting on the printer control panel. Navigate to **Settings > Paper > Tray Configuration > Paper Size/Type**.

- b. Print the document.

Do vertical white lines appear on prints?


- **Yes:**
Go to the next step.
- **No:**
The problem is solved.

2. Perform the following tests:
 - a. Load the paper source with the recommended paper type.
 - b. Print the document.

Do vertical white lines appear on prints?

- **Yes:**
Go to the next step.
- **No:**
The problem is solved.

3. Perform the following tests:
 - a. Open the front door, and then firmly push it down.
 - b. Pull out the print cartridge tray.
 - c. Remove, and then insert the print cartridges.

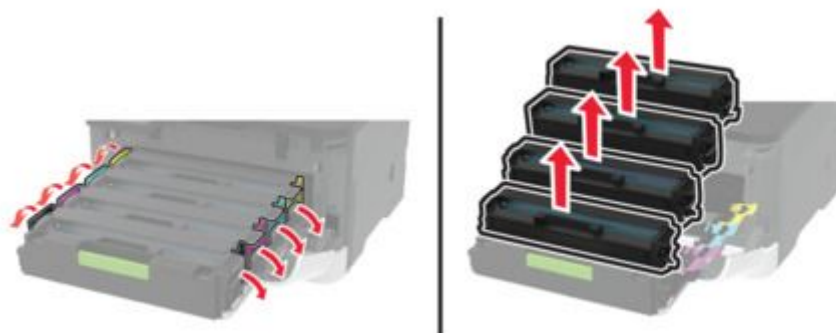

- d. Insert the print cartridge tray, and then close the door.
- e. Print the document.

Do vertical white lines appear on prints?

- **Yes:**
Contact [customer support](#).
- **No:**
The problem is solved.

Repeating defects



Note: Before solving the problem, print the Print Quality Test Pages. From the control panel, navigate to **Settings > Troubleshooting > Print Quality Test Pages**.

1. Perform the following tests:

- a. Using the Print Quality Test Pages, measure the distance between the repeating defects on the affected color page.
- b. Check if the repeating defects match any of the following measurements:

Print cartridges

- 25.70 mm (1.01 in.)
- 35.30 mm (1.39 in.)
- 75.6 mm (2.98 in.)
- 26.7 mm (1.05 in.)

Fuser

- 56.5 mm (2.22 in.)

Transfer module

- 25.10 mm (0.99 in.)
- 59.70 mm (2.35 in.)
- 28.30 mm (1.11 in.)
- 65 mm (2.56 in.)
- 44 mm (1.73 in.)

Do the repeating defects match any of the measurements?

◦ **Yes:**

Take note of the distance, and then contact [customer support](#).

◦ **No:**

Take note of the distance, and then contact [customer support](#).

Print jobs do not print

1. Perform the following tests:

- a. From the document you are trying to print, open the Print dialog, and then check if you have selected the correct printer.
- b. Print the document.

Is the document printed?

◦ **Yes:**

The problem is solved.

◦ **No:**

Go to the next step.

2. Perform the following tests:

- a. Check if the printer is on.
- b. Resolve any error messages that appear on the display.
- c. Print the document.

Is the document printed?

- **Yes:**
The problem is solved.
- **No:**
Go to the next step.

3. Perform the following tests:

- a. Check if the ports are working and if the cables are securely connected to the computer and the printer.

For more information, see the setup documentation that came with the printer.

- b. Print the document.

Is the document printed?

- **Yes:**
The problem is solved.
- **No:**
Go to the next step.

4. Perform the following tests:

- a. Turn off the printer, wait for about 10 seconds, and then turn on the printer.
- b. Print the document.

Is the document printed?

- **Yes:**
The problem is solved.
- **No:**
Go to the next step.

5. Perform the following tests:

- a. Remove, and then reinstall the print driver.
- b. Print the document.

Is the document printed?

- **Yes:**
The problem is solved.
- **No:**
Contact [customer support](#).

Slow printing

1. Make sure that the printer cable is securely connected to the printer and to the computer, print server, option, or other network device.

Is the printer printing slow?

- **Yes:**
Go to the next step.
- **No:**
The problem is solved.

2. Perform the following tests:

- a. Make sure that the printer is not in Quiet Mode.

From the home screen, touch **Settings > Device > Maintenance > Config Menu > Device Operations > Quiet Mode**.

- b. Print the document.

Is the printer printing slow?

- **Yes:**
Go to the next step.
- **No:**
The problem is solved.

3. Perform the following tests:

- a. Depending on your operating system, specify the print resolution from the Printing Preferences or Print dialog.
- b. Set the resolution to 4800 CQ.
- c. Print the document.

Is the printer printing slow?

- **Yes:**
Go to the next step.
- **No:**
The problem is solved.

4. Perform the following tests:

- a. Depending on your operating system, specify the paper type from the Printing Preferences or Print dialog.

Notes

- Make sure that the setting matches the paper loaded.
- You can also change the setting on the printer control panel. From the home screen, touch **Settings > Paper > Tray Configuration > Paper Size/Type**.
- Heavier paper prints more slowly.
- Paper narrower than letter, A4, and legal may print more slowly.

b. Print the document.

Is the printer printing slow?

- **Yes:**
Go to the next step.
- **No:**
The problem is solved.

5. Perform the following tests:

a. Make sure that the printer settings for texture and weight match the paper being loaded.

From the home screen, touch **Settings > Paper > Media Configuration > Media Types**.

Note: Rough paper texture and heavy paper weight may print more slowly.

b. Print the document.

Is the printer printing slow?

- **Yes:**
Go to the next step.
- **No:**
The problem is solved.

6. Remove held jobs.

Is the printer printing slow?

- **Yes:**
Go to the next step.
- **No:**
The problem is solved.

7. Perform the following tests:

a. Make sure that the printer is not overheating.

Notes

- Allow the printer to cool down after a long print job.
- Observe the recommended ambient temperature for the printer. For more information, see [Selecting a location for the printer on page 27](#).

- b. Print the document.

Is the printer printing slow?

- **Yes:**
Contact [customer support](#).
- **No:**
The problem is solved.

Job prints from the wrong tray or on the wrong paper

1. Perform the following tests:
 - a. Check if you are printing on the correct paper.
 - b. Print the document.

Is the document printed on the correct paper?

- **Yes:**
Go to the next step.
- **No:**
Load the correct paper size and paper type.

2. Perform the following tests:
 - a. Depending on your operating system, specify the paper size and paper type from the Printing Preferences or Print dialog.

Note: You can also change the settings on the printer control panel. Navigate to **Settings > Paper > Tray Configuration > Paper Size/Type** .

- b. Make sure that the settings match the paper loaded.
- c. Print the document.

Is the document printed on the correct paper?

- **Yes:**
The problem is solved.
- **No:**
Go to the next step.

3. Perform the following tests:
 - a. Check if the trays are linked.

For more information, see [Linking trays](#).

- b. Print the document.

Is the document printed from the correct tray?

- **Yes:**
The problem is solved.
- **No:**
Contact [customer support](#).

Confidential and other held documents do not print

1. Perform the following tests:
 - a. From the control panel, check if the documents appear in the Held Jobs list.

Note: If the documents are not listed, then print the documents using the Print and Hold options.

- b. Print the documents.

Are the documents printed?

- **Yes:**
The problem is solved.
- **No:**
Go to the next step.

2. The print job may contain a formatting error or invalid data. Delete the print job, and then send it again.

Are the documents printed?

- **Yes:**
The problem is solved.
- **No:**
Go to the next step.

3. Perform the following tests:
 - a. Open the Printing Preferences dialog.
 - b. From the Print and Hold tab, click **Use Print and Hold**, and then click **Keep duplicate documents**.
 - c. Enter a PIN, and then save the changes.
 - d. Send the print job.
 - e. Save and name each job differently.
 - f. Send the job individually.

For Windows users

- a. Open the Printing Preferences dialog.

- b. From the Print and Hold tab, click **Use Print and Hold**, and then click **Keep duplicate documents**.
- c. Enter a PIN, and then save the changes.
- d. Send the print job.

For Macintosh users

- a. Save and name each job differently.
- b. Send the job individually.

Are the documents printed?

- **Yes:**
The problem is solved.
- **No:**
Go to the next step.

4. Perform the following tests:
 - a. Delete some held jobs to free up printer memory.
 - b. Print the documents.

Are the documents printed?

- **Yes:**
The problem is solved.
- **No:**
Contact [customer support](#).

The printer is not responding

1. Check if the power cord is connected to the electrical outlet.



CAUTION—POTENTIAL INJURY

To avoid the risk of fire or electrical shock, connect the power cord to an appropriately rated and properly grounded electrical outlet that is near the product and easily accessible.

Is the printer responding?

- **Yes:**
The problem is solved.
- **No:**
Go to the next step.

2. Check if the electrical outlet is turned off by a switch or breaker.

Is the electrical outlet turned off by a switch or breaker?

- **Yes:**
Turn on the switch or reset the breaker.

- **No:**
Go to the next step.
3. Check if the printer is on.
- Is the printer on?
- **Yes:**
Go to the next step.
 - **No:**
Turn on the printer.
4. Check if the printer is in Sleep or Hibernate mode.
- Is the printer in Sleep or Hibernate mode?
- **Yes:**
Press the power button to wake the printer.
 - **No:**
Go to the next step.
5. Check if the cables connecting the printer and the computer are inserted to the correct ports.
- Are the cables inserted to the correct ports?
- **Yes:**
Go to the next step.
 - **No:**
Insert the cables to the correct ports.
6. Turn off the printer, install the hardware options, and then turn on the printer.
- For more information, see the documentation that came with the option.
- Is the printer responding?
- **Yes:**
The problem is solved.
 - **No:**
Go to the next step.
7. Install the correct print driver.
- Is the printer responding?
- **Yes:**
The problem is solved.
 - **No:**
Go to the next step.
8. Turn off the printer, wait for about 10 seconds, and then turn on the printer.
- Is the printer responding?
- **Yes:**
The problem is solved.

- **No:**
Contact [customer support](#).

Unable to read flash drive

1. Check if the printer is not busy processing another print, copy, scan, or fax job.

Is the printer ready?

- **Yes:**
Go to the next step.
- **No:**
Wait for the printer to finish processing the other job.

2. Check if the flash drive is supported. For more information, see [Supported flash drives and file types on page 25](#).

Is the flash drive supported?

- **Yes:**
Go to the next step.
- **No:**
Insert a supported flash drive.

3. Remove, and then insert the flash drive.

Does the printer recognize the flash drive?

- **Yes:**
The problem is solved.
- **No:**
Contact [customer support](#).

Enabling the USB port

From the home screen, touch **Settings** › **Network/Ports** › **USB** › **Enable USB Port**.

Network connection problems

Cannot open Embedded Web Server

1. Check if the printer is on.

Is the printer on?

- **Yes:**
Go to the next step.
- **No:**

Turn on the printer.

2. Make sure that the printer IP address is correct.

Notes

- View the IP address on the home screen.
- An IP address appears as four sets of numbers separated by periods, such as 123.123.123.123.

Is the printer IP address correct?

- **Yes:**
Go to the next step.
- **No:**
Type the correct printer IP address in the address field.

3. Perform the following tests:

Check if you are using a supported browser:

- Internet Explorer version 11 or later
- Microsoft Edge
- Safari version 6 or later
- Google Chrome™ version 32 or later
- Mozilla Firefox version 24 or later

Is your browser supported?

- **Yes:**
Go to the next step.
- **No:**
Install a supported browser.

4. Check if the network connection is working.

Is the network connection working?

- **Yes:**
Go to the next step.
- **No:**
Contact your administrator.

5. Make sure that the cable connections to the printer and print server are secure. For more information, see the documentation that came with the printer.

Are the cable connections secure?

- **Yes:**
Go to the next step.
- **No:**
Secure the cable connections.

6. Check if the web proxy servers are disabled.

Are the web proxy servers disabled?

- **Yes:**
Go to the next step.
- **No:**
Contact your administrator.

7. Access the Embedded Web Server.

Did the Embedded Web Server open?

- **Yes:**
The problem is solved.
- **No:**
Contact [customer support](#).

Cannot connect the printer to the Wi-Fi network

1. Make sure that **Active Adapter** is set to **Auto**.

From the home screen, touch **Settings > Network/Ports > Network Overview > Active Adapter > Auto**.

Can the printer connect to the Wi-Fi network?

- **Yes:**
The problem is solved.
- **No:**
Go to the next step.

2. Check if the correct Wi-Fi network is selected.

Note: Some routers may share the default SSID.

Are you connecting to the correct Wi-Fi network?

- **Yes:**
Go to step 4.
- **No:**
Go to the next step.

3. Connect to the correct Wi-Fi network. For more information, see [Connecting the printer to a Wi-Fi network](#).

Can the printer connect to the Wi-Fi network?

- **Yes:**
The problem is solved.
- **No:**
Go to the next step.

4. Check the wireless security mode.

From the home screen, touch **Settings > Network/Ports > Wireless > Wireless Security Mode**.

Is the correct wireless security mode selected?

- **Yes:**
Go to step 6.
- **No:**
Go to the next step.

5. Select the correct wireless security mode.

Can the printer connect to the Wi-Fi network?

- **Yes:**
The problem is solved.
- **No:**
Go to the next step.

6. Make sure that you entered the correct network password.

Note: Take note of the spaces, numbers, and capitalization in the password.

Can the printer connect to the Wi-Fi network?

- **Yes:**
The problem is solved.
- **No:**
Contact [customer support](#).

Issues with supplies

Replace cartridge, printer region mismatch

To correct this problem, purchase a cartridge with the correct region that matches the printer region, or purchase a worldwide cartridge.

- The first number in the message after 42 indicates the region of the printer.
- The second number in the message after 42 indicates the region of the cartridge.

Region	Numeric code
Worldwide or Undefined region	0
North America (United States, Canada)	1
European Economic Area, Western Europe, Nordic countries, Switzerland	2
Asia Pacific	3
Latin America	4

Region	Numeric code
Rest of Europe, Middle East, Africa	5
Australia, New Zealand	6
Invalid region	9

To find the region settings of the printer and print cartridge, print the Print Quality Test Pages. From the control panel, navigate to: **Settings > Troubleshooting > Print Quality Test Pages**.

Refilled regular *[color]* cartridge

The printer has detected a Lexmark Regular cartridge that has been refilled with non-genuine toner by a party other than Lexmark.

Select **OK** to continue.

All printer component life indicators are designed to function with Lexmark supplies and parts and may deliver unpredictable results when using supplies or parts in your Lexmark printer that are remanufactured by parties other than Lexmark.

For more information, see the printer statement of limited warranty.

Non-Lexmark supply

The printer has detected a non-Lexmark supply or part installed in the printer.

Your Lexmark printer is designed to function best with genuine Lexmark supplies and parts. Use of third-party supplies or parts may affect the performance, reliability, or life of the printer and its imaging components.

All life indicators are designed to function with Lexmark supplies and parts and may deliver unpredictable results if third-party supplies or parts are used. Imaging component usage beyond the intended life may damage your Lexmark printer or associated components.

Warning—Potential Damage

Use of third-party supplies or parts can affect warranty coverage. Damage caused by the use of third-party supplies or parts may not be covered by the warranty.

To accept any and all of these risks and to proceed with the use of non-genuine supplies or parts in your printer, do either of the following:

For touch-screen printer models, press  twice, and then press  twice.

For non-touch-screen printer models, press and hold **X** and  simultaneously for 15 seconds.

If you do not want to accept these risks, then remove the third-party supply or part from your printer and install a genuine Lexmark supply or part. For more information, see [Using genuine Lexmark parts and supplies on page 164](#).

For touch-screen printer models, if the printer does not print after pressing  twice, and then pressing  twice, then reset the supply usage counter.



For non-touch-screen printer models, if the printer does not print after pressing and holding **X** and simultaneously for 15 seconds, then reset the supply usage counter.

1. From the control panel, navigate to:

Settings > Device > Maintenance > Config Menu > Supply Usage And Counters



For non-touch-screen printer models, press  to navigate through the settings.

2. Select the part or supply that you want to reset.
3. To clear the message, do either of the following:

- For touch-screen printer models, press  twice, and then press  twice.
- For non-touch-screen printer models, press and hold **X** and  simultaneously for 15 seconds.


Note: If you are unable to reset the supply usage counters, then return the item to the place of purchase.

Clearing jams

Avoiding jams

Load paper properly

- Make sure that the paper lies flat in the tray.

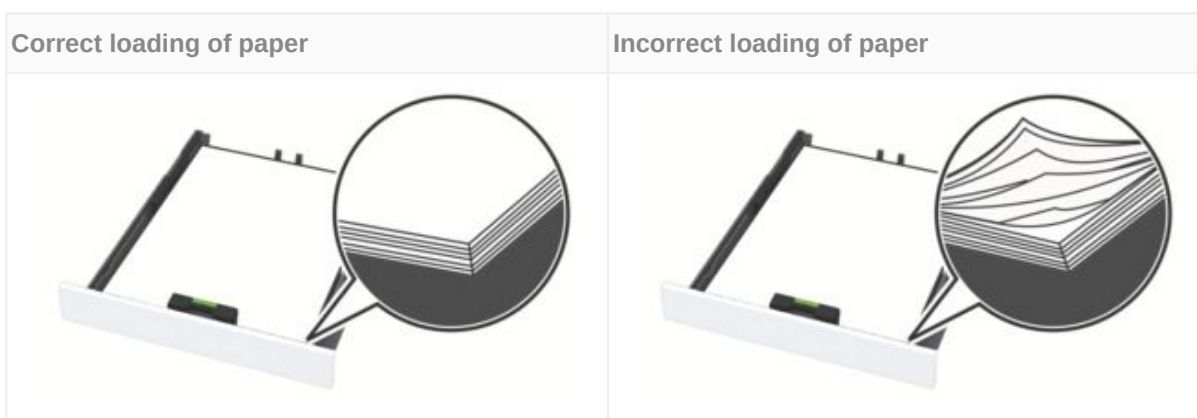


- Do not load or remove a tray while the printer is printing.
- Do not load too much paper. Make sure that the stack height is below the maximum paper fill indicator.
- Do not slide paper into the tray. Load paper as shown in the illustration.



- Make sure that the paper guides are positioned correctly and are not pressing tightly against the paper or envelopes.
- Push the tray firmly into the printer after loading paper.

Use recommended paper

- Use only recommended paper or specialty media.
- Do not load paper that is wrinkled, creased, damp, bent, or curled.
- Flex, fan, and align the paper edges before loading.

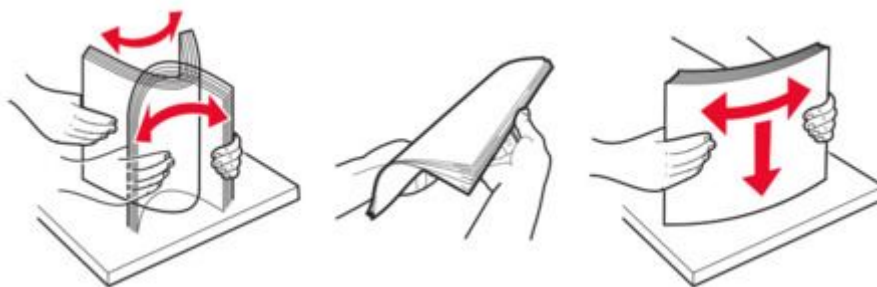


- Do not use paper that has been cut or trimmed by hand.
- Do not mix paper sizes, weights, or types in the same tray.
- Make sure that the paper size and type are set correctly on the computer or printer control panel.
- Store paper according to manufacturer recommendations.

Identifying jam locations

Notes

- When Jam Assist is set to On, the printer might attempt to flush blank pages or pages with partial prints after clearing the jam. Check your printed output for blank pages.
- When Jam Recovery is set to On or Auto, the printer reprints jammed pages.

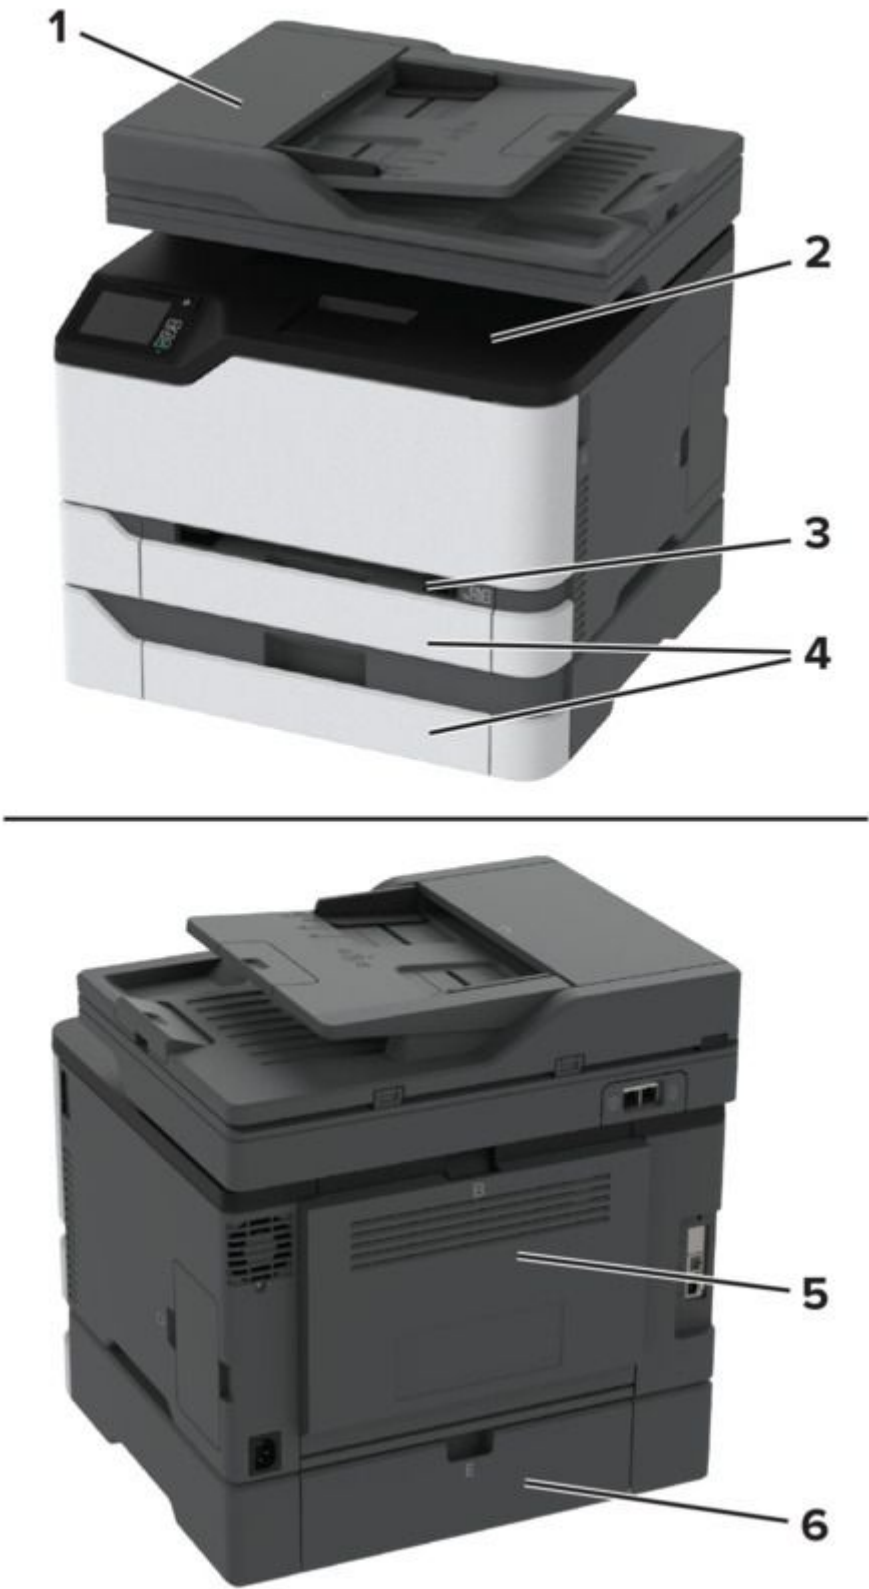

	Jam locations
1	Automatic document feeder (ADF)
2	Standard bin
3	Manual feeder
4	Trays

	Jam locations
5	Door B
6	Door E

Paper jam in the standard tray

1. Open door B.




CAUTION—HOT SURFACE

The inside of the printer might be hot. To reduce the risk of injury from a hot component, allow the surface to cool before touching it.




2. Remove the jammed paper.

Note: Make sure that all paper fragments are removed.

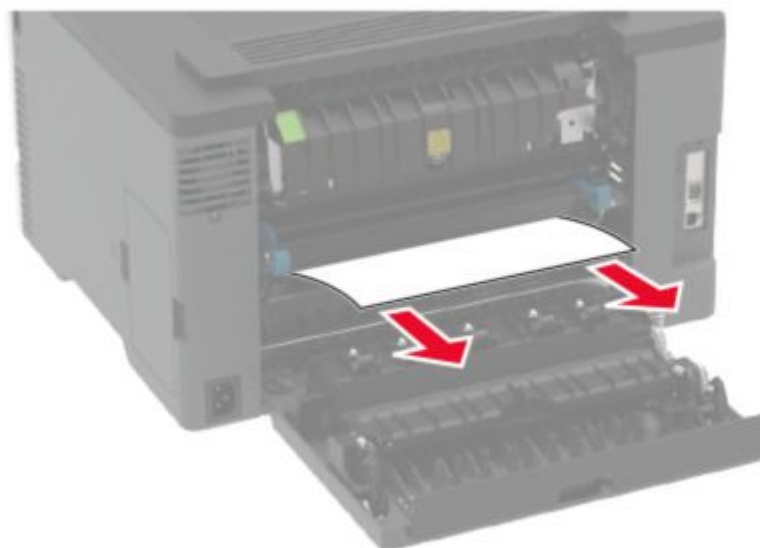


3. Close the door.
4. Remove the tray and the manual feeder.

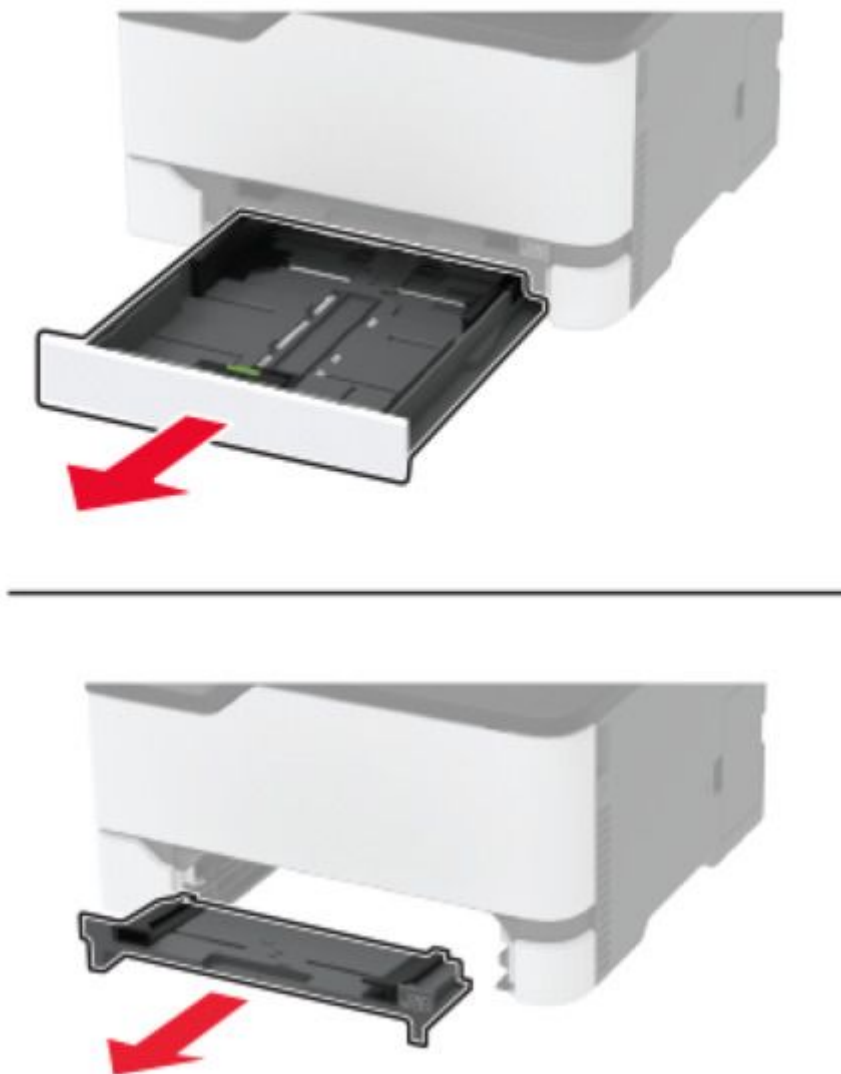

5. Remove the jammed paper.

Note: Make sure that all paper fragments are removed.

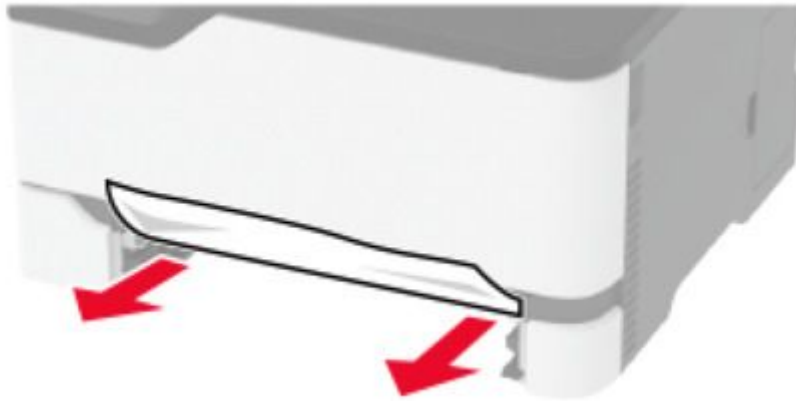

6. Insert the manual feeder and the tray.

Paper jam in the optional tray

1. Open door B.




CAUTION—HOT SURFACE

The inside of the printer might be hot. To reduce the risk of injury from a hot component, allow the surface to cool before touching it.



2. Remove the jammed paper.

Note: Make sure that all paper fragments are removed.

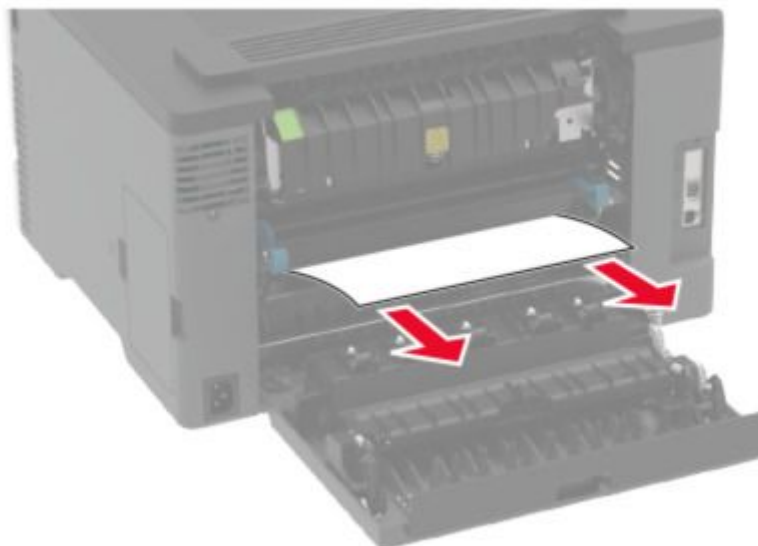


3. Close the door.
4. Open door E.



5. Remove the jammed paper.

Note: Make sure that all paper fragments are removed.

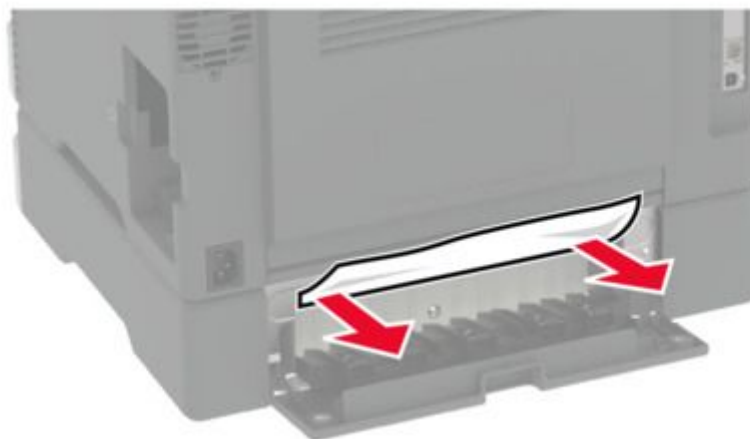

6. Close the door.
7. Remove the optional tray.



8. Remove the jammed paper.

Note: Make sure that all paper fragments are removed.



9. Insert the tray.

Paper jam in the standard bin

1. Raise the scanner, and then remove the jammed paper.


Note: Make sure that all paper fragments are removed.



2. Lower the scanner.


Paper jam in the manual feeder

1. Remove the tray and the manual feeder.

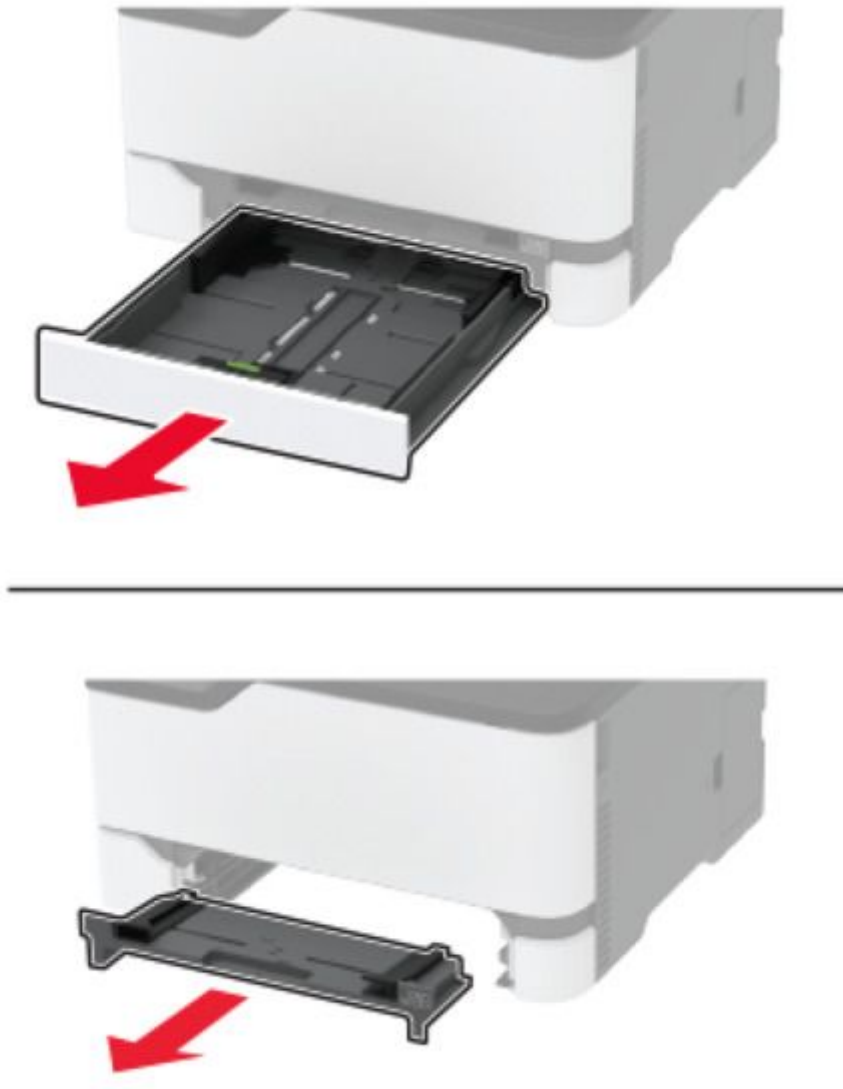

2. Remove the jammed paper.

Note: Make sure that all paper fragments are removed.

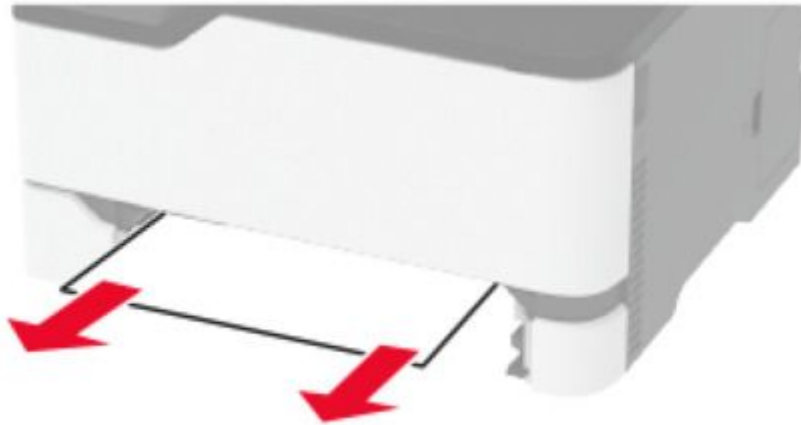

3. Insert the manual feeder and the tray.

Paper jam in door B

1. Open door B.



CAUTION—HOT SURFACE


The inside of the printer might be hot. To reduce the risk of injury from a hot component, allow the surface to cool before touching it.





2. Remove the jammed paper from any of the following areas:

Note: Make sure that all paper fragments are removed.


- Fuser area

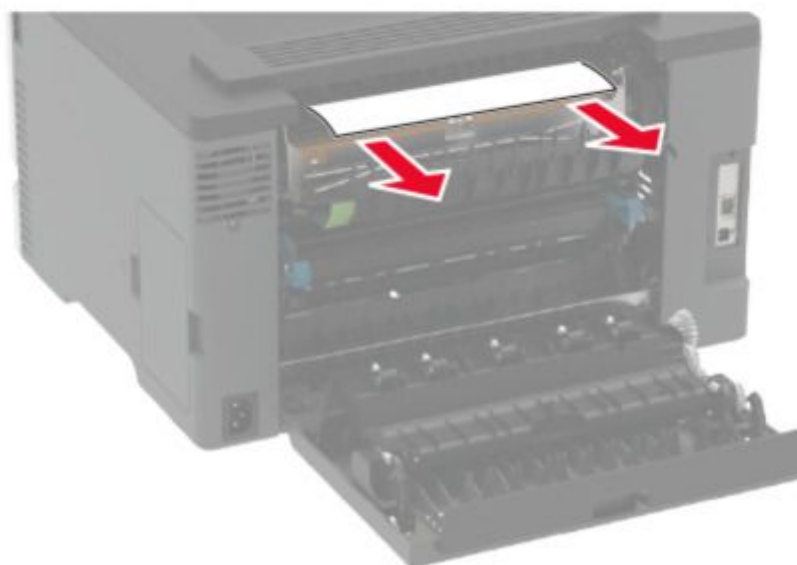

- Below the fuser area

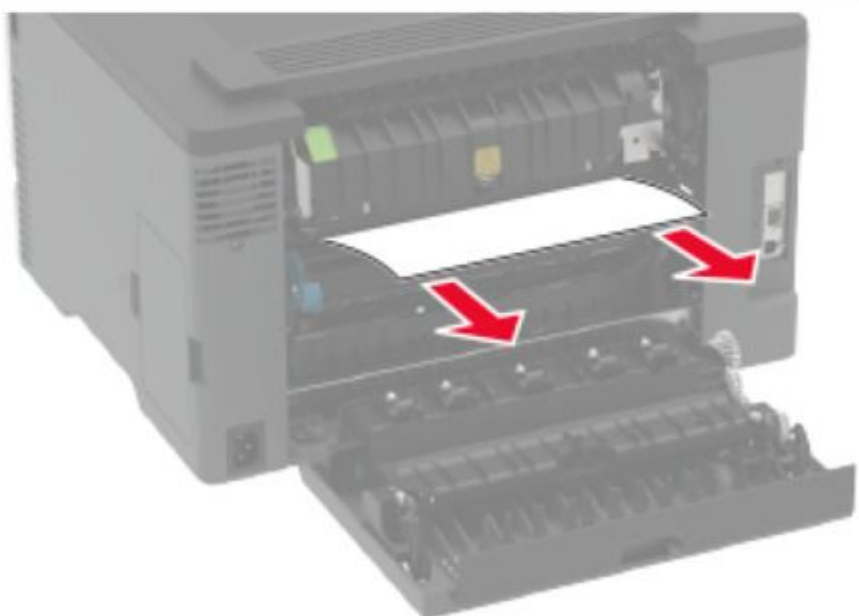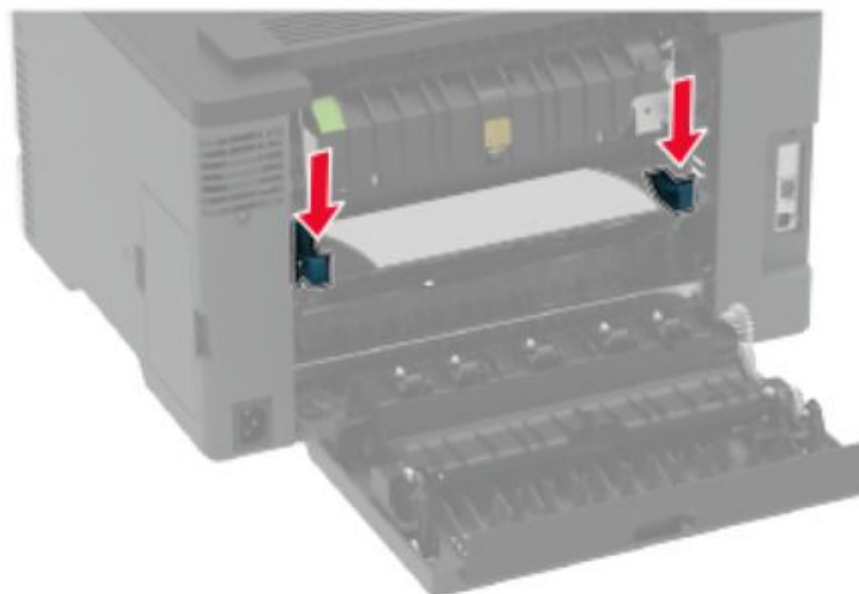

- Duplex unit

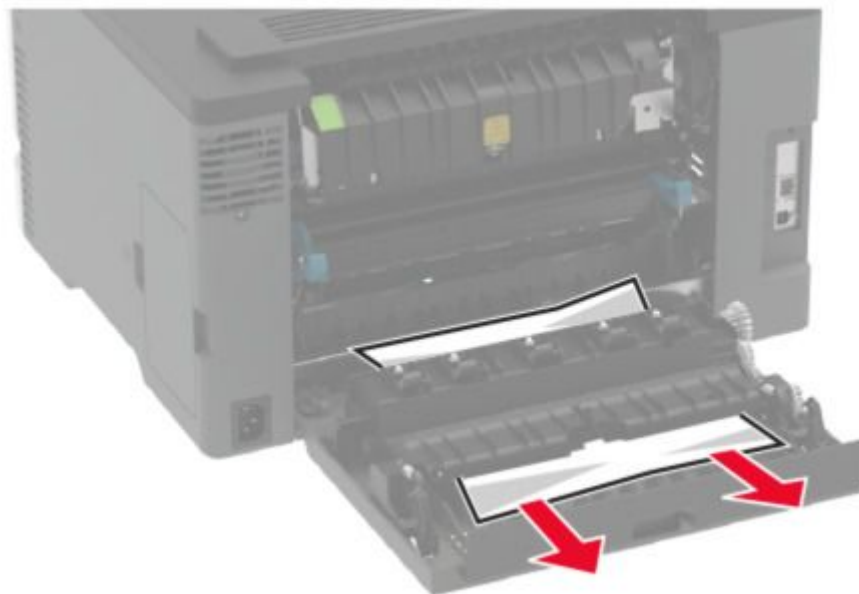

3. Close the door.


Paper jam in the automatic document feeder

1. Remove all original documents from the ADF tray.
2. Open the ADF cover.



3. Remove the jammed paper.

Note: Make sure that all paper fragments are removed.

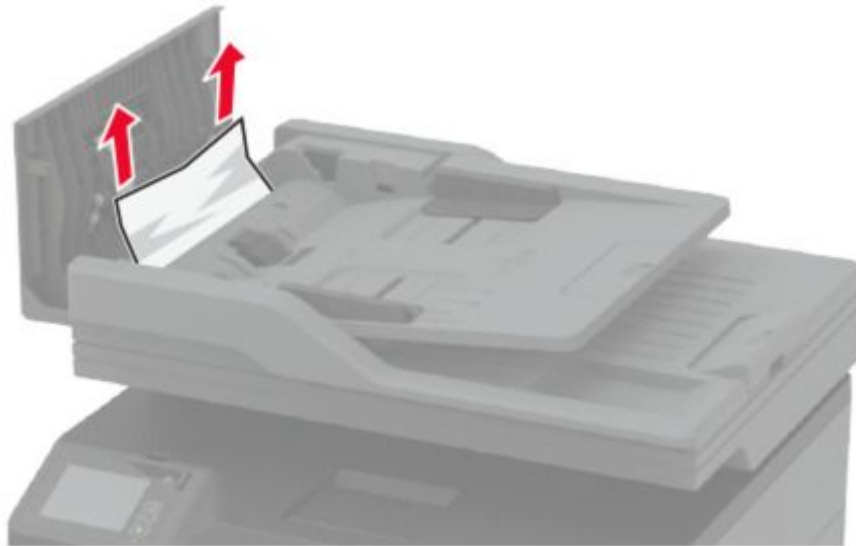

4. Close the ADF cover.

Paper feed problems

Envelope seals when printing

1. Perform the following tests:
 - a. Use an envelope that has been stored in a dry environment.

Note: Printing on envelopes with high moisture content can seal the flaps.

- b. Send the print job.

Does the envelope seal when printing?

- **Yes:**
Go to the next step.
- **No:**
The problem is solved.

2. Perform the following tests:
 - a. Make sure that paper type is set to Envelope.

From the control panel, navigate to **Settings > Paper > Tray Configuration > Paper Size/Type**.

- b. Send the print job.

Does the envelope seal when printing?

- **Yes:**
Contact [customer support](#).
- **No:**
The problem is solved.

Collated printing does not work

1. Perform the following tests:
 - a. From the control panel, navigate to **Settings > Print > Layout > Collate**.
 - b. Touch **On [1,2,1,2,1,2]**.
 - c. Print the document.

Is the document collated correctly?

- **Yes:**
The problem is solved.
- **No:**
Go to the next step.

2. Perform the following tests:
 - a. From the document that you are trying to print, open the Print dialog, and then select **Collate**.
 - b. Print the document.

Is the document collated correctly?

- **Yes:**
The problem is solved.
- **No:**
Go to the next step.

3. Perform the following tests:
 - a. Reduce the number of pages to print.
 - b. Print the document.

Are the pages collated correctly?

- **Yes:**
The problem is solved.
- **No:**
Contact [customer support](#).

Tray linking does not work

1. Perform the following tests:
 - a. Check if the trays contain the same paper size and paper type.
 - b. Check if the paper guides are positioned correctly.
 - c. Print the document.

Do the trays link correctly?

- **Yes:**
The problem is solved.
- **No:**
Go to the next step.

2. Perform the following tests:
 - a. From the home screen, touch **Settings > Paper > Tray Configuration > Paper Size/Type**.
 - b. Set the paper size and paper type to match the paper loaded in the linked trays.
 - c. Print the document.

Do the trays link correctly?

- **Yes:**
The problem is solved.
- **No:**
Go to the next step.

3. Perform the following tests:
 - a. Make sure that Tray Linking is set to Automatic. For more information, see [Linking trays](#).
 - b. Print the document.

Do the trays link correctly?

- **Yes:**
The problem is solved.
- **No:**
Contact [customer support](#).

Paper frequently jams

1. Perform the following tests:
 - a. Remove the tray.
 - b. Check if paper is loaded correctly.

Notes

- Make sure that the paper guides are positioned correctly.
- Make sure that the stack height is below the maximum paper fill indicator.
- Make sure to print on recommended paper size and type.

- c. Insert the tray.
- d. Print the document.

Do paper jams occur frequently?

- **Yes:**
Go to the next step.
- **No:**
The problem is solved.

2. Perform the following tests:

- a. From the control panel, navigate to **Settings > Paper > Tray Configuration > Paper Size/Type**.
- b. Set the correct paper size and type.
- c. Print the document.

Do paper jams occur frequently?

- **Yes:**
Go to the next step.
- **No:**
The problem is solved.

3. Perform the following tests:

- a. Load paper from a fresh package.

Note: Paper absorbs moisture due to high humidity. Store paper in its original wrapper until you are ready to use it.

- b. Print the document.

Do paper jams occur frequently?

- **Yes:**
Contact [customer support](#).
- **No:**
The problem is solved.

Jammed pages are not reprinted

1. Perform the following tests:

- a. From the control panel, navigate to **Settings > Device > Notifications > Jam Content Recovery**.
- b. In the Jam Recovery menu, select **On** or **Auto**.
- c. Print the document.

Are the jammed pages reprinted?

- **Yes:**
The problem is solved.
- **No:**
Contact [customer support](#).

E-mailing problems

Disabling the “SMTP server not set up” error message

From the control panel, navigate to **Settings > E-mail > E-mail Setup > Disable “SMTP Server not set up” error > On**.

To prevent the error from happening again, do one or more of the following:

- Update the printer firmware. For more information, see the “Printer firmware instructions” section.
- Configure the e-mail SMTP settings. For more information, see [Configuring the email SMTP settings](#).

Cannot send e-mails

1. Make sure that the e-mail SMTP settings are configured correctly. For more information, see [Configuring the email SMTP settings](#).

Can you send an e-mail?

- **Yes:**
The problem is solved.
- **No:**
Go to the next step.

2. Make sure that you are using the correct password. Depending on your e-mail service provider, use your account password, app password, or authentication password. For more information, see [Configuring the email SMTP settings](#).

Can you send an e-mail?

- **Yes:**
The problem is solved.
- **No:**
Go to the next step.

3. Make sure that the printer is connected to a network and that the network is connected to the Internet.

Can you send an e-mail?

- **Yes:**
The problem is solved.
- **No:**
Contact [customer support](#).

Faxing problems

Caller ID is not shown

Note: These instructions apply only to printers that support analog fax. For more information, see the "Setting up the printer to fax" section.

1. Enable caller ID.

From the home screen, touch **Settings > Fax > Fax Setup > Fax Receive Settings > Admin Controls > Enable Caller ID**.

Does the caller ID appear?

- **Yes:**
The problem is solved.
- **No:**
Contact [customer support](#).

Cannot set up etherFAX

1. Perform the following tests:
 - a. Print the Network Setup Page. From the home screen, touch **Settings > Reports > Network > Network Setup Page**.
 - b. Check the network status.

Is the printer connected to the network?

- **Yes:**
Go to step 3.
- **No:**
Go to the next step.

2. Make sure that the printer is connected to a network and that the network is connected to the Internet.

Can you set up etherFAX?

- **Yes:**
The problem is solved.
- **No:**
Go to the next step.

3. Make sure that etherFAX is set up correctly. For more information, see [Setting up the fax function using etherFAX on page 35](#).

Can you set up etherFAX?

- **Yes:**
The problem is solved.
- **No:**
Go to <https://www.etherfax.net/lexmark>.

Cannot send or receive faxes using analog fax

1. Resolve any error messages that appear on the display.

Can you send or receive a fax?

- **Yes:**
The problem is solved.
- **No:**
Go to the next step.

2. Make sure that the cable connections for the following equipment are secure:

- Telephone
- Handset
- Answering machine

Can you send or receive a fax?

- **Yes:**
The problem is solved.
- **No:**
Go to the next step.

3. Check for a dial tone.

- Call the fax number to check if it is working properly.
- If you are using the On Hook Dial feature, then turn up the volume to check if you hear a dial tone.

Can you hear a dial tone?

- **Yes:**
Go to step 5.
- **No:**
Go to the next step.

4. Check the telephone wall jack.

- a. Connect the analog telephone directly to the wall jack.
- b. Listen for a dial tone.

- c. If you do not hear a dial tone, then use a different telephone cable.
- d. If you still do not hear a dial tone, then connect the analog telephone to a different wall jack.
- e. If you hear a dial tone, then connect the printer to that wall jack.

Can you send or receive a fax?

- **Yes:**
The problem is solved.
- **No:**
Go to the next step.

5. Check if the printer is connected to an analog phone service or to the correct digital connector.
 - If you are using an Integrated Services for Digital Network (ISDN) telephone service, then connect to an analog telephone port of an ISDN terminal adapter. For more information, contact your ISDN provider.
 - If you are using DSL, then connect to a DSL filter or router that supports analog use. For more information, contact your DSL provider.
 - If you are using a private branch exchange (PBX) telephone service, then make sure that you are connecting to an analog connection on the PBX. If none exists, then consider installing an analog telephone line for the fax machine.

Can you send or receive a fax?

- **Yes:**
The problem is solved.
- **No:**
Go to the next step.

6. Temporarily disconnect other equipment and disable other telephone services.
 - a. Disconnect other equipment (such as answering machines, computers, modems, or telephone line splitters) between the printer and the telephone line.
 - b. Disable call waiting and voice mail. For more information, contact your telephone company.

Can you send or receive a fax?

- **Yes:**
The problem is solved.
- **No:**
Go to the next step.

7. Scan the original document one page at a time.
 - a. Dial the fax number.
 - b. Scan the document.

Can you send or receive a fax?

- **Yes:**
The problem is solved.

- **No:**
Contact [customer support](#).

Cannot send or receive faxes using etherFAX

1. Make sure that the printer is connected to a network and that the network is connected to the Internet.

Can you send or receive faxes using etherFAX?

- **Yes:**
The problem is solved.
- **No:**
Go to the next step.

2. Perform the following tests:

- a. From the home screen, touch **Settings > Fax > Fax Setup > General Fax Settings**.
- b. Make sure that you have the correct fax number.
- c. Make sure that Fax Transport is set to etherFAX.

Can you send or receive faxes using etherFAX?

- **Yes:**
The problem is solved.
- **No:**
Go to the next step.

3. Split large documents into smaller file sizes.

Can you send or receive faxes using etherFAX?

- **Yes:**
The problem is solved.
- **No:**
Go to <https://www.etherfax.net/lexmark>.

Can receive but not send faxes using analog fax

1. Load an original document properly into the ADF tray or on the scanner glass.

Can you send faxes?

- **Yes:**
The problem is solved.
- **No:**
Go to the next step.

2. Set up the shortcut number properly.

- Check if the shortcut number is set for the telephone number that you want to dial.

- Dial the telephone number manually.

Can you send faxes?

- **Yes:**
The problem is solved.
- **No:**
Contact [customer support](#).

Can send but not receive faxes using analog fax

1. Make sure that the paper source is not empty.

Can you receive faxes?

- **Yes:**
The problem is solved.
- **No:**
Go to the next step.

2. Check the ring count delay settings.

From the home screen, touch **Settings > Fax > Fax Setup > Fax Receive Settings > Rings to Answer**.

Can you receive faxes?

- **Yes:**
The problem is solved.
- **No:**
Go to the next step.

3. If the printer is printing blank pages, then see [Blank or white pages on page 198](#).

Can you receive faxes?

- **Yes:**
The problem is solved.
- **No:**
Contact [customer support](#).

Poor fax print quality

1. Perform the following tests:
 - a. From the control panel, touch **Settings > Troubleshooting > Print Quality Test Pages**.
 - b. Correct any print quality defects. For more information, see the "Print quality is poor" section.

Is the fax print quality satisfactory?

- **Yes:**

The problem is solved.

- **No:**
Go to the next step.

2. Perform the following tests:

- a. From the control panel, touch **Settings > Fax > Fax Setup > Fax Receive Settings > Admin Controls**.
- b. In the Max Speed menu, select a lower transmission speed.

Is the fax print quality satisfactory?

- **Yes:**
The problem is solved.
- **No:**
Contact [customer support](#).

Missing information on the fax cover page

1. Perform the following tests:

- a. Turn off the printer, wait for about 10 seconds, and then turn on the printer.
- b. Send or retrieve the fax.

Is there missing information on the fax cover page?

- **Yes:**
The problem is solved.
- **No:**
Contact [customer support](#).

Cannot send the fax cover page from the computer

1. Perform the following tests:

- a. Make sure that the print driver is updated. For more information, see [Installing the printer software on page 48](#).
- b. Send the fax.

Can you send the fax cover page?

- **Yes:**
The problem is solved.
- **No:**
Go to the next step.

2. Perform the following tests:

- a. From the document that you are trying to fax, open the Print dialog.
- b. Select the printer, and then click **Properties**, **Preferences**, **Options**, or **Setup**.

- c. Click **Fax**, and then clear the **Always display settings prior to faxing** setting.
- d. Send the fax.

Can you send the fax cover page?

- **Yes:**
The problem is solved.
- **No:**
Contact [customer support](#).

Scanning problems

Cannot scan to a computer

1. Perform a copy job.

Is the copy job successful?

- **Yes:**
Go to step 3.
- **No:**
Go to the next step.

2. Perform the following tests:

- a. Turn off the printer, wait for about 10 seconds, and then turn it back on.
- b. Scan the document.

Can you scan the document to a computer?

- **Yes:**
The problem is solved.
- **No:**
Go to the next step.

3. Perform the following tests:

- a. Print the Network Setup Page. From the control panel, navigate to **Settings > Reports > Network > Network Setup Page**.
- b. Check the network status.

Is the printer connected to the network?

- **Yes:**
Go to step 5.
- **No:**
Go to the next step.

4. Perform the following tests:

- a. Connect the printer to the network.
- b. Scan the document.

Can you scan the document to a computer?

- **Yes:**
The problem is solved.
- **No:**
Go to the next step.

5. Perform the following tests:

- a. Make sure that the printer and the computer are connected to the same network.
- b. Scan the document.

Can you scan the document to a computer?

- **Yes:**
The problem is solved.
- **No:**
Contact [customer support](#).

Cannot scan to a network folder

1. Perform the following tests:

- a. Create a network folder shortcut.
- b. Scan a document using the shortcut. For more information, see [Scanning to a network folder using a shortcut on page 87](#).

Can you scan a document and save it to a network folder?

- **Yes:**
The problem is solved.
- **No:**
Go to the next step.

2. Make sure that the network folder path and format are correct. For example, `//server_hostname/foldername/path`, where `server_hostname` is a fully qualified domain (FQDN) or IP address.

Is the network folder path and format correct?

- **Yes:**
Go to the next step.
- **No:**
Go to step 4.

3. Make sure that you have a write access permission to the network folder.

Can you scan a document and save it to a network folder?

- **Yes:**
The problem is solved.
- **No:**
Go to the next step.

4. Perform the following tests:

- a. Open a web browser, and then type the printer IP address in the address field.

Notes

- View the printer IP address on the home screen. The IP address appears as four sets of numbers separated by periods, such as 123.123.123.123.
- If you are using a proxy server, then temporarily disable it to load the web page correctly.

- b. Click **Shortcuts**, and then select a shortcut.

Note: If you have multiple shortcut types, then select Network Folder.

- c. In the Share Path field, type the network folder path.

Notes

- If your share path is \\server_hostname\foldername\path, then type //server_hostname/foldername/path.
- Make sure that you use forward slashes when typing the share path.

- d. From the Authentication menu, select your authentication method.

Note: If Authentication is set to “Use assigned username and password,” then in the User Name and Password fields, type your credentials.

- e. Click **Save**.

- a. Open a web browser, and then type the printer IP address in the address field.

Notes

- View the printer IP address on the home screen. The IP address appears as four sets of numbers separated by periods, such as 123.123.123.123.
- If you are using a proxy server, then temporarily disable it to load the web page correctly.

- b. Click **Shortcuts**, and then select a shortcut.

Note: If you have multiple shortcut types, then select Network Folder.

- c. In the Share Path field, type the network folder path.

Notes

- If your share path is \\server_hostname\foldername\path, then type //server_hostname/foldername/path.
- Make sure that you use forward slashes when typing the share path.

- d. From the Authentication menu, select your authentication method.

Note: If Authentication is set to "Use assigned username and password," then in the User Name and Password fields, type your credentials.

- e. Click **Save**.

Can you scan a document and save it to a network folder?

- **Yes:**
The problem is solved.
- **No:**
Go to the next step.

5. Make sure that the printer and the network folder are connected to the same network.

Can you scan a document and save it to a network folder?

- **Yes:**
The problem is solved.
- **No:**
Contact [customer support](#).

Partial copies of document or photo

1. Perform the following tests:

- a. Make sure that the document or photo is loaded facedown on the upper left corner of the scanner glass.
- b. Copy the document or photo.

Is the document or photo copied correctly?

- **Yes:**
The problem is solved.
- **No:**
Go to the next step.

2. Perform the following tests:

- a. Match the paper size setting and the paper loaded in the tray.
- b. Copy the document or photo.

Is the document or photo copied correctly?

- **Yes:**
The problem is solved.
- **No:**
Contact [customer support](#).

Scan job was not successful

1. Perform the following tests:
 - a. Make sure that the Ethernet or USB cable is securely connected to the computer and the printer.
 - b. Resend the scan job.

Is the scan job successful?

- **Yes:**
The problem is solved.
- **No:**
Go to the next step.

2. Perform the following tests:
 - a. Make sure that the file name is not already used in the destination folder.
 - b. Make sure that the document or photo you want to scan is not open in another application.
 - c. Resend the scan job.

Is the scan job successful?

- **Yes:**
The problem is solved.
- **No:**
Go to the next step.

3. Perform the following tests:
 - a. Make sure that the **Append time stamp** or the **Overwrite existing file** check box is selected in the destination configuration settings.
 - b. Resend the scan job.

Is the scan job successful?

- **Yes:**
The problem is solved.
- **No:**
Contact [customer support](#).

Poor copy quality

1. Perform the following tests:
 - a. Clean the scanner glass and the ADF glass with a damp, soft, lint-free cloth. If your printer has a second ADF glass inside the ADF, then also clean that glass.

For more information, see [Cleaning the scanner on page 186](#).
 - b. Make sure that the document or photo is loaded facedown on the upper left corner of the scanner glass.
 - c. Copy the document or photo.

Is the copy quality satisfactory?

- **Yes:**
The problem is solved.
- **No:**
Go to the next step.

2. Perform the following tests:
 - a. Check the quality of the original document or photo.
 - b. Adjust the scan quality settings.
 - c. Copy the document or photo.

Is the copy quality satisfactory?

- **Yes:**
The problem is solved.
- **No:**
Contact [customer support](#).

Vertical dark streaks on output when scanning from the ADF




1. Open the scanner cover.
2. Using a damp, soft, lint-free cloth, wipe the ADF glass pad.

Note: In certain printer models, this location has an ADF glass instead of a pad.

3. Close the scanner cover.

Note: For more information on cleaning the scanner, see [Cleaning the scanner on page 186](#).

Jagged image or text when scanning from the ADF

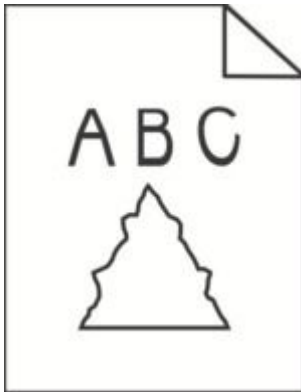

1. Perform the following tests:
 - a. Load 50 sheets of clean, plain paper into the ADF.

Note: The plain paper helps clean or remove dust and other coating from the ADF feed rollers.

- b. From the control panel, press .
 - c. Load an original document into the ADF.
 - d. Scan the document.

Do jagged images or texts appear on the output?

- **Yes:**
Contact [customer support](#).
- **No:**
The problem is solved.

Scanner does not close

1. Remove obstructions that keep the scanner cover open.

Did the scanner cover close correctly?

- **Yes:**
The problem is solved.
- **No:**
Contact [customer support](#).

Scanning takes too long or freezes the computer

1. Close all applications that are interfering with the scan.

Does scanning take too long or freeze the computer?

- **Yes:**
Contact [customer support](#).
- **No:**
The problem is solved.

Scanner does not respond

1. Perform the following tests:
 - a. Check if the power cord is connected properly to the printer and the electrical outlet.



CAUTION—POTENTIAL INJURY

To avoid the risk of fire or electrical shock, connect the power cord to an appropriately rated and properly grounded electrical outlet that is near the product and easily accessible.

- b. Copy or scan the document.

Is the scanner responding?

- **Yes:**
The problem is solved.
- **No:**
Go to the next step.

2. Perform the following tests:
 - a. Check if the printer is turned on.
 - b. Resolve any error messages that appear on the display.
 - c. Copy or scan the document.

Is the scanner responding?

- **Yes:**
The problem is solved.
- **No:**
Go to the next step.

3. Perform the following tests:
 - a. Turn off the printer, wait for about 10 seconds, and then turn the printer on.
 - b. Copy or scan the document.

Is the scanner responding?

- **Yes:**
The problem is solved.
- **No:**
Contact [customer support](#).

Adjusting scanner registration

1. From the control panel, navigate to:
Settings > Device > Maintenance > Config Menu > Scanner Configuration > Scanner Manual Registration
2. Touch **Print Quick Test**.
3. Place the Print Quick Test page on the scanner glass, and then touch **Flatbed Registration**.
4. Touch **Copy Quick Test**.
5. Compare the Copy Quick Test page with the original document.

Note: If the margins of the test page are different from the original document, then adjust Left Margin and Top Margin.

6. Repeat step 4 and step 5 until the margins of the Copy Quick Test page closely match the original document.

Adjusting ADF registration

1. From the control panel, navigate to:
Settings > Device > Maintenance > Config Menu > Scanner Configuration > Scanner Manual Registration
2. Touch **Print Quick Test**.
3. Place the Print Quick Test page on the ADF tray.
4. Touch **Front ADF Registration** or **Rear ADF Registration**.

Notes

- To align Front ADF Registration, place the test page faceup, short edge first into the ADF.
- To align Rear ADF Registration, place the test page facedown, short edge first into the ADF.

5. Touch **Copy Quick Test**.
6. Compare the Copy Quick Test page with the original document.

Note: If the margins of the test page are different from the original document, then adjust Horizontal Adjust and Top Margin.

7. Repeat step 5 and step 6 until the margins of the Copy Quick Test page closely match the original document.

Color quality problems

Modifying the colors in printed output

1. From the home screen, touch **Settings > Print > Quality > Advanced Imaging > Color Correction**.
2. In the Color Correction menu, touch **Manual > Color Correction Content**.
3. Choose the appropriate color conversion setting.

Object type	Color conversion tables
RGB Image RGB Text RGB Graphics	◦ Vivid—Produces brighter, more saturated colors and may be applied to all incoming color formats. ◦ sRGB Display—Produces an output that approximates the colors shown on a computer monitor. Black toner usage is optimized for printing photographs. ◦ Display-True Black—Produces an output that approximates the colors shown on a computer monitor. This setting uses only black toner to create all levels of neutral gray. ◦ sRGB Vivid—Provides an increased color saturation for the sRGB Display color correction. Black toner usage is optimized for printing business graphics. ◦ Off
CMYK Image CMYK Text CMYK Graphics	◦ US CMYK—Applies color correction to approximate the Specifications for Web Offset Publishing (SWOP) color output. ◦ Euro CMYK—Applies color correction to approximate Euroscale color output. ◦ Vivid CMYK—Increases the color saturation of the US CMYK color correction setting. ◦ Off

FAQ about color printing

What is RGB color?

RGB color is a method of describing colors by indicating the amount of red, green, or blue used to produce a certain color. Red, green, and blue light can be added in various amounts to produce a large range of colors observed in nature. Computer screens, scanners, and digital cameras use this method to display colors.

What is CMYK color?

CMYK color is a method of describing colors by indicating the amount of cyan, magenta, yellow, and black used to reproduce a particular color. Cyan, magenta, yellow, and black inks or toners can be printed in various amounts to produce a large range of colors observed in nature. Printing presses, inkjet printers, and color laser printers create colors in this manner.

How is color specified in a document to be printed?

Software programs are used to specify and modify the document color using RGB or CMYK color combinations. For more information, see the software program Help topics.

How does the printer know what color to print?

When printing a document, information describing the type and color of each object is sent to the printer and is passed through color conversion tables. Color is translated into the appropriate amounts of cyan, magenta, yellow, and black toner used to produce the color you want. The object information determines the application of color conversion tables. For example, it is possible to apply one type of color conversion table to text while applying a different color conversion table to photographic images.

What is manual color correction?

When manual color correction is enabled, the printer employs user-selected color conversion tables to process objects. Manual color correction settings are specific to the type of object being printed (text, graphics, or images). It is also specific to how the color of the object is specified in the software program (RGB or CMYK combinations). To apply a different color conversion table manually, see [Modifying the colors in printed output on page 275](#).

If the software program does not specify colors with RGB or CMYK combinations, then manual color correction is not useful. It is also not effective if the software program or the computer operating system controls the adjustment of colors. In most situations, setting the Color Correction to Auto generates preferred colors for the documents.

How can I match a particular color (such as a corporate logo)?

From the printer Quality menu, nine types of Color Samples sets are available. These sets are also available from the Color Samples page of the Embedded Web Server. Selecting any sample set generates multiple-page prints consisting of hundreds of colored boxes. Each box contains a CMYK or RGB combination, depending on the table selected. The observed color of each box is obtained by passing the CMYK or RGB combination labeled on the box through the selected color conversion table.

By examining Color Samples sets, you can identify the box with color closest to the color being matched. The color combination labeled on the box can then be used for modifying the color of the object in a software program. For more information, see the software program Help topics. Manual color correction may be necessary to use the selected color conversion table for the particular object.

Selecting which Color Samples set to use for a particular color-matching problem depends on:

- The Color Correction setting being used (Auto, Off, or Manual)
- The type of object being printed (text, graphics, or images)

- How the color of the object is specified in the software program (RGB or CMYK combinations)

If the software program does not specify colors with RGB or CMYK combinations, then the Color Samples pages are not useful. Additionally, some software programs adjust the RGB or CMYK combinations specified in the program through color management. In these situations, the printed color may not be an exact match of the Color Samples pages.

The print appears tinted

1. Perform the following tests:
 - a. From the home screen, touch **Settings > Print > Quality > Advanced Imaging > Color Adjust**.
 - b. Print the document.
 - a. From the home screen, touch **Settings > Print > Quality > Advanced Imaging > Color Adjust**.
 - b. Print the document.

Does the print appear tinted?

- **Yes:**
Go to the next step.
- **No:**
The problem is solved.

2. Perform the following tests:
 - a. From the home screen, touch **Settings > Print > Quality > Advanced Imaging > Color Balance**.
 - b. Adjust the settings.
 - c. Print the document.
 - a. From the home screen, touch **Settings > Print > Quality > Advanced Imaging > Color Balance**.
 - b. Adjust the settings.
 - c. Print the document.

Does the print appear tinted?

- **Yes:**
Contact [customer support](#).
- **No:**
The problem is solved.

Contacting customer support

To accurately diagnose your issue, our support agents must perform diagnostic troubleshooting with you during your call. Make sure you are near your device so you can follow the on-screen or spoken instructions.

If you are not near your device, you can call us back when you are ready.

Have the following information ready when you contact support:

Troubleshoot a problem

- Printer model and serial number
- A brief description of the issue
- Any error messages (if applicable)

Technical support via telephone is also available. In the U.S. or Canada, call **1-800-539-6257**. For other countries or regions, go to www.lexmark.com/supportdirectory.

Recycle and dispose

Recycling Lexmark products

1. Go to www.lexmark.com/recycle.
2. Select your country or region.
3. Select a recycling program.

Recycling Lexmark packaging

Lexmark continually strives to minimize packaging. Less packaging helps to ensure that Lexmark printers are transported in the most efficient and environmentally sensitive manner and that there is less packaging to dispose of. These efficiencies result in fewer greenhouse emissions, energy savings, and natural resource savings.

Lexmark also offers recycling of packaging components in some countries or regions. For more information, go to www.lexmark.com/recycle, and then choose your country or region. Information on available packaging recycling programs is included with the information on product recycling.

Lexmark cartons are 100% recyclable where corrugated recycling facilities exist. Facilities may not exist in your area.

The foam used in Lexmark packaging is recyclable where foam recycling facilities exist. Facilities may not exist in your area.

When you return a cartridge to Lexmark, you can reuse the box that the cartridge came in. Lexmark recycles the box.

Notices

Product information

Product name:

Lexmark CX331adwe; Lexmark CX431adw, Lexmark CX431dw; Lexmark MC3224adwe, Lexmark MC3224dwe, Lexmark MC3224i; Lexmark MC3326adwe, Lexmark MC3326i; Lexmark MC3426adw, Lexmark MC3426i, Lexmark XC2326 MFPs

Machine type:

3500

Models:

285, 485, 685, 876, 8c6, 8c9

Edition and legal notices

Edition notices

April 2026

The following paragraph does not apply to any country where such provisions are inconsistent with local law: LEXMARK INTERNATIONAL, INC., PROVIDES THIS PUBLICATION “AS IS” WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some states do not allow disclaimer of express or implied warranties in certain transactions; therefore, this statement may not apply to you.

This publication could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in later editions. Improvements or changes in the products or the programs described may be made at any time.

References in this publication to products, programs, or services do not imply that the manufacturer intends to make these available in all countries in which it operates. Any reference to a product, program, or service is not intended to state or imply that only that product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any existing intellectual property right may be used instead. Evaluation and verification of operation in conjunction with other products, programs, or services, except those expressly designated by the manufacturer, are the user's responsibility.

For Lexmark technical support, go to <https://support.lexmark.com>.

For information on Lexmark's privacy policy governing the use of this product, go to www.lexmark.com/privacy.

For information on supplies and downloads, go to www.lexmark.com.

All rights reserved.

GOVERNMENT END USERS

The Software and accompanying documentation are “commercial” as defined in FAR 2.101. For civilian agencies, consistent with FAR 12.212, commercial computer software or commercial computer software documentation are licensed to the U.S. Government under the vendor's standard commercial license(s) customarily provided to the public, and the Government shall have only those rights specified in such license(s), to the extent consistent with Federal law and otherwise meeting Government needs. For Department of Defense (DoD) agencies, consistent with DFARS 227.7202-1 and 227.7202-3, commercial computer software or commercial computer software documentation are licensed to DoD under the vendor's standard commercial license(s) customarily provided to

the public, and the Government shall have only the rights specified in such license(s), unless additional rights are expressly negotiated and expressly stated in the contract or an addendum.

Trademarks

Lexmark, the Lexmark logo, and MarkNet are trademarks or registered trademarks of Lexmark International, Inc. in the United States and/or other countries.

Gmail, Android, Google Play, and Google Chrome are trademarks of Google LLC.

Macintosh, macOS, Safari, and AirPrint are trademarks of Apple Inc., registered in the U.S. and other countries.

iCloud is a service mark of Apple Inc., registered in the U.S. and other countries. Use of the Works with Apple badge means that an accessory has been designed to work specifically with the technology identified in the badge and has been certified by the developer to meet Apple performance standards.

Microsoft, Microsoft 365, Microsoft Edge, Outlook, and Windows are trademarks of the Microsoft group of companies.

The Mopria™ word mark is a registered and/or unregistered trademark of Mopria Alliance, Inc. in the United States and other countries. Unauthorized use is strictly prohibited.

PCL® is a registered trademark of the Hewlett-Packard Company. PCL is Hewlett-Packard Company's designation of a set of printer commands (language) and functions included in its printer products. This printer is intended to be compatible with the PCL language. This means the printer recognizes PCL commands used in various application programs, and that the printer emulates the functions corresponding to the commands.

PostScript is a registered trademark of Adobe Systems Incorporated in the United States and/or other countries.

Wi-Fi®, Wi-Fi Direct®, and Wi-Fi Protected Access® are registered trademarks of Wi-Fi Alliance®. WPA™, WPA2™, and Wi-Fi Protected Setup™ are trademarks of Wi-Fi Alliance®.

All other trademarks are the property of their respective owners.

Licensing notices

All licensing notices associated with this product can be viewed from the CD:\NOTICES directory of the installation software CD.

STATEMENT OF LIMITED WARRANTY FOR LEXMARK LASER PRINTERS, LEXMARK LED PRINTERS, AND LEXMARK MULTIFUNCTION LASER PRINTERS

Lexmark International, Inc., Lexington, KY

This limited warranty applies to the United States and Canada. For customers outside the U.S., refer to the country-specific warranty information that came with your product.

This limited warranty applies to this product only if it was originally purchased for your use, and not for resale, from Lexmark or a Lexmark Remarketer, referred to in this statement as "Remarketer."

Limited warranty

Lexmark warrants that this product:

- Is manufactured from new parts, or new and serviceable used parts, which perform like new parts
- Is, during normal use, free from defects in material and workmanship

If this product does not function as warranted during the warranty period, contact a Remarketer or Lexmark for repair or replacement (at Lexmark's option).

If this product is a feature or option, this statement applies only when that feature or option is used with the product for which it was intended. To obtain warranty service, you may be required to present the feature or option with the product.

If you transfer this product to another user, warranty service under the terms of this statement is available to that user for the remainder of the warranty period. You should transfer proof of original purchase and this statement to that user.

Limited warranty service

The warranty period starts on the date of original purchase as shown on the purchase receipt and ends 12 months later provided that the warranty period for any supplies and for any maintenance items included with the printer shall end earlier if it, or its original contents, are substantially used up, depleted, or consumed. Fuser Units, Transfer/Transport Units, Paper Feed items, if any, and any other items for which a Maintenance Kit is available are substantially consumed when the printer displays a "Life Warning" or "Scheduled Maintenance" message for such item.

To obtain warranty service you may be required to present proof of original purchase. You may be required to deliver your product to the Remarketer or Lexmark, or ship it prepaid and suitably packaged to a Lexmark designated location. You are responsible for loss of, or damage to, a product in transit to the Remarketer or the Lexmark designated location.

When warranty service involves the exchange of a product or part, the item replaced becomes the property of the Remarketer or Lexmark. The replacement may be a new or repaired item.

The replacement item assumes the remaining warranty period of the original product.

Replacement is not available to you if the product you present for exchange is defaced, altered, in need of a repair not included in warranty service, damaged beyond repair, or if the product is not free of all legal obligations, restrictions, liens, and encumbrances.

As part of your warranty service and/or replacement, Lexmark may update the firmware in your printer to the latest version. Firmware updates may modify printer settings and cause counterfeit and/or unauthorized products, supplies, parts, materials (such as toners and inks), software, or interfaces to stop working. Authorized use of genuine Lexmark products will not be impacted.

Before you present this product for warranty service, remove all print cartridges, programs, data, and removable storage media (unless directed otherwise by Lexmark).

For further explanation of your warranty alternatives and the nearest Lexmark authorized servicer in your area contact Lexmark on the World Wide Web.

Remote technical support is provided for this product throughout its warranty period. For products no longer covered by a Lexmark warranty, technical support may not be available or only be available for a fee.

Extent of limited warranty

Lexmark does not warrant uninterrupted or error-free operation of any product or the durability or longevity of prints produced by any product.

Warranty service does not include repair of failures caused by:

—Modification or unauthorized attachments

—Accidents, misuse, abuse or use inconsistent with Lexmark user's guides, manuals, instructions or guidance

- Unsuitable physical or operating environment
- Maintenance by anyone other than Lexmark or a Lexmark authorized servicer
- Operation of a product beyond the limit of its duty cycle
- Use of printing media outside of Lexmark specifications
- Refurbishment, repair, refilling or remanufacture by a third party of products, supplies or parts
- Products, supplies, parts, materials (such as toners and inks), software, or interfaces not furnished by Lexmark

TO THE EXTENT PERMITTED BY APPLICABLE LAW, NEITHER LEXMARK NOR ITS THIRD PARTY SUPPLIERS OR REMARKETERS MAKE ANY OTHER WARRANTY OR CONDITION OF ANY KIND, WHETHER EXPRESS OR IMPLIED, WITH RESPECT TO THIS PRODUCT, AND SPECIFICALLY DISCLAIM THE IMPLIED WARRANTIES OR CONDITIONS OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, AND SATISFACTORY QUALITY. ANY WARRANTIES THAT MAY NOT BE DISCLAIMED UNDER APPLICABLE LAW ARE LIMITED IN DURATION TO THE WARRANTY PERIOD. NO WARRANTIES, EXPRESS OR IMPLIED, WILL APPLY AFTER THIS PERIOD. ALL INFORMATION, SPECIFICATIONS, PRICES, AND SERVICES ARE SUBJECT TO CHANGE AT ANY TIME WITHOUT NOTICE.

Limitation of liability

Your sole remedy under this limited warranty is set forth in this document. For any claim concerning performance or nonperformance of Lexmark or a Remarketer for this product under this limited warranty, you may recover actual damages up to the limit set forth in the following paragraph.

Lexmark's liability for actual damages from any cause whatsoever will be limited to the amount you paid for the product that caused the damages. This limitation of liability will not apply to claims by you for bodily injury or damage to real property or tangible personal property for which Lexmark is legally liable. **IN NO EVENT WILL LEXMARK BE LIABLE FOR ANY LOST PROFITS, LOST SAVINGS, INCIDENTAL DAMAGE, OR OTHER ECONOMIC OR CONSEQUENTIAL DAMAGES.** This is true even if you advise Lexmark or a Remarketer of the possibility of such damages. Lexmark is not liable for any claim by you based on a third party claim.

This limitation of remedies also applies to claims against any Suppliers and Remarketers of Lexmark. Lexmark's and its Suppliers' and Remarketers' limitations of remedies are not cumulative. Such Suppliers and Remarketers are intended beneficiaries of this limitation.

Additional rights

Some states do not allow limitations on how long an implied warranty lasts, or do not allow the exclusion or limitation of incidental or consequential damages, so the limitations or exclusions contained above may not apply to you.

This limited warranty gives you specific legal rights. You may also have other rights that vary from state to state.

Specifications

Laser notice

The printer is certified in the U.S. to conform to the requirements of DHHS 21 CFR, Chapter I, Subchapter J for Class I (1) laser products, and elsewhere is certified as a Class 1 consumer laser product conforming to the requirements of IEC 60825-1:2014, EN 60825-1:2014+A11:2021, and EN 50689:2021.

Notices

Class I laser products are not considered to be hazardous. The laser system and printer are designed so there is never any human access to laser radiation above a Class I level during normal operation, user maintenance, or prescribed service conditions. The printer has a non-serviceable printhead assembly that contains a laser with the following specifications:

Class: IIIb (3b) AlGaAs

Nominal output power (milliwatts): 8

Wavelength (nanometers): 770–800

Temperature information

Operating temperature and relative humidity (RH) ¹	10 to 32.2°C (50 to 90°F) and 15 to 80% RH 15.6 to 32.2°C (60 to 90°F) and 8 to 80% RH Maximum wet-bulb temperature ³ : 22.8°C (73°F) Non-condensing environment
Printer / cartridge / imaging unit long-term storage ²	15.6 to 32.2°C (60 to 90°F) and 8 to 80% RH Maximum wet-bulb temperature ³ : 22.8°C (73°F)
Printer / cartridge / imaging unit short-term shipping	-40 to 40°C (-40 to 104°F)

¹ In some cases, performance specifications (such as cartridge usage and first-page-out speed) must be measured at a standard office environment of approximately 22.2°C (72°F) and 45% RH.

² Supplies shelf life is approximately 2 years. This is based on storage in a standard office environment at 22°C (72°F) and 45% humidity.

³ Wet-bulb temperature is determined by the air temperature and the relative humidity.

Power requirements

The following nominal voltage ranges are supported in applicable countries or regions: 100–110 V / 50Hz, 110–127 V / 60Hz, and 220–240 V / 50Hz (not dual-voltage).

Product power consumption

The following table documents the power consumption characteristics of the product.

Note: Some modes may not apply to your product.

Mode	Description	Power consumption (Watts)
Printing	The product is generating hard-copy output from electronic inputs.	One-sided: 385 (MC3224); 395 (CX331, MC3326); 400 (CX431, MC3426, XC2326) Two-sided: 260 (MC3224); 275 (CX331, CX431, MC3326, MC3426, XC2326)

Mode	Description	Power consumption (Watts)
Copy	The product is generating hard-copy output from hard-copy original documents.	385 (CX331, MC3224, MC3326); 395 (CX431, MC3426, XC2326)
Scan	The product is scanning hard-copy documents.	22 (MC3224adwe, MC3224i); 24 (CX331, MC3324); 21 (CX431, MC3426, XC2326)
Ready	The product is waiting for a print job.	17 (CX331, MC3224, MC3326); 17.5 (CX431, MC3426, XC2326)
Sleep Mode	The product is in a high-level energy-saving mode.	1.1 (CX331, MC3224, MC3326); 1.3 (CX431, MC3426, XC2326)
Hibernate	The product is in a low-level energy-saving mode.	N/A
Off	The product is plugged into an electrical outlet, but the power switch is turned off.	0.1

The power consumption levels listed in the previous table represent time-averaged measurements. Instantaneous power draws may be substantially higher than the average. Values are subject to change. See www.lexmark.com for current values.

Sleep Mode

This product is designed with an energy-saving mode called **Sleep Mode**. The Sleep Mode saves energy by lowering power consumption during extended periods of inactivity. The Sleep Mode is automatically engaged after this product is not used for a specified period of time, called the **Sleep Mode Timeout**.

Factory default Sleep Mode Timeout for this product (in minutes):	15
---	----

By using the configuration menus, the Sleep Mode Timeout can be modified between 1 minute and 120 minutes, or between 1 minute and 114 minutes, depending on the printer model. If the printer speed is less than or equal to 30 pages per minute, then you can set the timeout only up to 60 minutes or 54 minutes, depending on the printer model. Setting the Sleep Mode Timeout to a low value reduces energy consumption, but may increase the response time of the product. Setting the Sleep Mode Timeout to a high value maintains a fast response, but uses more energy.

Some models support a **Deep Sleep Mode**, which further reduces power consumption after longer periods of inactivity.

Hibernate Mode

This product is designed with an ultra-low power operating mode called **Hibernate mode**. When operating in Hibernate Mode, all other systems and devices are powered down safely.

The Hibernate mode can be entered in any of the following methods:

- Using the Hibernate Timeout
- Using the Schedule Power modes

Factory default Hibernate Timeout for this product in all countries or regions	3 days
--	--------

The amount of time the printer waits after a job is printed before it enters Hibernate mode can be modified between one hour and one month.

Notes on EPEAT-registered imaging equipment products:

- Standby power level occurs in Hibernate or Off mode.
- The product shall automatically power down to a standby power level of ≤ 1 W. The auto standby function (Hibernate or Off) shall be enabled at product shipment.

Off mode

If this product has an off mode which still consumes a small amount of power, then to completely stop product power consumption, disconnect the power supply cord from the electrical outlet.

Total energy usage

It is sometimes helpful to estimate the total product energy usage. Since power consumption claims are provided in power units of Watts, the power consumption should be multiplied by the time the product spends in each mode in order to calculate energy usage. The total product energy usage is the sum of each mode's energy usage.

Environmental and sustainability notices

Noise emission levels

The following measurements were made in accordance with ISO 7779 and reported in conformance with ISO 9296.

Note: Some modes may not apply to your product.

1-meter average sound pressure, dBA

Printing	One-sided, mono: 49 (MC3224); 50 (CX331adwe, MC3326a); 51 (CX431, MC3426, XC2326)One-sided, color: 51 (CX331, MC3224, MC3326a); 52 (CX431, MC3426, XC2326)Two-sided, mono: 49 (CX331, MC3224, MC3326); 50 (CX431, MC3426, XC2326)Two-sided, color: 50 (MC3224); 51 (CX331, MC3326); 52 (CX431, MC3426, XC232)
Scanning	Mono: 46 (MC3224dwe); 50 (CX331, MC3224adwe, MC3224i, MC3326); 55 (CX431, MC3426, XC2326)Color: 40 (MC3224dwe); 44 (CX331, MC3224adwe, MC3224i, MC3326); 51 (CX431, MC3426, XC2326)
Copying	Mono: 50 (MC3224dwe); 53 (CX331, MC3224adwe, MC3224i, MC3326); 56 (CX431, MC3426a, XC2326)Color: 49 (MC3224); 50 (CX331adwe, MC3326); 54 (CX431, MC3426, XC2326)
Ready	14

Values are subject to change. See www.lexmark.com for current values.

Waste from Electrical and Electronic Equipment (WEEE) directive



The WEEE logo signifies specific recycling programs and procedures for electronic products in countries of the European Union. We encourage the recycling of our products.

If you have further questions about recycling options, visit the Lexmark website at www.lexmark.com for your local sales office phone number.

India E-Waste notice



This product including components, consumables, parts and spares complies with the “India E-Waste Rules” and prohibits use of lead, mercury, hexavalent chromium, polybrominated biphenyls or polybrominated diphenyl ethers in concentrations exceeding 0.1% by weight and 0.01% by weight for cadmium, except for the exemption set in the Rule.

Lithium-ion rechargeable battery



This product may contain a coin-cell, lithium-ion rechargeable battery, which should only be removed by a trained technician. Crossed-out wheeled bin means the product should not be discarded as unsorted waste but must be sent to separate collection facilities for recovery and recycling. In the event the battery is removed, do not dispose of the battery in your household waste. There may be separate collection systems for batteries in your local community, such as a battery-recycling drop-off location. The separate collection of waste batteries assures appropriate treatment of waste including reuse and recycling and prevents any potential negative effects on human health and environment. Please responsibly dispose of the batteries.

Regulation (EU) 2023/1542

This product may contain a coin-cell lithium rechargeable battery. This battery complies with Regulation (EU) 2023/1542. Compliance is indicated by the CE marking:



This product may contain one of the following coin-cell batteries:

- Battery identification: Seiko Model Number MS621FE
Manufacturer: Seiko Instruments Inc.
Manufacturer address: 8, Nakase 1-chome, Mihama-ku, Chiba-shi, Chiba 261-8507, Japan
- Battery identification: Panasonic Model Number ML621
Manufacturer: Panasonic Energy Co., Ltd.
Manufacturer address: 1-1 Matsushita-cho, Moriguchi City, Osaka 570-8511, Japan
- Battery identification: FDK Model Number ML621
Manufacturer: FDK Corporation
Manufacturer address: Shibaura Crystal Shinagawa, 1-6-41 Konan, Minato-ku, Tokyo 108-8212 Japan

Environmental labeling for packaging

Per Commission Regulation Decision 97/129/EC Legislative Decree 152/2006, the product packaging may contain one or more of the following symbols.

	This symbol indicates that the packaging may contain corrugated fiberboard.
	This symbol indicates that the packaging may contain non-corrugated fiberboard.
	This symbol indicates that the packaging may contain paper.

For more information, go to www.lexmark.com/recycle, and then choose your country or region. Information on available packaging recycling programs is included with the information on product recycling.

Product disposal

Do not dispose of the printer or supplies in the same manner as normal household waste. Consult your local authorities for disposal and recycling options.

Returning Lexmark cartridges for reuse or recycling

The Lexmark Cartridge Collection Program allows you to return used cartridges for free to Lexmark for reuse or recycling. One hundred percent of the empty cartridges returned to Lexmark are either reused or demanufactured for recycling. The boxes used to return the cartridges are also recycled.

To return Lexmark cartridges for reuse or recycling, do the following:

1. Go to www.lexmark.com/recycle.
2. Select your country or region.
3. Select **Lexmark Cartridge Collection Program**.
4. Follow the instructions on the screen.

ENERGY STAR®

Any Lexmark product bearing the ENERGY STAR emblem on the product or on a start-up screen is certified to comply with Environmental Protection Agency (EPA) ENERGY STAR requirements as of the date of manufacture.



Notices for fax products

Regulatory notices for telecommunication terminal equipment

This section contains regulatory information pertaining to products that contain the analog facsimile card:

Lexmark Regulatory Type/Model Number:

LEX-M14-002 or LEX-M03-002

Notice to users of the US telephone network: FCC requirements

This equipment complies with Part 68 of the FCC rules and the requirements adopted by the Administrative Council for Terminal Attachments (ACTA). On the back of this equipment is a label that contains, among other information, a product identifier in the format US:AAAEQ##TXXXX. If requested, this number must be provided to your telephone company.

This equipment uses the RJ-11C Universal Service Order Code (USOC) jack.

A plug and jack used to connect this equipment to the premises' wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA. Use a compliant telephone cord (RJ-11) that is 26 AWG or larger when connecting this product to the public switched telephone network. See your setup documentation for more information.

The Ringer Equivalence Number (REN) is used to determine the number of devices that may be connected to a telephone line. Excessive RENs on a telephone line may result in the devices not ringing in response to an incoming call. In most but not all areas, the sum of RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to a line, as determined by the total RENs, contact your local telephone company. For products approved after July 23, 2001, the REN for this product is part of the product identifier that has the format US:AAAEQ##TXXXX. The digits represented by ## are the REN without a decimal point (for example, 03 is a REN of 0.3). For earlier products, the REN is shown separately on the label.

If this equipment causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. If advance notice is not practical, the telephone company will notify the customer as soon as possible. You will also be advised of your right to file a complaint with the FCC.

The telephone company may make changes in its facilities, equipment, operations or procedures that could affect the operation of this equipment. If this happens, the telephone company will provide advance notice in order for you to make necessary modifications to maintain uninterrupted service.

If you experience trouble with this equipment, for repair or warranty information, contact Lexmark International, Inc. at www.lexmark.com or your Lexmark representative. If the equipment is causing harm to the telephone network, the telephone company may request that you disconnect the equipment until the problem is resolved. This equipment contains no user serviceable parts. For repair and warranty information, contact Lexmark International, Inc. See the previous paragraph for contact information.

Connection to party line service is subject to state tariffs. Contact the state public utility commission, public service commission, or corporation commission for information.

If your home has specially wired alarm equipment connected to the telephone line, ensure the installation of this equipment does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.

The Telephone Consumer Protection Act of 1991 makes it unlawful for any person to use a computer or other electronic device, including fax machines, to send any message unless said message clearly contains in a margin at the top or bottom of each transmitted page or on the first page of the transmission, the date and time it is sent and an identification of the business or other entity, or other individual sending the message, and the telephone number of the sending machine or such business, other entity, or individual. (The telephone number provided may not be a 900 number or any other number for which charges exceed local or long-distance transmission charges.)

See your user documentation in order to program this information into your fax machine.

Notice to users of the Canadian telephone network

This product meets the applicable Innovation, Science and Economic Development Canada technical specifications.

The Ringer Equivalence Number (REN) indicates the maximum number of devices allowed to be connected to a telephone interface. The termination of an interface may consist of any combination of devices subject only to the requirement that the sum of the RENs of all the devices not exceed five. The REN is located on the product label. This equipment uses CA11A telephone jacks.

Avis réservé aux utilisateurs du réseau téléphonique du Canada

Ce produit est conforme aux spécifications techniques d'Innovation, Sciences et Développement économique Canada.

Le numéro REN (ringer equivalence number : numéro d'équivalence de sonnerie) indique le nombre maximum d'appareils pouvant être connectés à l'interface téléphonique. En bout de ligne, le nombre d'appareils qui peuvent être connectés n'est pas directement limité, mais la somme des REN de ces appareils ne doit pas dépasser cinq. Le numéro REN est indiqué sur l'étiquette produit.

Cet équipement utilise des prises de téléphone CA11A.

Notice to users of the New Zealand telephone network

The following are special conditions for the Facsimile User Instructions. The grant of a telepermit for any item of terminal equipment indicates only that Spark has accepted that the item complies with minimum conditions for connection to its network. It indicates no endorsement of the product by Spark, nor does it provide any sort of warranty. Above all, it provides no assurance that any item will work correctly in all respects with another item of telepermitted equipment of a different make or model, nor does it imply that any product is compatible with all of Spark's network services.

This equipment shall not be set up to make automatic calls to the Spark "111" Emergency Service.

This equipment may not provide for the effective hand-over of a call to another device connected to the same line.

This equipment should not be used under any circumstances that may constitute a nuisance to other Spark customers.

This equipment is not capable, under all operating conditions, of correct operation at the higher speeds for which it is designed. Spark will accept no responsibility should difficulties arise in such circumstances.

The decadic (or pulse) dialing on this device is unsuitable for use on the Spark network in New Zealand.

For correct operation, the total of all the Ringer Equivalence Numbers (RENs) of all parallel devices connected to the same telephone line may not exceed 5. The REN of this device is located on the label.

This device uses an RJ-11C modular connector. Contact your point of purchase if a BT adapter is required. The Lexmark part number is 80D1873.

Some parameters required for compliance with Spark's telepermit requirements are dependent on the equipment associated with this device. The associated equipment shall be set to operate within the following limits for compliance to Spark's specifications:

- There shall be no more than 10 call attempts to the same number within any 30 minute period for any single manual call initiation, and
- The equipment shall go on-hook for a period of not less than 30 seconds between the end of one attempt and the beginning of the next call attempt.
- The equipment shall be set to ensure that automatic calls to different numbers are spaced such that there is not less than 5 seconds between the end of one call attempt and the beginning of another.

Japanese telecom notice

The installed optional modem is in compliance with Japanese Telecommunication Law and has been Certified by JATE, with the following Certification Number:

A18-0046001 or A11-0160001JP

	Lexmark International, Inc.
	LEX-M14-002 or LEX-M03-002
	A18-0046001 or A11-0160001JP

Using this product in Switzerland

This product requires a Swiss billing tone filter (Lexmark part number 80D1877) to be installed on any line which receives metering pulses in Switzerland.

Utilisation de ce produit en Suisse

Cet appareil nécessite l'utilisation d'un filtre de tonalité de facturation suisse (n° de référence Lexmark : 80D1877) devant être installé sur toute ligne recevant des impulsions de comptage en Suisse.

Verwendung dieses Produkts in der Schweiz

Für dieses Produkt muss ein schweizerischer Billing Tone Filter zur Zählzeichenübertragung (Lexmark Teilenummer 80D1877) für jede Leitung installiert werden, über die in der Schweiz Zeitsteuertakte übertragen werden.

Uso del prodotto in Svizzera

Questo prodotto richiede un filtro toni Billing svizzero, (codice Lexmark 80D1877) da installare su tutte le linee che ricevono impulsi remoti in Svizzera.

Notices for wireless products

Regulatory notices for wireless products

This section contains regulatory information that applies only to wireless models.

If in doubt as to whether your model is a wireless model, then see the "Wireless support" section or go to <http://support.lexmark.com>.

Modular component notice

Wireless models contain one of the following modular components:

AzureWave Technologies, Inc. Regulatory Type/Model Number AW-CM267NF; FCC ID:TLZ-CM267NF; IC:6100A-CM267NFLexmark Regulatory Type/Model Number LEX-M08-001; FCC ID:IYLLLEXM08001; IC:2376A-LEXM08001

To determine which modular components are installed in your particular product, refer to the labeling on your actual product.

Exposure to radio frequency radiation

The radiated output power of this device is far below the radio frequency exposure limits of the FCC and other regulatory agencies. A minimum separation of 20 cm (8 inches) must be maintained between the antenna and any persons for this device to satisfy the RF exposure requirements of the FCC and other regulatory agencies.

Innovation, Science and Economic Development Canada

This device complies with Innovation, Science and Economic Development Canada license-exempt RSS standards. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Innovation, Sciences et Développement économique Canada

Cet appareil est conforme aux normes RSS exemptes de licence d'Innovation, Sciences et Développement économique Canada. Son fonctionnement est soumis aux deux conditions suivantes : (1) cet appareil ne doit pas causer d'interférences et (2) il doit accepter toutes les interférences, y compris les celles qui peuvent entraîner un fonctionnement indésirable.

Singapore IMDA statement

This product is approved for use in Singapore.



European Community (EC) directives conformity

This product is in conformity with the protection requirements of EC Council directive 2014/53/EU on the approximation and harmonization of the laws of the Member States relating to radio equipment.

The manufacturer of this product is: Lexmark International, Inc., 740 West New Circle Road, Lexington, KY, 40550 USA. The EEA/EU authorized representative is: Lexmark International Technology Hungária Kft., 8 Lechner Ödön fasor, Millennium Tower III, 1095 Budapest HUNGARY. Email: EU-Product-Safety@lexmark.com. The EEA/EU Importer is: Lexmark International Technology S.à.r.l. 20, Route de Pré-Bois, ICC Building, Bloc A, CH-1215 Genève, Switzerland. A declaration of conformity to the requirements of the Directives is available upon request from the Authorized Representative or may be obtained at www.lexmark.com/en_us/about/regulatory-compliance/european-union-declaration-of-conformity.html.

Compliance is indicated by the CE marking:



Restrictions

This radio equipment is restricted to indoor use only. Outdoor use is prohibited. This restriction applies to all the countries listed in the table below:

AT	BE	BG	CH	CY	CZ	DE	DK	EE

EL	ES	FI	FR	HR	HU	IE	IS	IT
LI	LT	LU	LV	MT	NL	NO	PL	PT
RO	SE	SI	SK	TR	UK (NI)			

EU and other countries statement of radio transmitter operational frequency bands and maximum RF power

This radio product transmits in either the 2.4GHz (2.412–2.472GHz in the EU) or 5GHz (5.15–5.35, 5.47–5.725GHz in the EU) bands. The maximum transmitter EIRP power output, including antenna gain, is ≤ 20dBm for both bands.

United Kingdom (UK) conformity

This product is in conformity with the protection requirements of the Radio Equipment Regulations 2017. The manufacturer of this product is: Lexmark International, Inc., 740 West New Circle Road, Lexington, KY, 40550 USA. The UK Importer is: Lexmark International Ltd, Building Q1 Quantum Business Park, 60 Norden Road, Maidenhead, Berkshire, United Kingdom SL6 4AY. A declaration of conformity is available upon request from the UK Importer or may be obtained at www.lexmark.com/en_us/about/regulatory-compliance/uk-declaration-of-conformity.html.

Compliance is indicated by the UKCA marking:



Restrictions or requirements in the UK

This radio equipment is restricted to indoor use only. Outdoor use is prohibited.

UK statement of radio transmitter operational frequency bands and maximum RF power

This radio product transmits in either the 2.4GHz (2.412–2.472 GHz in the UK) or 5GHz (5.15–5.35, 5.47–5.725 in the UK) bands. The maximum transmitter EIRP power output, including antenna gain, is ≤ 20dBm for both bands.

Notice to users in Thailand

ประกาศถึงผู้ใช้ในประเทศไทย

This radiocommunication equipment has the electromagnetic field strength in compliance with the Safety Standard for the Use of Radiocommunication Equipment on Human Health announced by the National Telecommunications Commission.

เครื่องวิทยุคมนาคมนี้มีระดับการแผ่คลื่นแม่เหล็กไฟฟ้าสอดคล้องตามมาตรฐาน ความปลอดภัยต่อสุขภาพของมนุษย์จากการใช้เครื่องวิทยุคมนาคมที่คณะกรรมการกิจการโทรคมนาคมแห่งชาติประกาศกำหนด



เครื่องวิทยุคมนาคมนี้ ได้รับยกเว้น ไม่ต้องได้
รับใบอนุญาตให้มี ใช้ซึ่งเครื่องวิทยุคมนาคม
หรือตั้งสถานีวิทยุคมนาคมตามประกาศ กสทช.
เรื่อง เครื่องวิทยุคมนาคม และสถานีวิทยุ
คมนาคมที่ได้รับยกเว้นไม่ต้องได้รับใบอนุญาต
วิทยุคมนาคมตามพระราชบัญญัติวิทยุคมนาคม
พ.ศ. 2498



กสทช. | โทรคมนาคม

กำกับดูแลเพื่อประชาชน

Call Center 1200 (InsWR)

Class B device notices

Federal Communications Commission (FCC) compliance information statement

This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The FCC Class B limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult your point of purchase or service representative for additional suggestions.

The manufacturer is not responsible for radio or television interference caused by using other than recommended cables or by unauthorized changes or modifications to this equipment. Unauthorized changes or modifications could void the user's authority to operate this equipment.

Notes

To assure compliance with FCC regulations on electromagnetic interference for a Class B computing device, use a properly shielded and grounded cable such as Lexmark part number 1021231 for parallel attach or 1021294 for USB attach. Use of a substitute cable not properly shielded and grounded may result in a violation of FCC regulations.

Any questions regarding this compliance information statement should be directed to:
Director of Lexmark Technology & Services

Lexmark International, Inc.

740 West New Circle Road

Lexington, KY 40550

Telephone: (859) 232-2000

Email: regulatory@lexmark.com

Innovation, Science and Economic Development Canada compliance statement

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Standard ICES-003.

Avis de conformité aux normes de l'Innovation, Sciences et Développement économique Canada

Cet appareil numérique de classe B est conforme aux exigences de la norme canadienne relative aux équipements pouvant causer des interférences NMB-003.

European Community (EC) directives conformity

This product is in conformity with the protection requirements of EC Council directives 2014/30/EU, 2014/35/EU, 2009/125/EC, and 2011/65/EU as amended by (EU) 2015/863 on the approximation and harmonization of the laws of the Member States relating to electromagnetic compatibility, safety of electrical equipment designed for use within certain voltage limits, the ecodesign of energy-related products, and on the restrictions of use of certain hazardous substances in electrical and electronic equipment.

The manufacturer of this product is: Lexmark International, Inc., 740 West New Circle Road, Lexington, KY, 40550 USA. The EEA/EU authorized representative is: Lexmark International Technology Hungária Kft., 8 Lechner Ödön fasor, Millennium Tower III, 1095 Budapest HUNGARY. Email: EU-Product-Safety@lexmark.com. The EEA/EU Importer is: Lexmark International Technology S.à.r.l. 20, Route de Pré-Bois, ICC Building, Bloc A, CH-1215 Genève, Switzerland. A declaration of conformity to the requirements of the Directives is available upon request from the Authorized Representative or may be obtained at www.lexmark.com/en_us/about/regulatory-compliance/european-union-declaration-of-conformity.html. This product satisfies the Class B limits of EN 55032 and safety requirements of EN 62368-1.

United Kingdom (UK) conformity

This product is in conformity with the protection requirements of the Electromagnetic Compatibility Regulations 2016, the Electrical Equipment (Safety) Regulations 2016, the Ecodesign for Energy-Related Products and Energy Information (Amendment) (EU Exit) Regulations 2019, and the Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012.

The manufacturer of this product is: Lexmark International, Inc., 740 West New Circle Road, Lexington, KY, 40550 USA. The UK Importer is: Lexmark International Ltd, Building Q1 Quantum Business Park, 60 Norden Road, Maidenhead, Berkshire, United Kingdom SL6 4AY. A declaration of conformity is available upon request from the UK Importer or may be obtained at www.lexmark.com/en_us/about/regulatory-compliance/uk-declaration-of-conformity.html.

This product satisfies the Class B limits of BS EN 55032 and safety requirements of BS EN 62368-1.

Commission Regulation (EU) 2023/826

As part of this regulation, manufacturers are required to post information about the Off modes and Network Standby ("sleep") modes of products, including the available network connections, the power consumption in sleep mode for each connection and the default timeout to sleep mode.

To view Lexmark's declarations of product sleep modes, go to https://www.lexmark.com/en_us/legal/regulatory-compliance/EU_2023_826.html.

Other regulatory notices

Static sensitivity notice



This symbol identifies static-sensitive parts. Do not touch the areas near these symbols without first touching a metal surface in an area away from the symbol.

To prevent damage from electrostatic discharge when performing maintenance tasks such as clearing paper jams or replacing supplies, touch any exposed metal frame of the printer before accessing or touching interior areas of the printer even if the symbol is not present.

Applicability of Regulation (EU) 2019/2015 and (EU) 2019/2020

Per Commission Regulation (EU) 2019/2015 and (EU) 2019/2020, the light source contained within this product or its component is intended to be used for Image Capture or Image Projection only, and is not intended for use in other applications.

The UK Product Security and Telecommunications Infrastructure Act 2022 (PSTI Act)—Summary Statement of Compliance

Lexmark International Inc., 740 West New Circle Road, Lexington, KY 40550 USA, declares that this product complies with the applicable security requirements in Schedule 1 of The Product Security and Telecommunications Infrastructure (Security Requirements for Relevant Connectable Products) Regulations 2023. The defined support period for this product can be found at the following web page: <https://www.lexmark.com/firmware-eos>.

A copy of the Statement of Compliance is available for download at the following web page: https://www.lexmark.com/en_us/about/regulatory-compliance/all-regulatory-docs.html.

The Australia Security Standard for Consumer Grade Relevant Products—Summary Statement of Compliance

Lexmark International Inc., 740 West New Circle Road, Lexington, KY 40550 USA, declares that this product complies with the applicable security requirements of Part 1 of Schedule 1 of the Cyber Security (Security Standards for Smart Devices) Rules 2025. The defined support period for this product can be found at the following web page: <https://www.lexmark.com/firmware-eos>.

A copy of the Statement of Compliance is available for download at the following web page: https://www.lexmark.com/en_us/about/regulatory-compliance/all-regulatory-docs.html.

Thailand NBTC technical standards conformity statement

คำประกาศเรื่องการเป็นไปตามมาตรฐานทางเทคนิคของ กสทช. ประเทศไทย

This telecommunication equipment conforms to the technical standards or requirements of NBTC.

เครื่องโทรคมนาคมและอุปกรณ์นี้มีความสอดคล้องตามมาตรฐานหรือข้อกำหนดทางเทคนิคของ กสทช.

User's Guide